

FH08-24, FH08-36

Fence Hog®

Owner's Manual

Serial Number _____



Before using this **Fence Hog®**, study entire Owner's Manuals.



WARNINGS

1. The **Fence Hog®** is a fence-dispensing device. Used outside of this scope may cause damage to equipment or could result in injury, or death.



2. Make sure anyone operating the **Fence Hog®** is thoroughly trained with its operation. Keep all unauthorized and untrained personnel, especially children, away from the **Fence Hog®**.

3. Consult lift equipment manufacturer's specifications to insure load capacity is not exceeded.

Model	Empty Weight	With 4ft. Extension
FH08-24	1150lbs. (522.1 kg)	1500lbs. (681 kg)
FH08-36	1350 lbs. (612.9 kg)	1775lbs. (805 kg)

Do not exceed Maximum Gross Weight

4. Always make sure **Fence Hog®** is securely fastened to skid steer.



5. Stay clear of gate opening while machine is running. Keep all body parts, solid objects, clothing, and jewelry away from all moving parts.

6. Never perform any work on the **Fence Hog®** while it is running. Before working on the **Fence Hog®**, stop skid steer and disconnect the hydraulic hose to prevent accidental starting.



7. Avoid contact with hot hydraulic fluid. Allow system to cool before performing any repairs or service, such as adding fuel or oil.

8. Never stand under an elevated **Fence Hog®**.

9. Never ride the **Fence Hog®**.

10. Never operate the **Fence Hog®** under the influence of alcohol, drugs, or medications.

11. Use only factory authorized parts.

12. Inspect All hoses and components for cracks, leaks, abrasions, and general wear before each use. Replace if damaged before using.



13. Always wear approved safety glasses and hard hats when operating or servicing a **Fence Hog®**.

14. Do not use the **Fence Hog®** as a lifting device and do not load more than one roll of fence fabric or wire in the **Fence Hog®** at a time.

Maintenance

Grease fittings located on the **Fence Hog®** and Extension. See drawing for location of fittings. All grease fittings should be greased before each use with EPI rated or equivalent grease.

Obtaining Spare Parts

Spare parts for your **Fence Hog®** may be obtained by the following procedure.

- 1 Record the Model number and Serial Number from the Serial Number Tag located on the left rear of the **Fence Hog®**.
- 2 Using the parts reference table in this manual, record part number, serial number, and component.
- 3 Contact your local **Fence Hog®** dealer or **EZ Grout Corporation** at 1-800-417-9272 with the serial number, part number, and component.



Warning Decals - for your safety and the safety of others, replace any damaged or missing warning decals by contacting the manufacturer at 1-800-417-9272



Fence Hog®
EZ Grout Corporation
1-800-417-9272

EZ Grout Corporation

405 Watertown Rd.

Waterford, OH 45786

(740) 749-3512 or 1-800-417-9272

Fax (740) 749-0602

www.thefencehog.com

Operating Instructions

Loading Wire

- 1 Attach the **Fence Hog®** to your skid steer. Consult skid steer owner's manual for attachment procedure.
- 2 Connect hydraulic hoses to skid steer auxiliary hydraulic couplers.
- 3 Using the auxiliary hydraulics, cycle all hydraulic motions to verify the **Fence Hog®** is operating correctly. Verify that the cage opens and closes completely and moves smoothly throughout its travel of operation.

Note: *If Skidsteer is equipped with variable flow hydraulics, operate on Max. Flow.*

- 4 Open the **Fence Hog®** to its widest point and position your skid steer so that a roll of wire is directly in front of it.
- 5 Then lift the boom and tilt the **Fence Hog®** down.
- 6 Move the skid steer forward until the turntable of the **Fence Hog®** aligns with the bottom of the roll of fence.
- 7 Lower the **Fence Hog®** over the roll of wire and begin closing the gates. Once the gates are mostly closed, lift the boom and tilt the **Fence Hog®** up.
- 8 The roll of wire will fall back into the cage of the **Fence Hog®**. Close the **Fence Hog®** tightly.

Note: For Woven Wire - *Install Roll Centering Rod through the center of roll and into turntable to hold roll upright by removing the Roll Centering Rod from the square tube on the back of the **Fence Hog®** and sliding it through the center of wire roll and into the hole in the turntable. Then, install Centering Rod support over Centering Rod.*

Installing Fence

- 1 After loading a roll of wire, move the skid steer parallel to the row of fence posts and attach the beginning of the roll to the first fence post.
- 2 Slowly drive the skid steer along the fence line and the roll will start to unwind. Continue to desired point.
- 3 At the stretch point, install a tension bar (supplied by customer) into the fabric at the point of discharge.

Optional Chain Link Stretcher: *At stretching point, pull Handle and rotate Stretching Bar until fingers point outward. Insert fingers through the fabric. Skip to Step 5.*


Optional Woven Wire Stretcher: *Install optional woven wire stretcher to the gate ends. Using the holes provided, drive the wedges into stretcher to hold wire and stretch to desired tension.*

- 4 Remove stretching pins from holder and insert through holes at the end of the gates and in front of the tension bar.
- 5 Maneuver the skid steer so the fabric is aligned with the fence line. Hold close pressure on gate and stretch to desired tension.
- 6 Attach fabric to post once desired tension is reached.
- 7 Relieve pressure on fabric and return pins to holder.
- 8 Repeat steps 1 through 7 as needed.


Parts

Item #	Part #	Description	QTY	QTY on Extension
1	02-700	Hydraulic Cylinders	2	2
2		Cylinder Pins	4	4
3		Cotter Pins	8	8
4	FH-A-6	Supply Hydraulic Hose	2	4
5	02-611	Hydraulic Relief Valve	1	N/A
6	FH24-A-14	24" Turntable	1	N/A
	FH36-A-14	36" Turntable	1	N/A
7	15-109	Support Roller	3	N/A
8		Roller Bolt Assembly	3	N/A
9		Turntable Keeper Bolt	1	N/A
10	09-601	Grease Fittings	7	4
11		Extension Bolt Ass.	N/A	8
12	09-409	Snap Pin	2	N/A
13	FH24-A-3	24" Roll Centering Rod Support	1	N/A
	FH36-A-3	36" Roll Centering Rod Support	1	N/A
14	FH-A-2	Roll Centering Rod (Woven Wire Only)	1	N/A
15	09-403	Stretching Pin	4	N/A
16	FH24-A-7	24" Upper Drive Forward Arm Pocket	1	N/A
	FH36-A-7	36" Upper Drive Forward Arm Pocket	1	N/A
17	FH-A-4	Drive Forward Outrigger	1	N/A
19	FH24-A-11	24" Turntable Break Assembly	1	N/A
	FH36-A-11	36" Turntable Break Assembly	1	N/A
20	FH-538	Drive FWD Arm (No Ext) (FH75+, 99" Gate)	1	N/A
	FH-539	Drive FWD Arm (No Ext) (FH74-, 96" Gate)	1	N/A
20A	FH-A-5	Drive FWD Arm for 2 ft. Ext. (Requires Item 20)	N/A	1
20B	FH-A-8	Drive FWD Arm for 4 ft. Ext. (Requires Item 20)	N/A	1
22	09-404	3/4" x 4 1/4" Hitch Pin	2	N/A
23	FHH-34	Field Fence Shoe	1	N/A
24	FH-A-9	Skidsteer Attachment Plate	1	N/A
	FH-A-3	Dandy Digger Attachment Plate	1	N/A
25	FHS99	Chain Link Fence Stretcher Assy (FH75+)	1	N/A
	FHS96	Chain Link Fence Stretcher Assy (FH74-)	1	N/A
25A	FHS-A-4	Chain Link Stretcher for 2 ft. Ext. (Req. Item 25)	N/A	1
25B	FHS-A-5	Chain Link Stretcher for 4 ft. Ext. (Req. Item 25)	N/A	1
26	FH24-A-10	24" Right Cylinder Hydraulic Hose	2	N/A
	FH36-A-10	36" Right Cylinder Hydraulic Hose	2	N/A
27	FH24-A-9	24" Left Cylinder Hydraulic Hose	2	N/A
	FH36-A-9	36" Left Cylinder Hydraulic Hose	2	N/A
28	EXT-A-10	24" Left Ext. Cylinder Hydraulic Hose	N/A	2
	EXT-A-12	36" Left Ext. Cylinder Hydraulic Hose	N/A	2
29	EXT-A-9	24" Right Ext. Cylinder Hydraulic Hose	N/A	2
	EXT-A-11	36" Right Ext. Cylinder Hydraulic Hose	N/A	2
30	EXT-A-13	Ext. Pigtail	N/A	4
31	02-221	Female Hydraulic Coupler	1	N/A
32	02-222	Male Hydraulic Coupler	1	N/A
33	02-218	Female Hydraulic Coupler	N/A	4
34	02-219	Male Hydraulic Coupler	N/A	4
35	FHS-7	Backing Plate	1	N/A
36	FHS-6	Handle Mounting Plate	1	N/A
37	FHS-8	Handle	1	N/A
38	09-361	3/8" Shoulder Bolt	2	N/A
39	09-803	Control Cable Clevis	1	N/A
40	09-802	Control Cable	1	N/A
41	09-800	Return Spring	1	N/A
42	FHS-10	Lower cable Mount Guard	1	N/A
43	FHS-A-3	Lower Mount	1	N/A
44	09-400	1/4" lynch Pin	2	N/A
45	FHS-11	Latch Pin	1	N/A
46	09-417	1/4" x 1" Roll Pin	1	N/A
47	09-801	Latch Spring	1	N/A
48	FHS-A-1	99" Stretcher Bar Assy. (FH75+)	1	N/A
	FHS-A-6	96" Stretcher Bar Assy. (FH74-)	1	N/A
49	FHS-A-2	Upper Mount	1	N/A
50	TA-16	Stiffening Angles	2	N/A
51	TA-A-1	Upper Tilt Cylinder Mount	1	N/A
52	TA-7	Upper Mount Backing Plate	1	N/A
53	09-331	3/4" x 5" GR8 Bolt	2	N/A
54	02-704	Tilt Cylinder	1	N/A
55	02-606	Hydraulic Selector Valve (Replaces Item 5)	1	N/A
	02-604	Electric Selector Valve (Replaces Item 5)	1	N/A
56	TA-A-7	Selector Valve to Holding Valve Hydraulic Hose	1	N/A
57	TA-A-6	Holding Valve to Tilt Cylinder Hydraulic Hose	2	N/A
58	TA-A-8	Selector Valve to Holding Valve Hydraulic Hose	1	N/A
59	02-612	Holding Valve	1	N/A
60	02-607	Tilt Control Valve	1	N/A
61	02-305	Tilt Control Hydraulic Hose	4	N/A
62	FHSB4	Woven Wire 4 ft. Stretching Bar	1	N/A
63	FH-35	Woven Wire Stretching Bar Wedge	5	N/A


Optional 4 ft. Extension

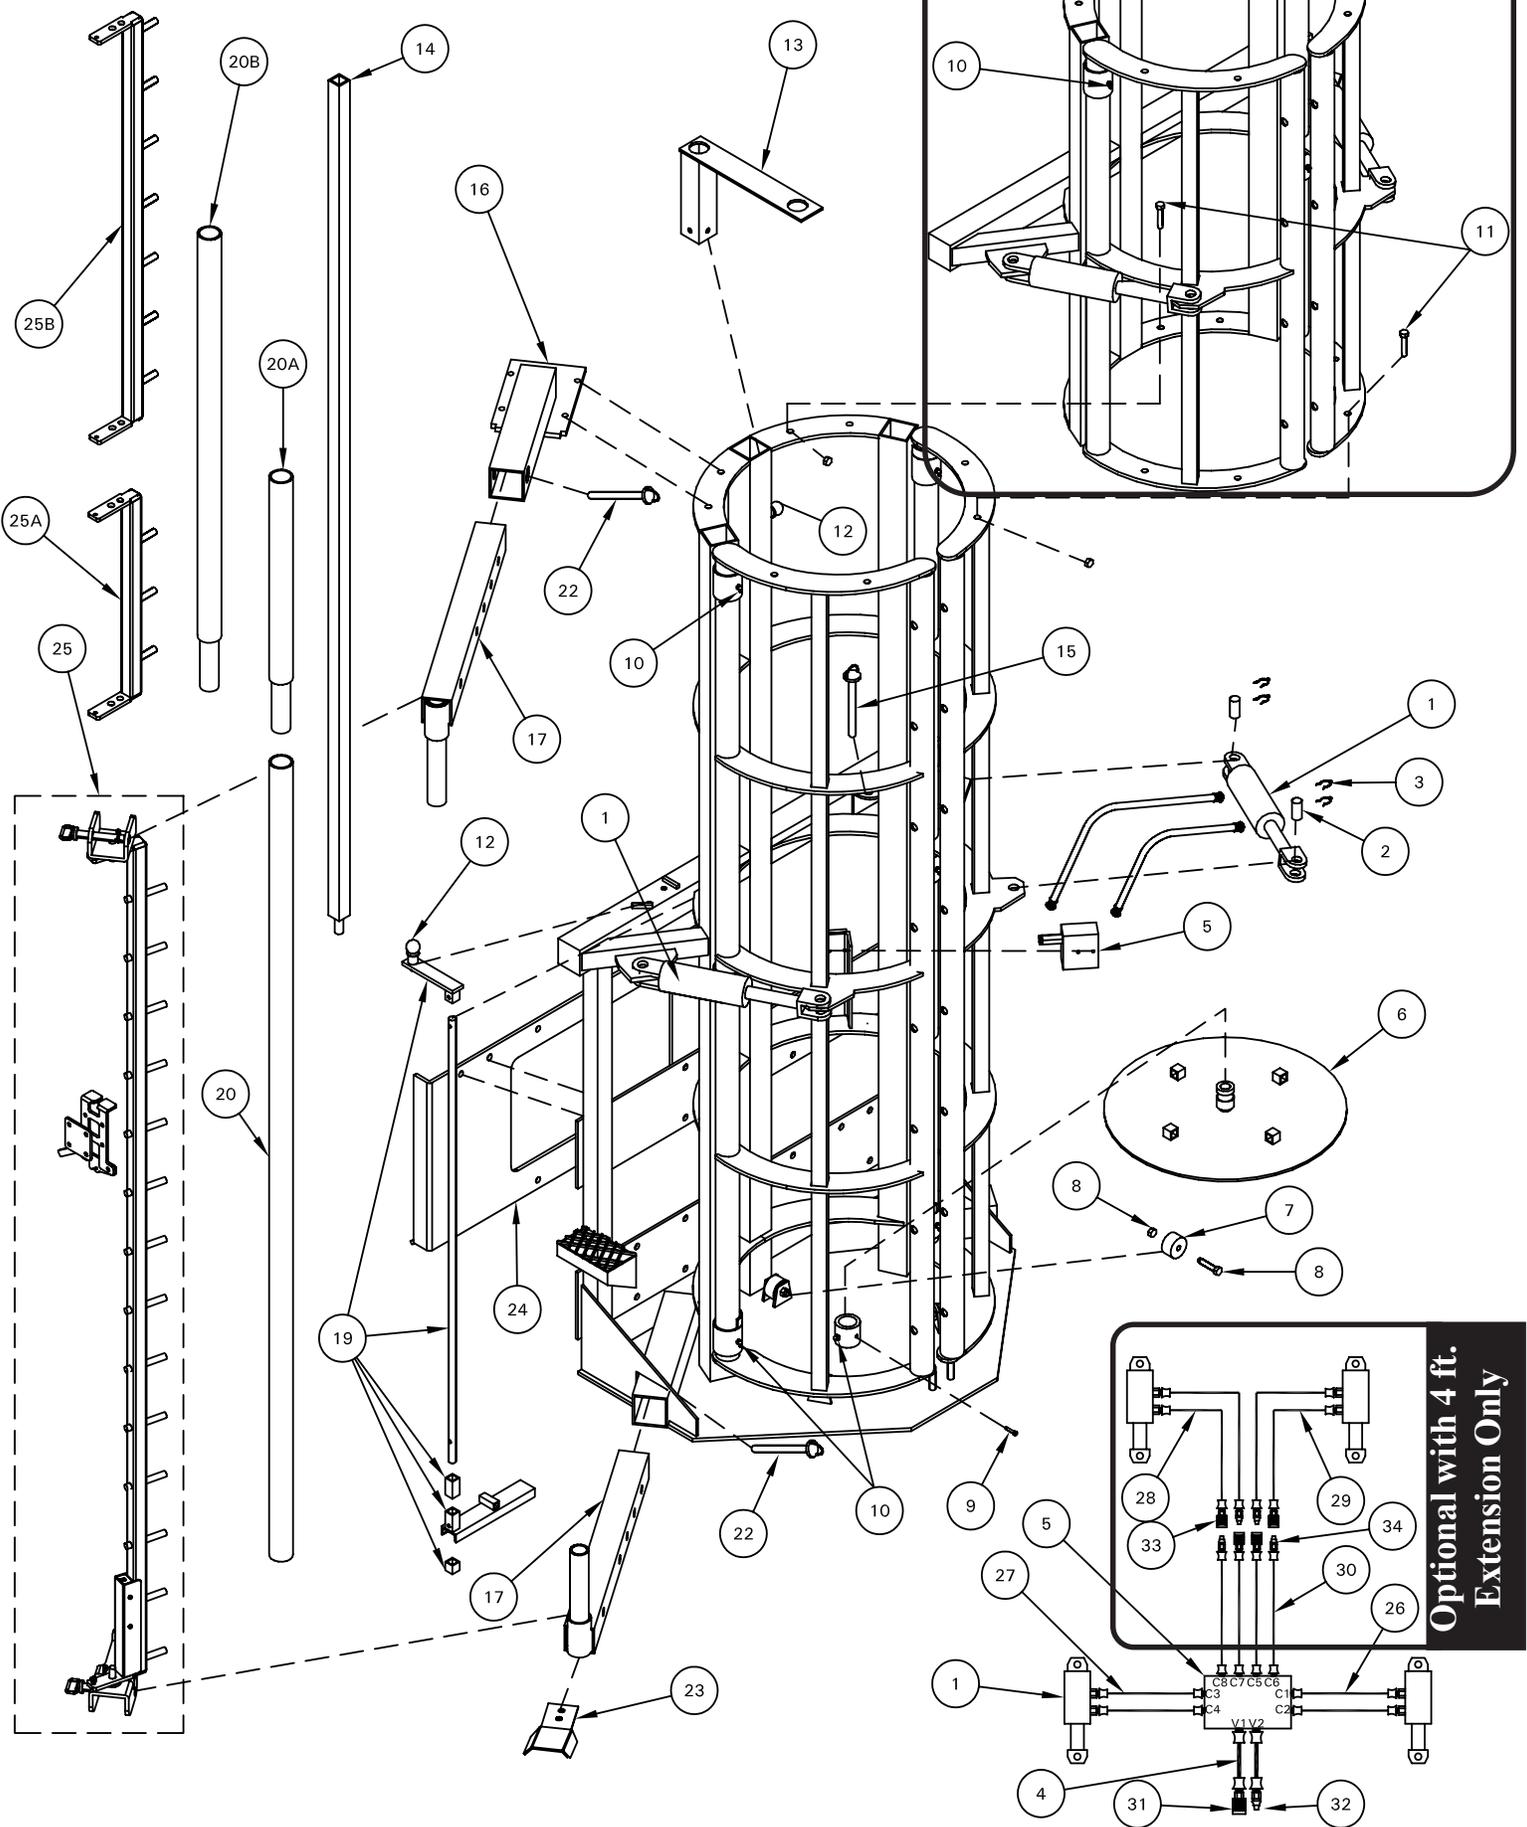


Optional 2 ft. Extension

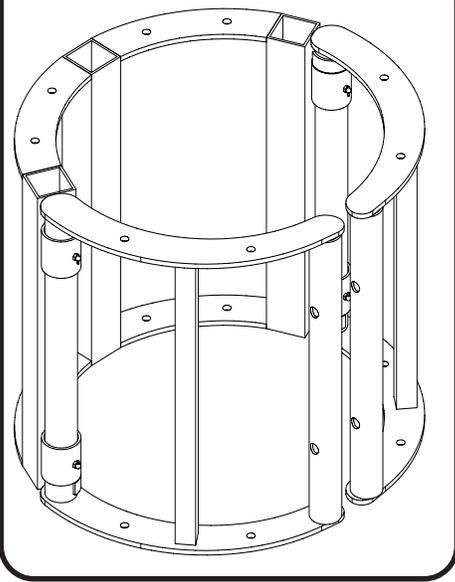


Optional Woven Wire Stretcher Assy.

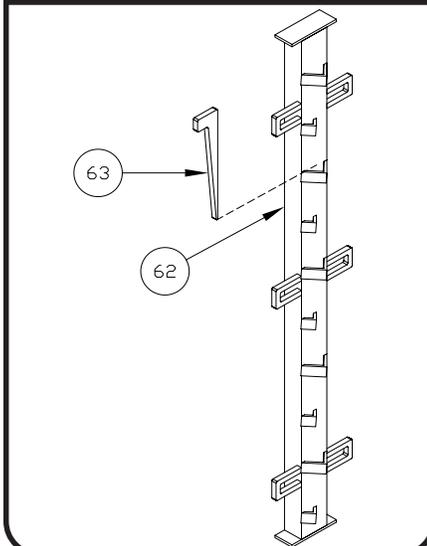

Optional Chain Link Stretcher Assy.

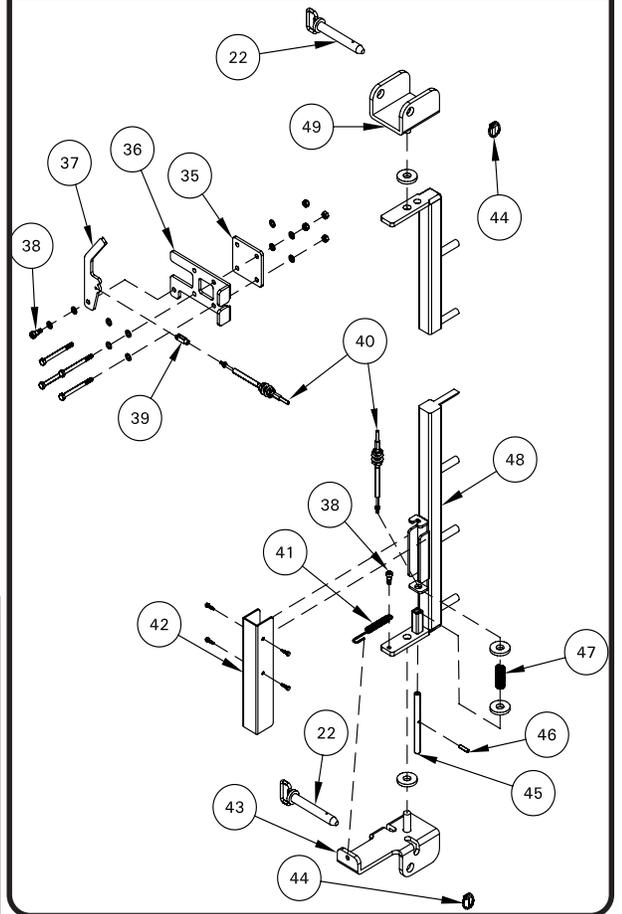

Optional Tilt

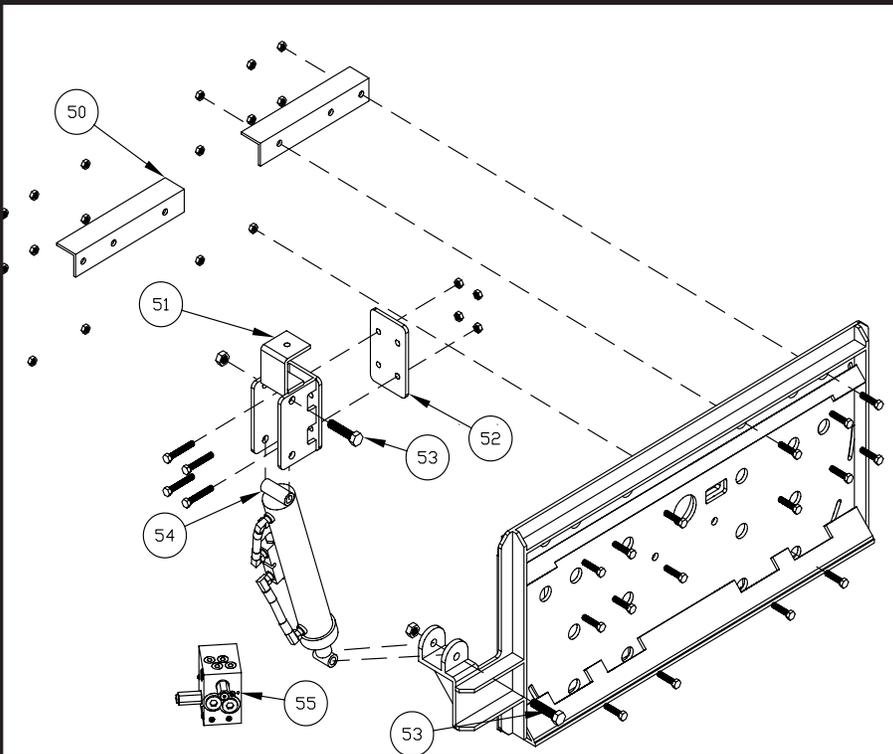

Limited Warranty

The Manufacturer warrants that products manufactured shall be free from defects in material and workmanship that develop under normal use for a period of one year on all products from the date of shipment. The foregoing shall be the exclusive remedy of the buyer and the exclusive liability of the Manufacturer. Our warranty excludes normal replaceable wear item, i.e. gaskets, wear parts, seals, O-rings, belts, drive chains, clutches, etc. Any equipment, part or product which is furnished by the Manufacturer but manufactured by another, bears only the warranty given by such other manufacturer. (Manufacturer agrees to furnish free of charge the Warranted Parts only upon receipt of the defective parts and a written description of problem or cause.) Warranty is voided by product abuse, alterations, use of equipment in applications for which it was not intended, use of non-manufacturer parts, or failure to follow documented service instructions. The foregoing warranty is exclusive of all other warranties whether written or oral, expressed or implied. No warranty of merchantability or fitness for a particular purpose shall apply. The agents, dealers and employees of Manufacturer are not authorized to make modifications to this warranty, or additional warranties binding on Manufacturer. Therefore, additional statements, whether oral or written, do not constitute warranty and should not be relied upon.

The Manufacturer's sole responsibility for any breach of the foregoing warranty provisions respect to any product or part not conforming to the Warranty or the description herein contained, is at its option (a) to repair replace or refund such product or parts upon the prepaid return thereof to location designated specifically by the Manufacturer. Product returns not shipped prepaid or on an economical transportation basis will be refused (b) as an alternative to the foregoing modes of settlement the Manufacturer's dealer to repair defective units with reimbursement for expenses, except labor, and be reviewed with the Manufacturer prior to repair. A written description of problem or cause must accompany all warranty claims.

Except as set forth hereinabove and without limitations of the above, there are no warranties or other affirmations which extend beyond the description of the products on the fact hereof, or as to operational efficiency, product reliability or maintainability or compatibility with products furnished by others. In no event whether as a result of breach of contract or warranty or alleged negligence, shall the Manufacturer be liable for special or consequential damages including but not limited to: Loss of profits or revenue, loss of use of the product or any associated product, cost or capital, cost of substitute products, facilities or services or claims of customers.

No claim will be allowed for products lost or damaged in transit. Such claims should be filed with the carrier within fifteen days.

Effective February 20, 2000

Tilt Hydraulic Control Option (12V Solenoid Control also available)

