



Form 090.070-O (APR 2018)

OPERATION

File: SERVICE MANUAL - Section 90
Replaces: 090.070-O (FEB 2018)
Dist: 3, 3a, 3b, 3c
Revised:

OPERATION

**FRICK® QUANTUM™ HD UNITY
COMPRESSOR CONTROL PANEL**

Version 10.53

CURRENT DESIGN – APRIL 2018

TABLE OF CONTENTS

SECTION 1 – COMPRESSOR CONTROL OVERVIEW

OVERVIEW	3
OPERATOR ACCESS	4
DATA ENTRY	4
NAVIGATION – ICONS & MENUS	6
ACCESS VIA WEB BROWSER (ETHERNET)	8
MENU HIERARCHY	9

SECTION 2 – SETUP & SYSTEM CONFIGURATION

INITIAL SETUP PROCEDURE	11
COMPRESSOR START-UP PROCEDURE	11
COMPRESSOR STOPPING PROCEDURE	11
SETUP FOR AUTOMATIC CONTROL	11
REMOTE CONTROL OF THE COMPRESSOR	11
SYS CONFIG	13
SYSTEM NETWORKING SCREEN	13
SYSTEM NETWORKING SETUP	13
SECURITY	18
PANEL	19
EMAIL	20
EMAIL NOTIFICATIONS SETUP	20
TROUBLESHOOTING EMAIL NOTIFICATIONS	22

SECTION 3 – OPERATING DISPLAY SCREENS

OVERVIEW	23
HOME	26
USER DEFINED	26
EVENTS	27
TRENDING	28
HISTORICAL TRENDING	28
REAL TIME TRENDING	29
ABOUT	30
STATUS	31
VYPER INFO	31
FILTER INFO	31
ANALOG	32
DIGITAL	32
COMMS 1-3	33
I/O COMMS	33
COMMS 1-3 LOG	34
I/O COMMS LOG	34
MODBUS TCP LOG	35
REMOTE USERS	35
DBS STARTER INFO	36
ALARMS	37
CLEAN SCREEN MODE	38
CONTROL SETPOINTS	40
CAPACITY CONTROL	40
PI CONTROL	42
CONDENSER CONTROL	43
SEQUENCING CONTROL (ORDER)	44
SEQUENCING CONTROL (CONTROL)	46
LIQUID INJECTION LIOC	47
CALIBRATION	48
PRESSURE	48
TEMPERATURE	49
CAPACITY VOLUME	50
MOTOR DRIVE	51
AUXILIARIES	52
OUTPUTS	53
PHD MONITOR	54
MISC	55
CONFIGURATION	56
MAIN MENU	56
PACKAGE	56
CONFIGURATION:	56
Oil Pump / Lubrication	58
Liquid Injection	59
DX / Chiller Control	60
Options – Discharge Butterfly Valve Control	61
Options – Economizer Butterfly Valve Control	62

Options – Separator Condensing	63
Options – Separator Dewpoint	64
COMPRESSOR	64
DRIVE	66
Motor	66
SSW Starter	67
VSD	68
Vyper – Control	69
Vyper – Cooling	70
DBS Starter	71
Engine / Turbine	72
CAPACITY CONTROL	73
Capacity Modes	73
Mode Scheduling	74
Leaving Process Safeties	74
DISCHARGE / SUCTION / OIL	75
Discharge	75
Suction / Oil	76
Limits	77
DIGITAL AUXILIARIES	78
Digital Aux Inputs	78
Digital Aux Outputs	79
Timed (Time Of Day)	80
Timed (Run Time)	81
ANALOG AUXILIARIES	82
COMMUNICATIONS	83
Ethernet	83
Serial	84
Map File	85
NOTIFICATIONS	86
Groups	86
Settings (Email Frequency)	86
SEQUENCING	87
Order	87
Control	88
CONDENSER	89
PHD VIBRATION / TEMPERATURE	90
Compressor Bearing Vibration	90
Motor Bearing Temperature / vibration	91
Motor Stator Temperature	92
PROPORTIONAL / INTEGRAL CONTROL SETUP	93
SUPERHEAT	95
RETRANSMITTING OUTPUTS	96
DIGITAL I/O	97
ANALOG I/O	98
Analog Inputs	98
Analog Outputs	99
PLC I/O CONTROL	100
SERVICE	101
MAINTENANCE (FACTORY)	101
MAINTENANCE (USER DEFINED)	102
OIL PUMP	103
COMMUNICATIONS	104
DIAGNOSTICS	105
SOFTWARE	106

SECTION 4 – WARNING/SHUTDOWN MESSAGE LIST

ALPHABETICAL LISTING	107
----------------------------	-----

SECTION 5 – APPENDIX (OIL CONTROL LOGIC)

OIL SAFETY LOGIC	118
PART 1: MISSING OIL PRESSURE	118
PART 2: INSUFFICIENT MAIN OIL PRESSURE DURING LOW DIFFERENTIAL	119
PART 3: OIL CIRCUIT PRESSURE DROP	120
PART 4: OIL PRESSURE FILTER DROP	121
OIL PUMP STARTING LOGIC	122
NO PUMP	122
FULL TIME PUMP	123
DEMAND PUMP	124
OIL PUMP RUNNING LOGIC	124
DEMAND PUMP	124

SECTION 1

INTRODUCTION TO THE QUANTUM™ HD UNITY CONTROL SYSTEM



RWF II
Compressor Package
With Quantum™ HD Unity
Control Panel

Overview

Frick Compressor packages may be used individually, or in groups. This section will describe some of the various configurations that may be used with regard to electrical control.

Each individual Compressor unit is controlled by a computer based machine control system, known as the Quantum™ HD Unity control panel. This controller continuously monitors the conditions and operation of the compressor unit and the various subsystems. It also directs the operation of components. It is fully self-contained.

The Quantum™ HD Unity control panel user interface is used to display graphic screens, which represent various aspects of compressor operation. By using the touch screen, the labeled or described function is recognized by the control processor, and appropriate action is taken.

Although the primary means of operator interaction to the compressor package is via the built-in control panel, with the Unity architecture it is easy to interact with the package panel either remotely via a laptop or pc web browser or from other Unity panels on the network.

Operator Access

The Quantum™ HD control panel contains the necessary control hardware and software within one self contained enclosure, and is mounted to the compressor package. The front of this control enclosure contains a graphic display with an integrated touchscreen to allow the operator to access essential information and to make necessary adjustments to setpoints, calibrations and features.

Operator access to this system is through various screens. A screen is the physical representation of data on the display. Each screen has a title area. The title is descriptive of the screen. The current date and time is shown in this title area. The day of the week, Sunday (Sun.) through Saturday (Sat.) is displayed, as well as the month of the year from January (Jan.) to December (Dec.), the day of the month from 1 to 31 and the year from 0001 to 9999 is displayed and the time displayed is the current time in 24 hours (military) format. The hours, minutes and seconds are displayed.

Some screens are for informational purposes only, and cannot be modified. These screens typically show analog values such as temperature and humidity, which are strictly functions of an associated sensor, and as such, cannot be modified. Other screens show setpoint values which can be changed, in order modify the units operating characteristics. For easier viewing, related information is separated into boxes. Sometimes selections are hidden when that the feature is unavailable.

Data Entry

The primary reason for entering data into the Quantum™ HD is for the purpose of modifying setpoints and calibration data. Setpoints and calibration data define the operation and limits of each unit, and will vary from one unit to the next. This data can be changed by operators in the field, or remotely through a web browser if they have been assigned the proper level of access (to be discussed later). These setpoints are stored on the Compact Flash card.

As mentioned earlier, accessing a panel through a web browser is one way of interacting with it. Perhaps the most common method though would be to access the panel at the unit itself. The actual screen navigation is nearly identical. The sections that follow will work in either instance.

NOTICE

Setpoints, calibration data, custom names, etc. are not lost after power is interrupted. However, a list of setpoints should be recorded and stored safely. This will facilitate reentry in case there is a need to return to original settings.

1. The data entry fields for both setpoints and calibration are identified by rectangle with blue text inside. On a screen that has adjustable setpoints, select the setpoint rectangle that you wish to modify (or select it on a web browser). An example of a setpoint box appears here:

20.0 PSIG

2. If the setpoint is adjustable, a pop-up keypad will be superimposed over the current screen (to be described later). The current value of that setpoint is shown. Use the keypad to enter the new value. Typing a new value will completely erase the old value.
3. Press the keypad **[ENTER]** button to input the new data from the data entry field.
4. If the data entered into the setpoint box is valid, it will be accepted and the keypad will disappear returning to the current screen. However, if the value entered is not within the acceptable range for the particular setpoint being changed, an Out Of Range pop-up box will appear, which will provide the acceptable range of values. Enter a value that is within this range and select the **[ENTER]** button.

Instructions for entering alphabetic data, and additional information will be provided on the following pages.



THE QUANTUM™ HD PANEL DISPLAY


Virtual Keyboard

Use the intuitive, built-in virtual keyboard and keypad to easily enter and change data. Selecting certain boxes of some screens will cause the alpha-numeric keyboard to pop-up, and will be superimposed over the current screen. Alphabetic, numeric and a limited amount of special characters can be entered using the virtual keyboard.

Some examples of boxes (or tags) that will cause this keyboard to appear are:

- Compressor Name
- Compressor Serial Number
- User Defined - Maintenance
- Save Setpoints
- Auxiliary Analog Names

The grey bar that appears at the top of the keyboard contains the current value or name. Use the keyboard much the same as you would a physical keyboard, to change the current value to what you would like it to say. When you are finished entering the data, simply select the **[Enter]** button on the keyboard to accept the data and return to the current screen.

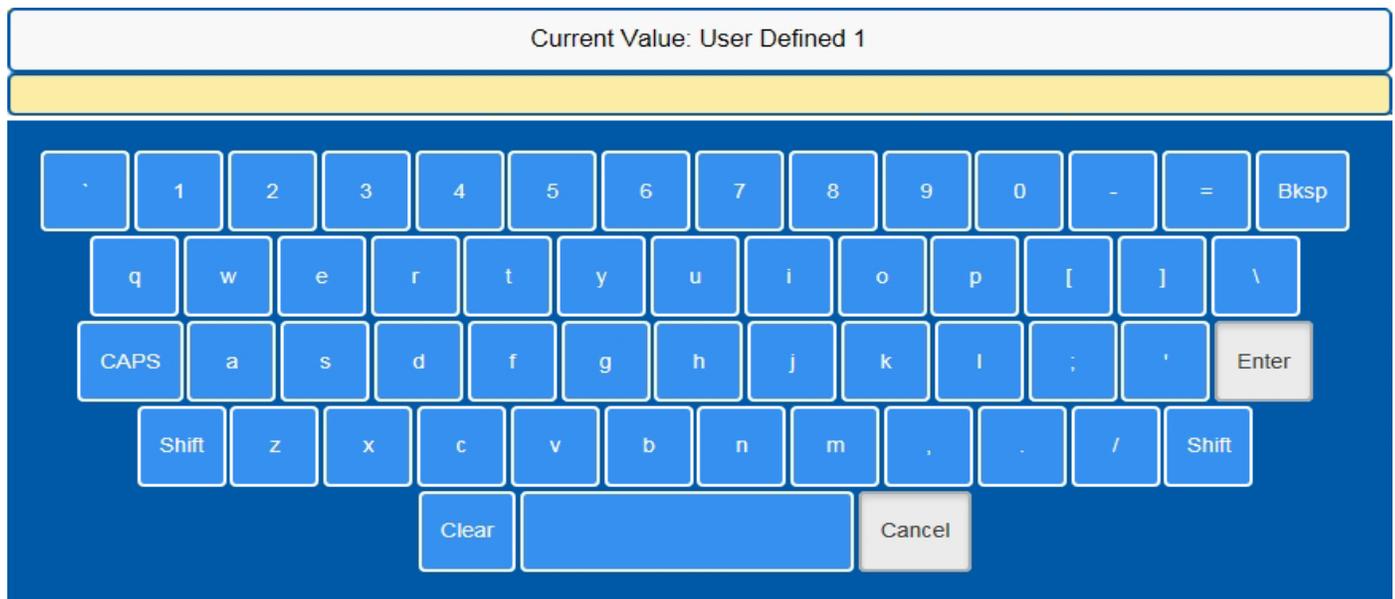

Virtual Numeric Keypad

Selecting setpoint data boxes will cause a numeric-only keypad to pop-up, and will be superimposed over the current screen. This keypad allows for numeric-only data entry to be entered.

Some examples of setpoint boxes (or tags) that will cause this keypad to appear are:

- Suction Pressure and Temperature
- Discharge Pressure and Temperature

The title at the very top of this pop-up gives the name of the setpoint that is being viewed.

The grey bar that appears at the top of the keypad contains the current value. Use the keypad to change the current data value to what you would like it to read. When you are finished entering the data, simply select the **[Enter]** key on the keypad to accept the data and return to the current screen.

The symbol <X at the bottom of the keypad is the same as a backspace, and will cause the right-most digits to be erased one at a time. The left and right arrows at the bottom of the keypad will cause a Select Units pop-up to appear, which will allow the user to select between PSIG or Hg, for a pressure (see the next dialog section for information).



Pop-up Select Units Box


If a pressure value has been entered via the numeric keypad, which would cause confusion as to whether the value should be in PSIG or Hg, a new pop-up box will appear, asking the user to select the units that they wish to have applied to the value. The selections are:

- PSIG
- Hg

The title at the very top of this pop-up gives the name of the setpoint that is being viewed.

The grey bar that appears near the top of the box will give the title of the box, in this case it will say Select Units. Simply select the unit measure that you would like to use, and the numeric keypad will replace this box.

The Select Units pop-up menu is shown below:

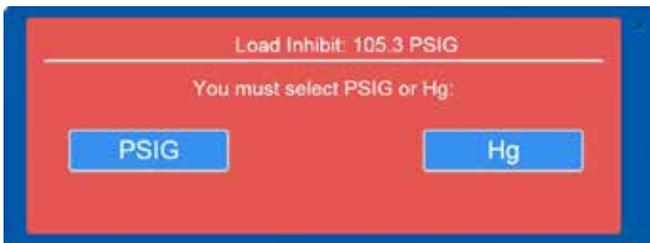

Pop-up Out-of-Range Box


If any numeric value that is entered is outside of the acceptable range for that setting, an Out Of Range pop-up box will appear.

The title at the very top of this pop-up gives the name of the setpoint that is being viewed.

The grey bar that appears near the top of the box will give the title of the box, in this case it will say Out Of Range.

The acceptable range for this setpoint will be given. Selecting the Return button will return you to the Numeric Keypad entry box. Ensure that the value that you enter falls within the acceptable range.

The Out Of Range pop-up menu is shown below:

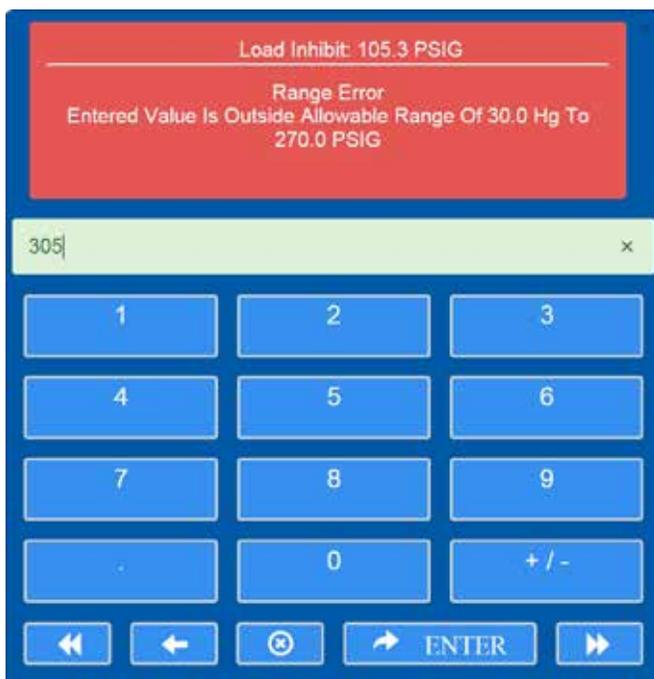

Navigation Icons

At the top right of each screen, you notice three buttons (or icons). When the panel is first powered up they will appear as follows:



The names and functions of these three icons are:

- **Home** - Selecting this button will always return you to the Home screen.
- **Alarms** - Selecting this button will cause the Alarms screen to appear. The Alarms screen allows the user (at any privilege level) to view and clear any active alarms or shutdowns.

NOTICE

Upon initial power up, the **[Menu]** button is replaced by a **[Login]** button. After the user has logged in, the **[Login]** button will be replaced by the **[Menu]** button.

- **Login** - This icon will only be present upon initial power up. Selecting this icon will cause the Numeric Keypad (explained earlier) to appear. If you have been given a privilege access code, you will enter it here. If the code is not valid, you will be prompted to re-enter it. If you do not have an access code, you will be limited to only accessing the buttons mentioned above. However, if you enter a valid access code, the three buttons will be replaced by the following three buttons:



The names and functions of the first two buttons are the same as previously stated (Home and Alarms). The third button (which was previously Login) is now replaced with the following:

- **Menu** - Selecting this button will cause the navigational menu (which is determined by your assigned access level) to be superimposed over the current screen.

These three buttons will also appear on the Navigation Menu, and are available at all privilege levels.

Navigation Menu

Navigating between the various screens is accomplished by accessing the Navigation Menu. The appearance of this menu will vary depending upon what user privilege level has been assigned to you.

The various levels of access are:

Basic - This level provides access to what is typically needed for day to day operation. The factory default password is 1. The following menu icons are available in this level:

- Home
- Events
- Trending
- About
- Status
- Alarms
- Clean Screen Mode

Operator - This level allows access to all Basic level icons. The factory default password is 2. The following additional menu icons are available:

- Control Setpoints
- Calibration

Service - This level allows access to all Basic and Operator level icons. The factory default password is 3. The following additional menu icons are available:

- Service
- Configuration

This menu is accessible by selecting the Menu button at the top right of any screen.

The pictorial shown below represents the Navigation Menu based upon the highest user privilege (Service):




Sys Config

With the new Quantum HD Unity Compressor software, several menu items have been relocated, as the new architecture is now capable of networking with any connected Quantum HD Unity system. This includes the Evaporator, Condenser, Vessel and Engine Room control.

The relocated menu items are:

- **Security screen** - Provides access to the User Accounts.
- **IP Address screen** - Provides access to the IP, Gateway and Subnet Mask addresses
- **Panel screen** - Provides access to the Date/Time setting, the Language setting and the Pressure/Temperature Units

After logging in to the panel, select the "Product Selection" button at the top center of the Home screen.

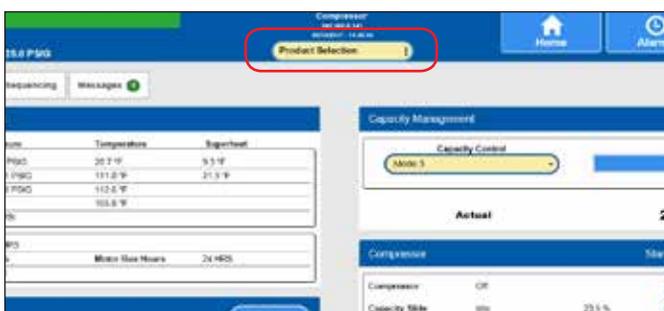

A Product Selection Overview dialog box will appear on screen with options based on your system setup. Select the Compressor Overview item.



At the top right of the compressor overview screen, the Sys Config button (or icon) will be visible.



Selecting this button will cause the system configuration menu (which is determined by your assigned access level) to be superimposed over the current screen.

Sys Config Menu

Various setup and configuration options are accomplished by accessing this menu. The appearance of this menu will vary depending upon what user privilege level has been assigned to you.

The various levels of access are:

Basic - The factory default password is 1. This level provides no additional options for the user. The following menu icon is available in this level:

- Logout

Operator - The factory default password is 2. This level allows access to system networking. The following additional menu icon is available:

- System Networking

Service - The factory default password is 3. This level allows access to system networking and the following additional menu items:

- Security
- Panel
- Email

The next graphic represents the Sys Config Menu based upon the highest user privilege (Service):



At the end of any session be sure to logout from any Menu page before leaving. An automatic logout will occur after 1 hour of inactivity.

Access Via Web Browser (Ethernet)

COMPATIBILITY: The Quantum™ HD Unity application can be accessed remotely via a web browser. The application works best in the Google Chrome 25+ web browser, however it can be used successfully in the following web browsers:

- Internet Explorer (10+)
- Mozilla Firefox (16+)
- Google Chrome (16+)
- Opera (25+)
- Safari (7+)

If you experience problems and your web browser is not at or above one of the versions above, please consider upgrading your browser before contacting support.

REMOTE ACCESS: This feature allows any screen to be viewed from a remote location without specialized software. An Ethernet connection to the Quantum™ HD Unity panel must be provided to utilize this feature.


The web browser interface can be viewed from any desktop or laptop computer, notebook, tablet or smart phone which has access to the network of the interface panel.

Access the System Networking screen at the Interface Panel, by selecting from the middle yellow menu, **[Compressor Overview]** > **[Sys Config]** > **[System Networking]**. The following screen will be shown:



Note: The address is displayed next to the Compressor Product. In the above example (<http://192.168.0.170>)

At the computer, open the Internet browser (click on your Internet icon). Once the browser has opened, look for the address bar, it will appear similar to the following (the image shown will vary based upon the browser being used):

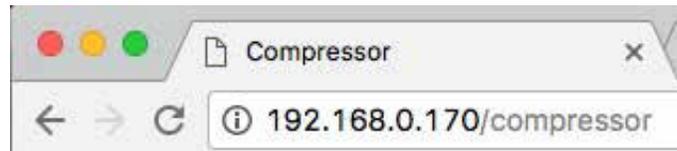

On the address bar, type the following [http://]. Do not type the brackets. After the http:// type in the values of the four boxes from IP Address of the Ethernet Configuration screen.


Place a period (dot) between each group of numbers. Using the screen information example used here, the result would be <http://192.168.0.170/>. Your particular IP Address may vary from the example shown.

Press the [Enter] key on your computer keyboard, and if everything is connected and configured properly, the Home screen of the Interface Panel should now appear on your computer screen (similar to the following):



If you experience problems, such as a message stating “Page not found”, consult with your IT department or internet provider.

Once the web browser has established connection with a panel, simply use the computer’s mouse to maneuver a pointer mimicking the actions of a finger on the touchscreen. All navigation and functionality should now be available. Changing screens, setpoints, etc. can now be accomplished remotely via your keyboard and mouse.

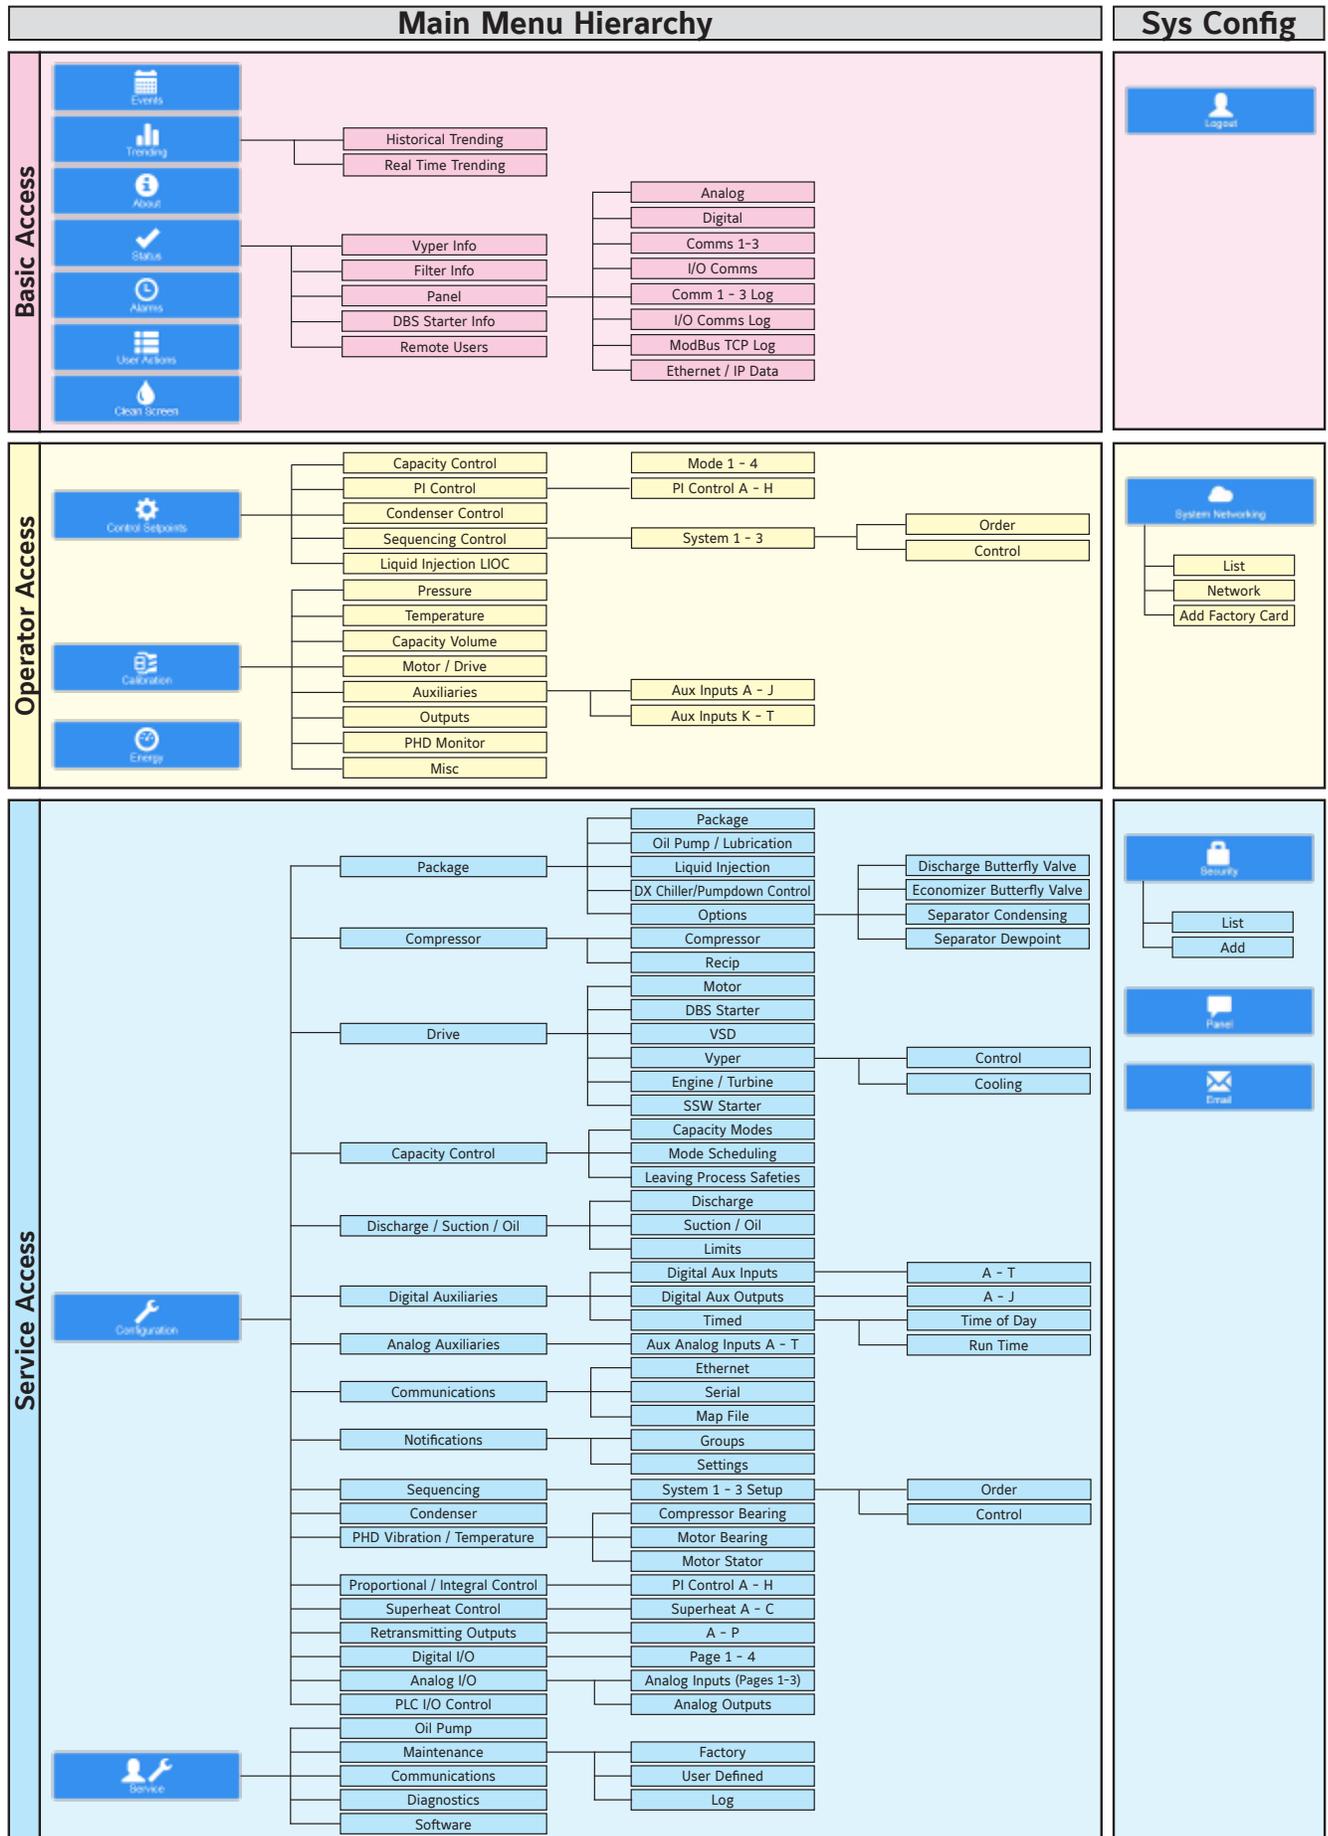

NOTES

SECTION 2

SETUP & SYSTEM CONFIGURATION

Initial Setup Procedure

1. Compressor Configuration should be performed by a Factory Representative or Distributor to setup the customer specific control features which should not need to be changed by operators.
2. Configuration is performed to setup panel features and options, which can later be changed by an operator. Features such as the panel time are changed here. Options such as Condenser Control are enabled here. The operator can avoid viewing and entering settings of unused controls by keeping unused options disabled.
3. Calibrate the control devices.
4. Enter and setup all control settings.
5. Establish the desired access rights of the operators.
6. The Operating Status (Home) screen provides quick access to the most important information and controls of the compressor unit and the subsystems.

Compressor Start-Up Procedure

- Starting is shown for the Compressor status on the Operating Status (Home) screen.
- All the safeties are checked. If any shutdown condition is present the corresponding alarm message is shown and the compressor is prevented from starting.
- If the compressor type has been set to Other Compressor:
 - The oil lubrication is checked. A Prelube pump needs a 5 lb. oil pressure differential to allow the compressor to start. A full time pump needs a 20 lb. Oil Pressure differential to allow the compressor to start. Other compressor manufacture's Oil Pumps needs a 30 lb. Oil Pressure differential to allow the compressor to start. If one of these conditions is not present an alarm message is issued and the compressor is prevented from starting.
- The Slide Valve position is checked to see if it is less than or equal to the Highest Slide Valve Position to allow starting the compressor setpoint. If the Slide Valve position is higher than this, the compressor is prevented from starting.
- If none of the above conditions has prevented the compressor from starting, a timer delay is started that requires the starting conditions to remain satisfied for a period of five seconds for all compressor model types except [Other Manufacturers]. The Other compressor model type uses a 20 seconds delay. After the time delay the compressor and the Recycle Delay timer are started.
- If within 30 seconds, the Compressor Start Auxiliary input has not been energized, or Motor Current is not detected, then an alarm message is issued and the compressor is

shut down.

- When the compressor begins running, the Oil Pressure valves are in a state of change. For a period of 10 seconds after the compressor status switches to Running, the low Oil Pressure alarm and shutdown safeties are ignored.

Compressor Stopping Procedure

During the compressor stopping, the Slide Valve unload solenoid remains energized until the Slide Valve is unloaded to or below the Highest slide valve position to allow starting the compressor setpoint. If the Slide Valve does not unload below this setpoint within 5 minutes, the alarm message Compressor Unable to Unload - Alarm is issued.

Setup For Automatic Control

In order to operate a compressor at peak efficiency, under full load and part load conditions complex control sequences must be used. In order to obtain the efficiencies, Automatic Control is almost mandatory. Automatic control of the Slide Stop and Slide Valve increases the compressor efficiency over a wide operating range. The following steps (which are relevant) should be taken to control in Automatic:

- The compressor should be in automatic (automatic cycling) so the compressor will start and stop according to the Autocycle setpoints.
- The Oil Pump should be in auto because its operation coincides with that of the compressor.
- The Slide Valve and the Slide Stop should be in Automatic so they are controlled by setpoints and internal control logic.

Note: If there is a shutdown in response to a safety setting, a compressor in Automatic mode is placed into Manual mode requiring operator intervention.

Remote Control Of The Compressor

The following digital outputs and inputs (on Digital Board 2) have been provided that can be used to control the compressor from another controller such as a PLC:

- (Module 1) - Ready to Run - This output is energized while the compressor is not shutdown and the Recycle Delay has timed out.
- (Module 2) - Remote Enabled - This output is energized while the compressor or capacity is in Remote I/O mode.
- (Module 3) - Remote Start / Run / Stop - If the compressor is in Remote Start mode with no Recycle Delay time and this input is energized, the compressor is started. If this input is energized and the compressor is started, it will continue to run. If this input is de-energized, the compressor is stopped.

- (Module 4) - Remote Load or Remote C.C step 1 for step units
 - Remote Load - If the Slide Valve is in Remote Mode and this input is energized, the Slide Valve load solenoid will be energized provided there are no safety overrides preventing loading.
 - Remote C.C step 1 for step units - If the Capacity Mode is in Remote this input is used to step on and off capacity according to the Remote Capacity Control chart.
- (Module 5) - Remote Unload or Remote C.C step 2 for step units
 - **Remote Unload** - If the Slide Valve is in remote and this input is energized, the Slide Valve unload solenoid will be energized.
 - **Remote C.C step 2 for step units** - If the Capacity Mode is in Remote this input is used to step on and off capacity according to the Remote Capacity Control chart.

Remote Capacity Control Chart

Input \ %Capacity	25	50	75	100
3-Step Input 4		OFF	OFF	ON
3-Step Input 5		OFF	ON	ON
4-Step Input 4	OFF	ON	OFF	ON
4-Step Input 5	OFF	OFF	ON	ON

- (Module 6) Recycle Delay (If compressor is off) - This output is energized while the remaining time in minutes for Recycle Delay is greater than zero (0). Recycle delay time is the time that must elapse prior to allowing the compressor to restart. This timer times out while the compressor is running or stopped since the Recycle Delay is a start-to-start protection. It is intended to prevent damage to the motor from successive restarts. For further setup see the Motor Control Setpoints screen
- Sequence Input (If compressor is on) - Reports the status of Stop Load or Force Unload (See Slide Valve and Slide Stop Status box for further details).

The Hot Gas Bypass option can be used. This option is not available for all compressor models (Reference 090.040-M; Compressor Model Differences).

The Remote Control Setpoint option can be used. This option, which is enabled in *Configuration > PLC I/O Control*, is not available for all compressor models (Reference Compressor Model Differences). This uses the Remote Control Setpoint analog input and the Remote Control Setpoint analog output for Capacity Control of compressors. The Remote Control Setpoint configuration data can be found by accessing *Configuration > Analog I/O > Page 2*.

The Remote Slide Valve Position option can be used. This option which is setup by accessing *Configuration > Analog I/O > Page 2* is not available for all compressor models (Reference Compressor Model Differences). This uses analog input signal to the Remote Slide Valve Position analog input (Channel #13 on Analog Board #1) to control the Slide Valve.

The Slide Valve Position \ Capacity analog output can be used to determine the present Slide Valve position % or Capacity % dependent on the compressor model (Reference Compressor Model Differences). A (4-20 ma) output signal to the Slide Valve Position \ Capacity analog output (Channel #3 on Analog Board #1) corresponds to the present (%) value displayed on the Operating Status (Home) screen.

ASCII communication to the Com-2 port can be used (reference 090.040-CS Communications Setup manual). A compressor should be in both Remote Compressor Mode and Remote Slide Valve or Capacity Mode for Remote Control.


Note 1: If the compressor is in Remote mode and communication through the communication port has not occurred for 5 minutes, then the compressor is placed into Automatic mode and the Slide Valve is placed into Auto mode.

Note 2: If there is a shutdown in response to a safety setting, a compressor in Remote mode is placed into Manual mode requiring operator intervention.

If a Shutdown occurs, the status bar in the upper left corner of the screen will turn red, and a message showing the type of shutdown is shown. This visual warning will help get the attention of the operator in a noisy engine room environment where audible alarms may not be heard.

NOTE: refer to 100.200-IOM/100.210-IOM for further VSD (Vyper™) message details.

SYS CONFIG – SYSTEM NETWORKING

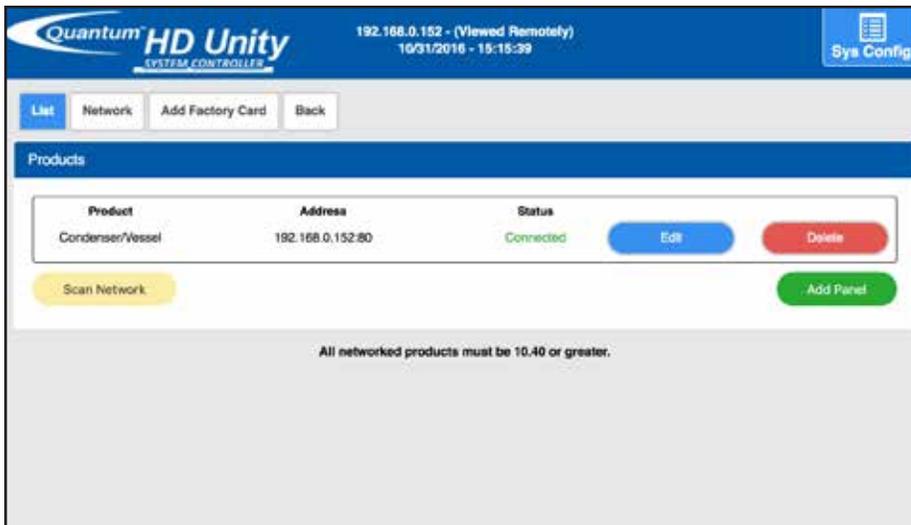

DESCRIPTION: This screen allows the user to setup the system network and add segments to the network.

NOTE: Full step-by-step instructions on segments and setup of the System Networking settings can be found below.

System Networking Setup

If all segments of the control (dependent on which segments were ordered) are listed and shown on the System Overview page (shown above) no action needs taken on the System Networking page. If a segment of control does not appear on the System Overview page, or a segment is being added after delivery, select Sys Config. > System Networking (shown below).



There are two scenarios when setting up the system networking: initial setup and adding a new segment to an existing network of segments. See below for the steps to follow in each scenario.

Initial Setup

Initial setup is when all of segments of control that are part Quantum HD Unity family are new.

1. Verify that the Ethernet cables for each of segments of control are plugged in.
2. Scan the network and add the appropriate segments of control. (Refer to Scanning the Network)
3. Change the network configuration. (Refer to Network Page)
4. Edit the IPs for each of the segments of control. (Refer to Editing a Segment of Control)


Adding a New Segment to an Existing Network

1. Verify that Ethernet cable for the segment of control is plugged in.
2. From a previously installed segment of control add the new segment of control to the network. (Refer to Linking Segments of Control Together)

List Page

The list page displays a list of the all the segments of control that are currently networked and communicating. Segments of control can be edited with regards to product category, IP address port, and URL or deleted from this page.

A "Scan Network" button is available on this page as a quick means to adding control sections that may be added after initial startup (Refer to Scanning the Network). An "Add Panel" button is available on the lower right side of the page to add a segment of control manually (Refer to Linking Segment of Control Manually).

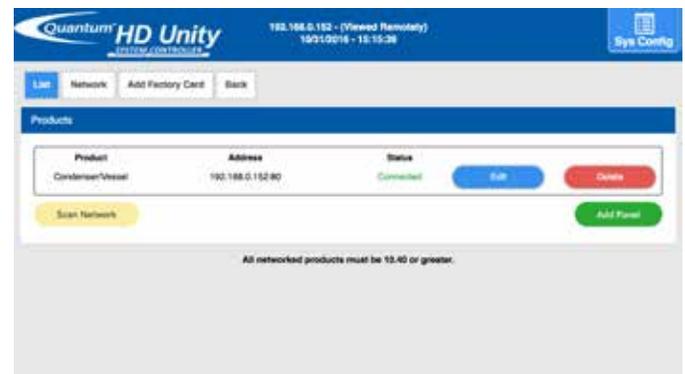

Network Page

The network page contains two fields:

- Gateway Address
- Subnet Mask

The network administrator should provide both of these. The factory defaults, noted in their respective sections, are sufficient if the segment of control is not connected the the plant's network. The combination of both the gateway address and subnet mask create a subnet. Upon saving changes to these fields, the networking for all of the segments of control listed on the current panel's Sys Config. > System Networking > List page will be changed. The IP for each segments of control listed

on the current panel's Sys Config. > System Networking > List page will be set to the lowest IPs for that specific network. It is the network administrator's responsibility to edit the IP for each of the segments of controls such that there are not any IP conflicts. Each of the products need to have a matching gateway address and subnet mask so that they can communicate to each other.



Gateway Address

The gateway address is the IP of the device that acts as a conversion from one network to another. A router/modem is often a gateway to the Internet, the gateway address will most likely be the IP of the local router. This can be found in the manual for your router. If the segment of control is not on the plant network the factory default, noted below, is sufficient.

- Default: 192.168.0.1

Subnet Mask

The subnet mask and gateway determine what IPs can be reached from the panel. The larger the subnet the more IPs the panel will be able to communicate with. The maximum for each number in the subnet mask is 255. If the segment of control is not on the plant network the factory default, noted below, is sufficient.

- Default: 255.255.255.0

Example:

If a panel has a gateway address of 192.168.0.1 and subnet mask of 255.255.255.0 then the panel can only communicate with other computers that have an IP with the prefix 192.168.0... In other words, the panel can only communicate with panels that have an IP of 192.168.0.X where X is a number in the range of 0-255. See the table below for more examples.

Subnet Mask	Other Computers' Prefix
255.255.0.0	192.168.X.X
255.0.0.0	192.X.X.X


Linking Segments of Control Together

Once the network has been set up, the next step is to link a segment of control. There are three ways to link segments of control together: linking the segment of control manually, scanning the network, or adding a factory card.

Linking Segment of Control Manually

The steps to Link a segment of Control Manually are as follows:

1. Navigate to Sys Config. > System Networking
2. Press the "Add Panel" Button on the lower right hand side of the screen.

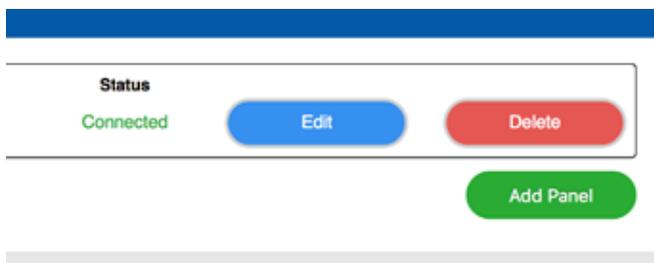

3. Type in the IP address of the segment of control to be added and press the "Enter" button on the onscreen number pad.



If the segment of control's IP address is outside the network the user will be prompted to enter an IP address inside the network with which they want the segment of control to added to be associated.




Scanning the network


Scanning the network allows the user to press a button and find the segments of control within the network. The time that it takes to scan the network is dependent on the speed of the network and the size of the network. If scanning takes too long, press "Cancel" button to stop the scan and link the segment of control manually.

The steps to link segments of control by scanning the network are as follows:

1. Navigate to the Sys Config. > System Networking page.
2. Press the “Scan Network” button in the lower left hand corner of the page. A loading screen will be displayed.

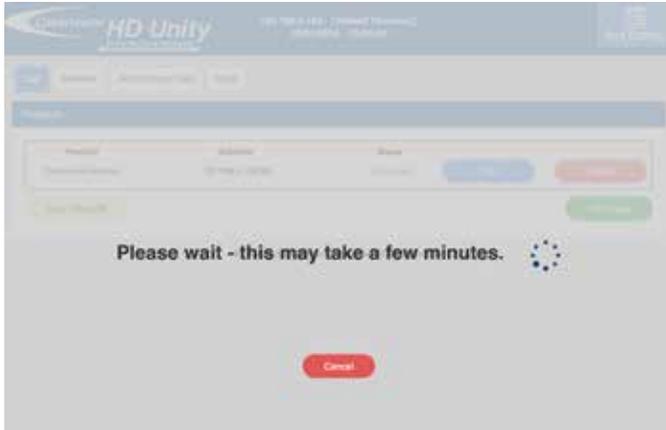

3. Once the network has been scanned, select the segments of control to be linked.

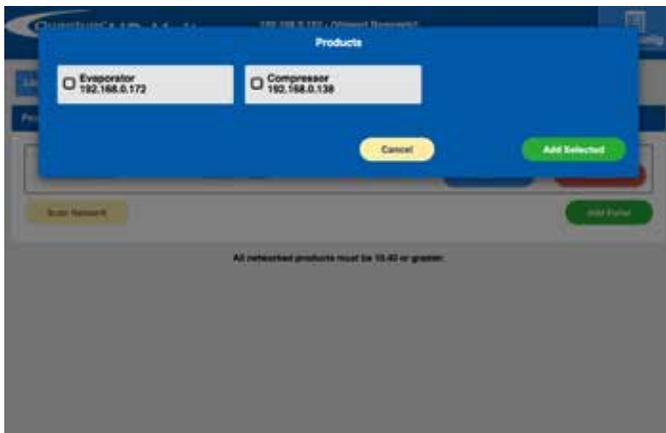


4. Press “Add Selected”.

Adding a Factory Card

If and only if the user has a card with the Factory IP address they can link a segment of control through the following steps:

1. Navigate to Sys. Config > System Networking
2. Press the “Add Factory Card” link in the sub-navigation bar.
3. Select the which segment of control they have that has a factory IP Address.

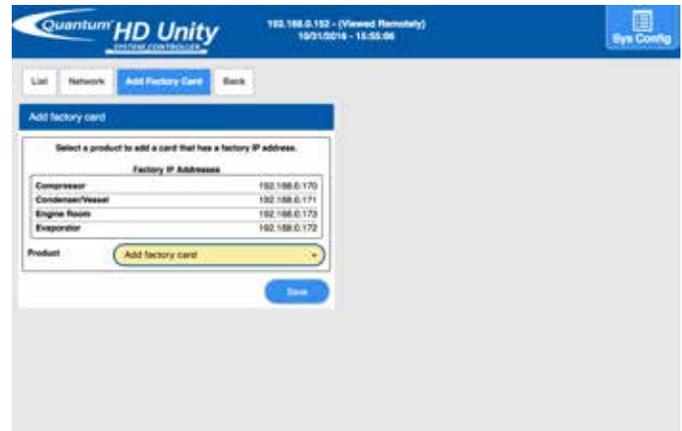

4. Upon selecting the product, the user will be redirected to a page where they will be prompted to enter an IP address. Enter an IP address inside the network with which the segment of control to added should be associated.



5. Press “Save”.


After entering the new IP address and pressing save the segment of control will be linked to the other linked segments of control.

Factory IP Addresses	
Segment Of Control	Default IP
Compressor	192.168.0.170
Condenser/Vessel	192.168.0.171
Evaporator	192.168.0.172
Engine Room	192.168.0.173

Editing a Segment of Control

The steps to edit a segment of control are as follows:

1. Navigate to Sys Config. > System Networking.
2. Press the edit button that is in the same row as the segment of control to be edit.
3. Make the changes. (Refer to Linking Segment of Control Manually for information on each field.)
4. Press the “Save” button.
5. Press “Yes” in the confirmation box. Once “Yes” is pressed all automated control will be suspended for 20-30 seconds.

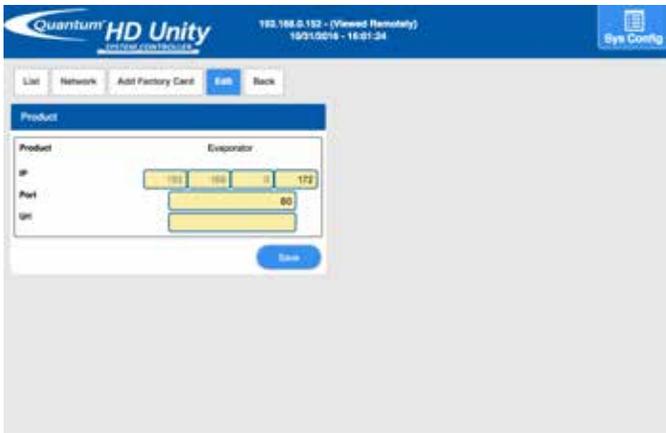

Fields

Product - The product category that the IP points to. If the product has multiple components the user will be able to select which components are enabled. The only product with this feature is Condenser/Vessel.

IP Address - The network administrator will provide the numerical IP address. If the segment of control is not on the plant network the factory default, noted below, is sufficient. Notice a certain number of octets are pre filled and disabled. This is based on the network page's gateway and subnet mask configuration (Refer Network Page).

Port - The network administrator will provide the port number for each segment of control. The default is 80.

URL - Enter a URL if the segment of control is to be accessed through an external website.

Extra Fields

There are extra fields depending the on product type:

Name - This is displayed if the product type is Compressor. This is the name that will be displayed throughout the compressor program and in the top bar of the screen when accessing the compressor. The default name is Compressor.

Deleting a Segment of Control

The steps to deleting a segment of control are as follows:

1. Navigate to Sys Config. > System Networking.
2. Press the delete button that is in the same row as the segment of control to be deleted.
3. Press "Yes" in the confirmation Box.

Common Problems and Troubleshooting


Before following any of the steps below, verify that all of the Ethernet cables are connected to the switch in the Quantum HD Unity panel.

Setting up a laptop for troubleshooting

A laptop must be preconfigured to communicate with segments of controls for troubleshooting purposes before following the any of the steps for scenarios below. The laptop must have the same networking settings as the segment of control. Below are the steps for setting the network on a Windows laptop.

1. Navigate to Sys Config. > System Networking > Network on a segment control, and record the Gateway Address and Subnet Mask.


2. On the laptop navigate to the Control Panel
3. Click on Network and Sharing Center

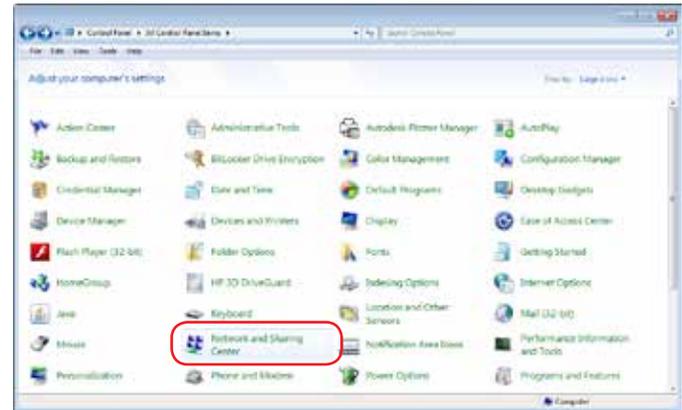

4. On the left of the Network and Sharing Center click "Change adapter settings"




5. Right click your Local Area Network adapter and select "Properties" from the menu.

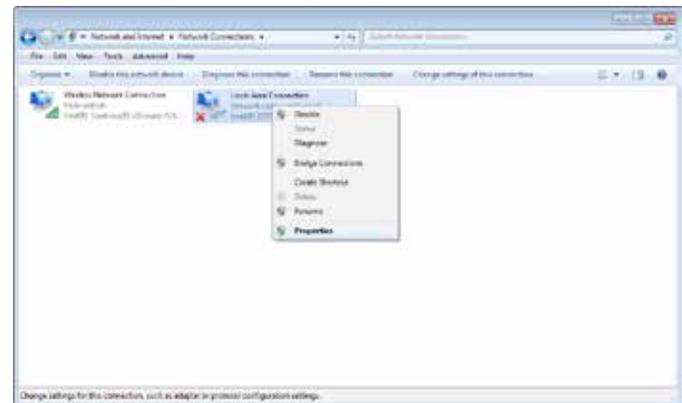

6. Select "Internet Protocol Version 4 (TCP/IPv4)" and click the properties button
7. Set the Subnet mask and Default gateway to match the subnet mask and gateway address that was recorded in step 1. The IP address can be set to an IP where the first three octets match the first three octets of the gateway address and the last octet is a number from 2-254 that no other computer is using.

Note: The numbers in the following image are an example configuration the actual numbers to be entered may be different.

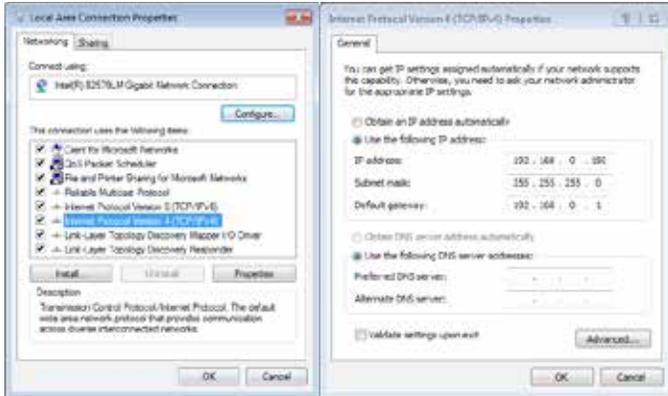

Unable to Connect to a Product

When a segment of control is unable to connect to another segment of control the major reason is that the IP of the disconnected segment of control is different than expected.

Verify the IP

Plug a laptop into the switch and enter the IP of the segment of control that is unreachable into a browser’s address bar. If a page is not displayed after 10 seconds, then the IP is not correct (Refer to Fix an Incorrect IP).

Resetting IP Address to Default Settings

In the event of a situation where you can no longer change the networking settings, power down the panel and put a hardware jumper on JP1 pins 7 & 8 of the Communications Interface board. Power up the machine and the IP address is reset to 192.168.0.170 as reboot occurs.

Fix an Incorrect IP

To fix an incorrect IP for a product that cannot be found do the following:

1. Delete the segment of control that displays “Cannot Connect” on the Sys Config. > System Networking page. (Refer to Deleting a Segment of Control)
2. Reset the IP to factory defaults on the segment of control that was displaying “Cannot Connect”. (Refer to Resetting the IP to Factory Defaults)
3. If there are not any other segments of control associated with the default IP (see table in step 5) for that specific segment of control, then skip to step 13.
4. Plug a laptop into the Ethernet switch and set the laptop’s subnet mask to 255.255.255.0 and the default gateway to 192.168.0.1 (refer to Setting up a laptop for troubleshooting steps 2-7). The IP address for the laptop can be set to anything with the prefix 192.168.0.X where X is a number from 2-254 that no other computer is using.
5. With a laptop plugged into the Ethernet switch, enter the segment of control’s default IP into a browser’s URL bar. The defaults are as follows.

Factory IP Addresses	
Segment Of Control	Default IP
Compressor	192.168.0.170
Condenser/Vessel	192.168.0.171
Evaporator	192.168.0.172
Engine Room	192.168.0.173

6. Navigate to Sys Config. > System Networking
7. If there is not a segment of control in the list on the System Networking page whose IP address matches the IP address in the header bar, then add the segment of control. (Refer to Linking Segment of Control Manually)
8. If all of the segments of control in the list are displaying connected, then skip to step 12.
9. Delete all the segments of control except for the segment of control whose IP matches the IP in the header at Sys Config. > System Networking.
10. Navigate to Sys Config. > System Networking > Network.
11. Change the Gateway Address and Subnet Mask fields to match the fields of the other segments of control and press “Save”.
12. Once the network has been set and the page reloaded. Navigate to Sys Config. > System Networking and edit the segment of control that matches the IP address in the header bar of the screen with the desired settings. (Refer to Editing a Segment of Control)
13. From the segment of control on which step 1 was performed, add the segment of control that was just edited. (Refer to Linking Segment of Control Manually)
14. Disconnect the laptop from the switch and return the laptops network settings to its original settings.



Unable to Edit Segment of Control

The primary cause of a user being unable to edit a segment of control is that the segment of control is unable to communicate with all of the other segments of control. Verify that each of the segments of control are connected by navigating to Sys Config. > System Networking and fix any of the disconnected segments of control. (Refer to Unable to Connect to a Product)

Unable to Change the Network

The cause of a user’s inability to change the network is that all of the segments of control are not communicating with each other. Verify that each of the segments of control are connected by navigating to Sys Config. > System Networking and fix any of the disconnected segments of control. (Refer to Unable to Connect to a Product)

SYS CONFIG – SECURITY

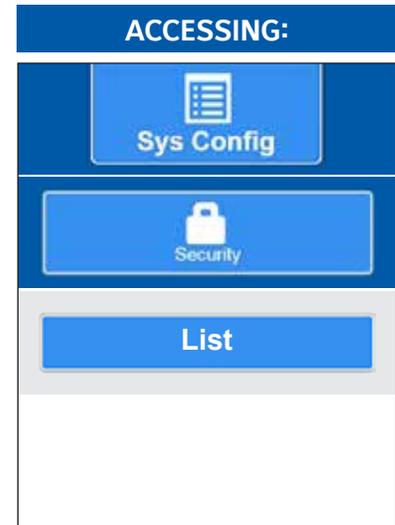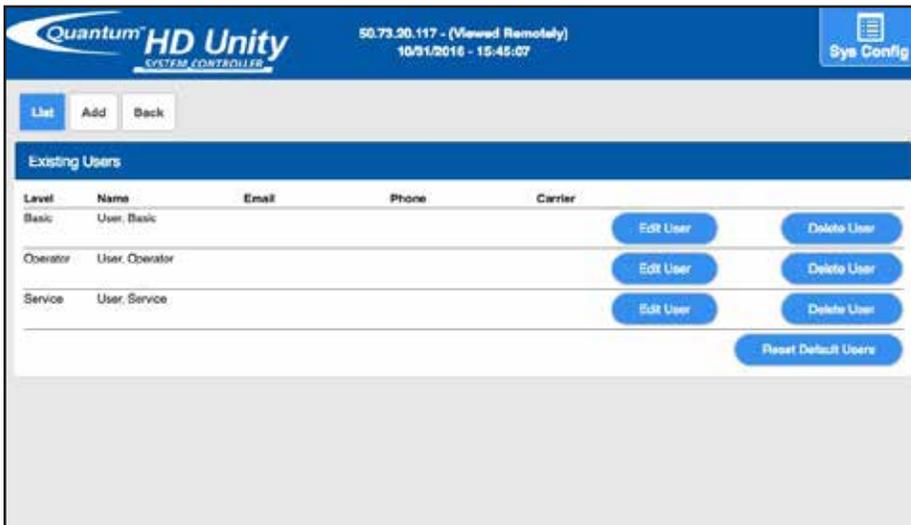

DESCRIPTION: The Security screens allow the user to set various levels of password protection for multiple users.

EXISTING USERS

This area provides a listing of all currently assigned users, along with their assigned user access level. The information that is visible here is set up in the adjacent box, labeled as New User:

Level - Three possible user levels are shown here, they are:


- **Basic** - Access to only the very basics of unit operation.
- **Operator** - Provides greater access than the Basic level.
- **Service** - Provides the most access to unit operation.

Name - The name of the user is located here, in the format of last name followed by first name.

Email/Phone/Carrier - Enter as needed.

Edit User - Select this button to edit user information. Screen will be similar to the New User screen shown below.

Delete User - Select this button to completely delete a user. A pop-up dialog box will prompt to ask if you wish to continue.

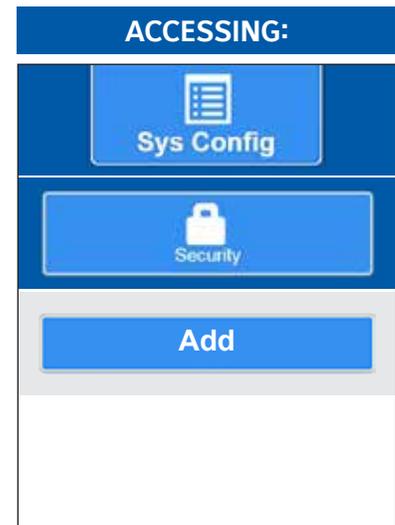

DESCRIPTION: This screen allows the user to edit or delete existing and DEFAULT users.

NOTE: It is advisable when creating a new user for each level, that the existing default user for that level be deleted.

NEW USER

Use this area to assign new users to the system. If you wish to only change the access level or PIN number of an existing user, you must first delete that user, then re-enter the information here:

First Name - Enter the new users first name.



Last Name - Enter the new users last name.

Email/Phone/Carrier - Enter as needed.

Level - Assign the level of unit access that you wish this user to possess - Basic, Operator or Service.

PIN - Enter a PIN number for this user. The PIN number is strictly numeric, and can use as little as a single digit or as many as practicable.

SYS CONFIG – PANEL

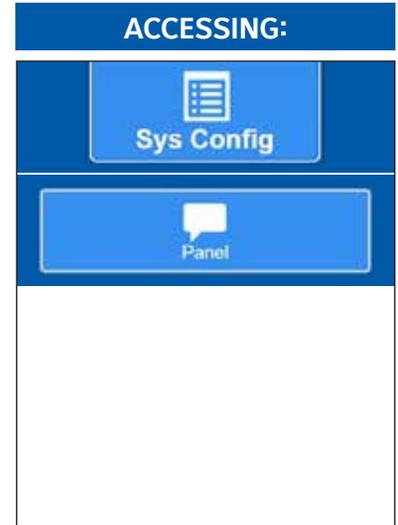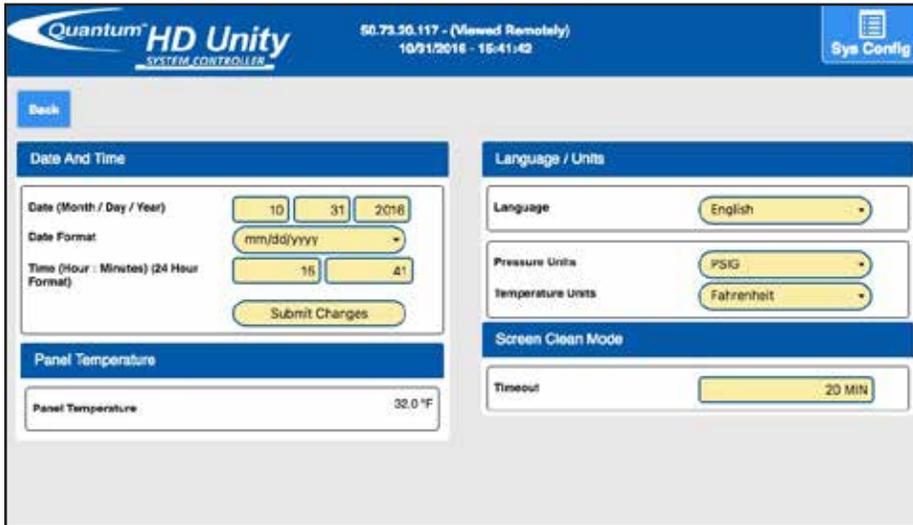

DESCRIPTION: This screen is used to view and set basic control panel functions.

DATE AND TIME

The following setpoint and pop-up menus are provided:

Date:

[Month]

Enter a value from 1 to 12 to correspond with the number of the month.

January = 1	May = 5	September = 9
February = 2	June = 6	October = 10
March = 3	July = 7	November = 11
April = 4	August = 8	December = 12

[Day]

Enter a number 1 – 31 to correspond with the day of the month.

[Year]

Enter a four digit number for the year.

Date Format - You may choose from the following list:

- US - (Month/Day/Year format)
- Europe - (Day/Month/Year format)

Time:

[Hour]

Enter a value from 0 to 23 (military time format) to represent the current hour. Refer to the following:

1 AM = 1	7 AM = 7	1 PM = 13	7 PM = 19
2 AM = 2	8 AM = 8	2 PM = 14	8 PM = 20
3 AM = 3	9 AM = 9	3 PM = 15	9 PM = 21
4 AM = 4	10 AM = 10	4 PM = 16	10 PM = 22
5 AM = 5	11 AM = 11	5 PM = 17	11 PM = 23
6 AM = 6	12 AM = 12	6 PM = 18	12 PM = 0

[Minutes]

Enter a value from 0 to 59 to represent the current minute.

PANEL HEATER

The Q6 and Q5 processor boards are equipped with a temperature sensor. The panel has an operational temperature range that should be maintained, and is documented in the specifications document. The following is provided:

Panel Temperature

This value shows the current temperature being read on the control board. If the panel has the optional panel heater installed, use the following two setpoint boxes to maintain the panel temperature in a range between two specified values:

On

Enter the value that represents the temperature that you wish to it to energize at.

Off

If the panel has the optional panel heater installed, enter the value that represents the temperature that you wish to it to de-energize at.

LANGUAGE / UNITS

The following pop-up menus have been provided:

Language - You may choose from the following list:

- English
- Spanish
- Portuguese
- Polish
- Traditional Chinese
- Simplified Chinese

Pressure Units - You may choose from the following list:

- kpaA
- Bar
- BarA
- PSIA
- PSIG
- kpaG

Temperature Units - You may choose from the following list:


- Celsius
- Fahrenheit

SCREEN CLEAN MODE

A timer setpoint box has been provided:

Timeout - This timer will begin to time after the Screen Clean Mode has been activated. If the user does not manually exit the Screen Clean Mode intentionally before this timer times out, the Screen Clean Mode will be cancelled and the display will be returned to the Home screen.

SYS CONFIG – EMAIL

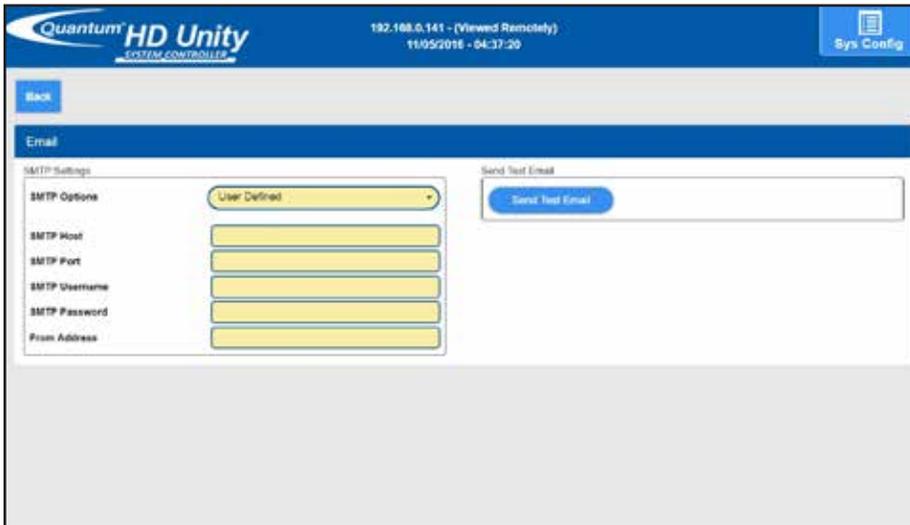

DESCRIPTION: Use this screen to setup the Email Notifications parameters. This screen should be setup by an individual from the IT department who is familiar with these settings.

The following areas appear on this screen:

- SMTP Settings (Simple Mail Transfer Protocol)
- Send Test Email

SMTP Settings provides the following options:

- **No Authentication** - This allows the user to add their SMTP server that does not require authentication
- **Factory** - This is the default setting that has an SMTP server predefined. No setup is needed.
- **User Defined** - This allows the user to add their SMTP server information.

Quantum™ HD Unity comes defaulted with the Factory settings enabled for easy setup.

SMTP Setting options for User Defined

- **SMTP Host** - The address of the server
- **SMTP Port** - Typically 25, 2525 or 587
- **SMTP Username** - Enter the User name for this email account
- **SMTP Password** - Enter the password for this email account
- **From Address** - The email address the notification will come from

NOTE: Before the Email Notification feature can be utilized, you must first create Users profiles and setup their preferences on the *Security* screen. Refer to *Sys Config - Security*.

Once all SMTP Settings are configured Security Users have been configured with Email Addresses, click the [SEND TEST EMAIL] button to ensure you get an email. If you do not get an email, there could be something being blocked on your network.

Email Notifications Setup

Notifications is a Quantum HD Unity System process that sends out emails to a set group of users based on that user's security level and those user's contact email Addresses. It sends out two types of emails, Alarms and Events. The Notification process will query a set timed variable to determine how often to check to see if an Alarm or Event exists since the last time an email was sent. The method of sending out these email notifications can vary per organization so there are several options for you to choose from.

Please note, the panel MUST have internet access for this feature to work.

Email Setup - Contact (Receiver) Addresses -

1. Before enabling Notifications, please ensure email addresses are attached to each User that should receive the email notifications.
2. Navigate to your product's overview screen.
3. Touch or click the "Sys Config" button.
4. Touch or click the "Security" button.
5. Click on the desired User to Edit. Then ensure there is a valid email address in the "Email Address" field.

Notifications Setup -

Once all of the email addresses have been setup in Security, Notifications can be enabled in the system:

1. Touch or click the "Menu" button.
2. Touch or click "Configuration"
3. Touch or click "Notifications"
4. From here you can add Security Groups to Alarms and Events. Anyone in a particular Security Group will receive the emails/notifications. Basic, Operator, Service are the Security groups that can receive notifications.

Note: See "Configuration - Notifications" on page 86 for display screen reference.

Email addresses should be setup in Security that are tied to each group.

EXAMPLE SETUP

There are 2 users in the system; Joe and Bob. Joe is configured as an "Operator" and Bob is at the "Service" level. Joe should only receive Alarms, but Bob should receive Alarms and Events.

- **Joe (Operator)** - The "Operator" group should be added to "Alarms" to setup Joe's email notifications.
- **Bob (Service)** - The "Service" group should be added to "Alarms" and "Events" to setup Bob's email notifications.

5. Once a group has been added, it can be removed by clicking the Remove This Group button next to the group that should stop receiving notifications.
6. Notifications can be disabled or enabled globally. To do this, click on the email link and select Enable/Disable from the dropdown. Email notifications will not get sent out unless this feature is set to "Enabled."
7. There are several SMTP options when sending notifications. No Authentication, Factory, User Defined.

No Authentication - You want to use your own SMTP Server and your SMTP Server does not require authentication, enter the Host, Port, Username and specify an From Address which would be the email address the notification will come from.

EXAMPLE SETUP

SMTP Options: No Authentication
SMTP Host: mail.yourserver.com
SMTP Username: user@yourserver.com
From Address: reports@yourserver.com

** Once your information has been entered, click "Send Test Notification" to ensure the email goes through successfully.

Factory - You will utilize the Frick Controls provided SMTP Settings. If your organization does not have access to a SMTP server or the expertise to set one up, allow Frick Control to handle the burden. Frick Controls uses an Amazon SES (Simple Email Service) which takes care of sending email for your organization.

When using the Factory SMTP option, email notifications will come from notifications@frickcontrols.com.

NOTICE

To use the Frick Controls "Factory" setting, the email address "notifications@frickcontrols.com" must be used. Notification emails cannot be sent from a different address when selecting "Factory."

To ensure the contact receives delivery of these emails, the contact should setup notifications@frickcontrols.com as a Safe-Sender.

SETTING UP A "SAFE SENDER" IN MICROSOFT OUTLOOK

To begin, click Junk in the Delete section of the Home tab and select Junk Email Options from the drop-down menu. On the Junk Email Options dialog box, click the Safe Senders tab, then click Add.

On the Add address or domain dialog box, enter an email address or a domain name (such as frickcontrols.com) in the edit box and click OK.

** Once your information has been entered, click "Send Test Notification" to ensure the email goes through successfully.

User Defined - You want to use your own SMTP Server and also require the emails to utilize encryption via TLS/SSL. Enter the Host, Port, Username, Password and specify a From Address which would be the email address the notification will come from.


TLS (Transport Layer Security) and SSL (Secure Sockets Layer) are protocols that provide data encryption and authentication between applications and servers in scenarios where that data is being sent, such as checking your email. The terms SSL and TLS are often used interchangeably or in conjunction with each other (TLS/SSL), but one is in fact the predecessor of the other.

EXAMPLE SETUP

SMTP Options: User Defined
SMTP Auth: SSL
SMTP Host: mail.yourserver.com
SMTP Port: 465
SMTP Username: user@yourserver.com
SMTP Password: *****
From Address: reports@yourserver.com

** Once your information has been entered, click "Send Test Notification" to ensure the email goes through successfully.

The following is an example of what an email notification will look like: (MS Outlook)

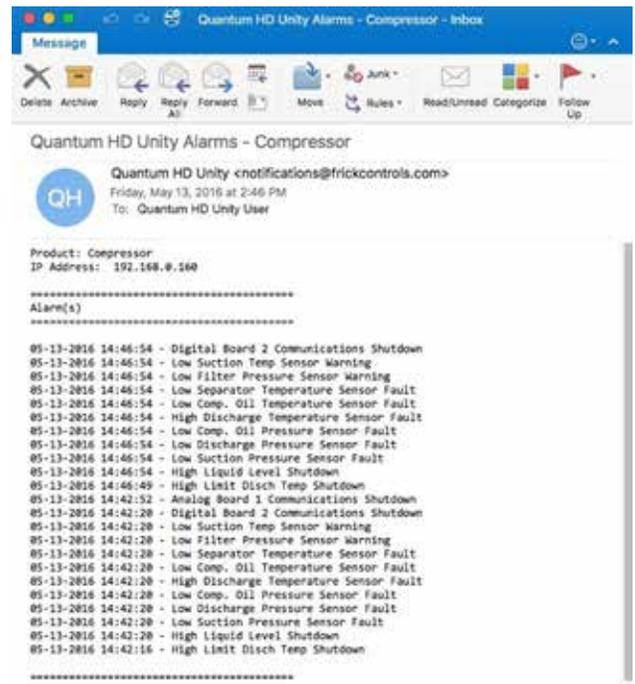

Email Setup - System Query Settings -

1. Email Settings – You can determine how often the system will be queried. The allowable range is 5 MIN to 1440 MIN. This is not how often emails will be sent, but how often the system will check for available emails to be sent.
2. Send Test Notification – This will allow you to send a test which will verify that your SMTP Settings are correct.


Note: See “Configuration - Notifications” on page 86 for display screen reference.

<p>EMAIL SETUP - SYSTEM QUERY EXAMPLE</p> <p>“Send Email Every” is set to “5 MIN”</p> <p>A. An Alarm occurs at 9:56 PM An email notification is sent at 10:00 AM.</p> <p>B. The next Alarm occurs at 11:42 AM. The next Alarm email notification is sent at 11:45 AM.</p>

Troubleshooting Email Notifications

SYMPTOM	POSSIBLE CAUSES	CORRECTIONS
Email Notifications Are Not Being Received/ Not Sending	There hasn't been an Alarm or Event since the last notification email was sent. Emails only get sent when either a new Alarm or Event has been added to the system.	N/A
	Either the notification emails are being categorized as SPAM or JUNK, or your email server is blocking the notifications@frickcontrols.com address.	If you click the “Send Test Notification” button and the test email does not come through then verify your SMTP Settings with your network administrator. When using the “Factory” settings, follow the “Safe Sender” directions to ensure your email server is not blocking “notifications@frickcontrols.com.” Check any SPAM or JUNK folders and report the email as “Not Junk” so future emails aren't redirected.
	A valid email address is not attached to the user account.	In the settings under Sys Config>Security add in an email address for the contact or user.
	A Notification Group has not been setup for the type of notification (Alarm/Event.)	Add that user's group through the “Groups” tab under Configuration>Notifications. Make sure the feature is Enabled.
	The panel is not connected to the internet.	A panel may be networked internally without being externally connected to the internet. The panel must have internet access to send emails. Verify your connection with your network administrator.

SECTION 3 OPERATING DISPLAY SCREENS

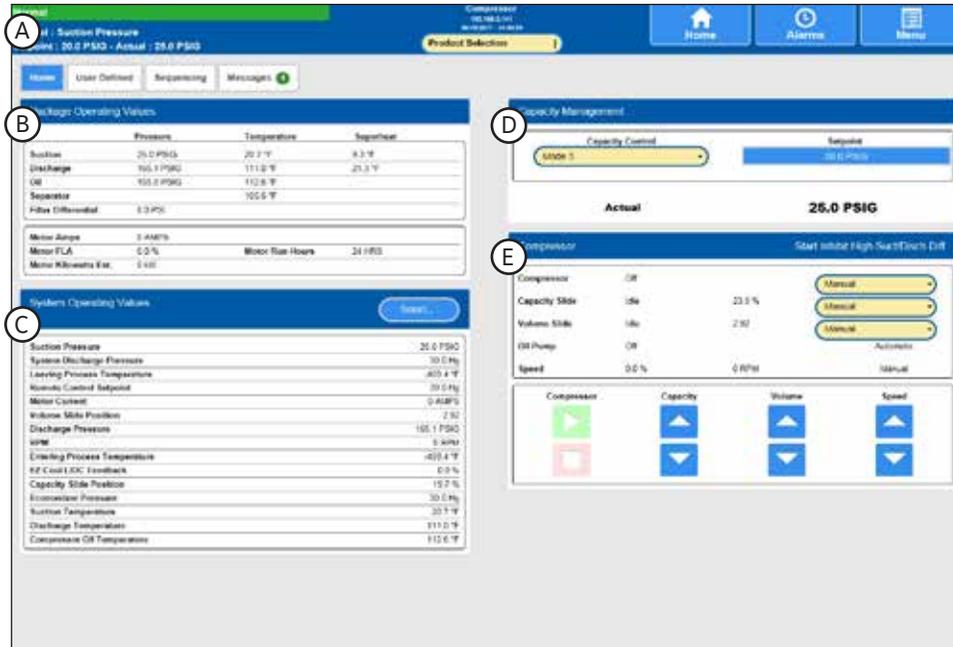

- A. Header
- B. Package Operating Values
- C. System Operating Values
- D. Capacity Management
- E. Compressor

Overview

DESCRIPTION: The default screen (also called the Home screen) will appear once the Quantum™ HD has booted. The most important information about the compressor and the applicable subsystems operation is displayed here. The Operating Status screen is continuously updated and provides a variety of information with regard to the current condition and performance of the compressor unit and subsystem. This screen is divided into five sections:

HEADER - The Header area appears at the very top of the screen and is common to all screens. Each screen Header provides the same information, as well as a method of accessing additional screens. The information and access features appear here:

Normal/Warning/Shutdown Status Bar - If either a Warning or Shutdown condition is encountered, it will be notified with white text on a red background in the upper left corner of the Header, as shown on the screen above. If there are no warnings or shutdowns, this area will display Normal in white text on a green background. To view what Warnings or Shutdowns are active, press the **[Alarms]** icon.

The definitions for the two messages are:

- **Warning** - A message appears when a warning is present. The message indicates that a warning setpoint has been reached, or exceeded, and requires operator acknowledgement - but allows the compressor to continue to run if it is already running.
- **Shutdown** - A message appears when a shutdown has occurred. The message indicates that a shutdown setpoint has been reached, or exceeded, and requires an operator to acknowledge, and causes the compressor to shut down.

Panel Name - If a customized panel name has been entered for the panel, it will appear at the very top center of the Header. To change the Panel Name, perform the following icon selections: Select the **[Menu]** icon > **[Configuration]** > **[Compressor]**.

The Compressor screen will now be shown. In the box that is entitled Compressor Info, is a line called Compressor Name. To the right of Compressor Name is a setpoint box. By clicking on this setpoint box, a keypad will appear allowing the name to be changed.

- **Control** - This will display the current control mode. In the case of the screen shown, it is Suction Pressure.
- **Setpoint** - This will display the setpoint value that has been assigned for the Control.
- **Actual** - This will show the Actual value of the Control input.
- **Date** - The actual date will be displayed at the center of the Header, to the left of the time. The date must first be set correctly on the Configuration screen. Once set, the date will be automatically adjusted for at the end of each month, much like the calendar feature of most modern watches. The primary use of the date feature is to provide a date stamp for Warnings and Shutdowns.
- **TIME** - The actual time will be displayed in this box. The time must first be set correctly on the Configuration screen. The time will also need to be adjusted for those locations which observe Daylight Savings Time. The primary use of the time feature is to provide a time stamp for Warnings and Shutdowns.

PACKAGE OPERATING VALUES - This box area will show certain critical package transducer and sensor readings. Temperature and pressure information as well as motor related data will be constantly monitored and shown. If additional are required to be viewed from this screen, they may be setup and viewed in the *System Operating Values* box.

The following information is displayed:

Suction

Pressure - Is measured at the compressor inlet and the value is displayed along with the unit of measure.

Suction Temperature - Is measured at the compressor inlet and the value is displayed along with the unit of measure.

Superheat - The temperature of the gas at saturation temperature for a given period of time. Superheat is the term used to describe the difference between the vapor point (i.e., the temperature at which the refrigerant evaporates at a given pressure) and the actual temperature of the refrigerant gas entering the compressor .

Discharge

Pressure - Is measured at the compressor outlet and the value is displayed along with the unit of measure.

Temperature - Is measured at the compressor outlet and the value is displayed along with the unit of measure.

Superheat - The temperature of the gas at saturation temperature for a given period of time. Superheat is the term used to describe the difference between the vapor point (i.e., the temperature at which the refrigerant evaporates at a given pressure) and the actual temperature of the refrigerant gas exiting the compressor.

Oil

Pressure - The Oil Pressure is measured prior to entering the compressor and the value is displayed along with the unit of measure.

Temperature - The Oil Temperature is measured prior to entering the compressor and the value is displayed along with the unit of measure.

Separator

Temperature - The Oil Separator Temperature value is displayed along with the unit of measure.

Filter Differential - If applicable.

Pressure - Shows the pressure drop across the oil filter. The main oil injection oil filter pressure drop value (differential) is displayed along with the unit of measure.

Economizer - If applicable.

Pressure - The Economizer Pressure is measured and the value is displayed along with the unit of measure.

Motor Amps - The actual motor amps.

Motor Recycle Delay - This message shows the remaining time in minutes for Recycle Delay. If the compressor has started and shuts down within the recycle time delay setpoint period, the Recycle Delay will prevent the compressor from starting until the delay time expires. This time delay is intended to prevent damage to the compressor motor from successive restarts.

NOTICE

The remaining recycle delay time can be cleared from the Motor screen.

Motor %FLA - The percentage of the drive motor full load amperage rating that the motor is currently using: % (FLA x SF)

Motor Run Hours - The total amount of time in hours that the compressor motor has run.

Motor Kilowatts Est. - The actual calculation of the kilowatt usage of the compressor motor. It is based on the calculation of $KW = (\sqrt{3} \times V \times A \times PF) / 1000$.

SYSTEM OPERATING VALUES -

This box area allows the user to customize up to six pre-defined data channels to display and monitor. Use this box to show additional channels that you wish to monitor that aren't already provided in the other areas of this screen. To assign these channels, press the **[Select Data]** icon.

A menu will appear showing the pre-defined possible data channels. Simply click on the channel that you wish to add (**NOTE: A maximum of six may be selected at the same time**):

- Auxiliary Analog A-T
- Balance Piston Pressure
- Capacity Slide Position
- Compressor Oil Pressure
- Compressor Oil Temperature
- Compressor Vibration – Discharge
- Compressor Vibration – Suction
- Discharge Pressure
- Discharge Temperature
- Economizer Pressure
- Filter Pressure
- Intermediate Pressure
- Kilowatts
- Main Oil Injection Pressure
- Manifold Pressure
- Motor Current
- Motor Stator #1 - #3
- Motor Temperature – Opposite Shaft Side
- Motor Temperature – Shaft Side
- Motor Vibration – Opposite Shaft Side
- Motor Vibration – Shaft Side
- Oil Separator Temperature
- Process/Brine Temperature Entering
- Process/Brine Temperature Leaving
- RPM
- Remote Capacity Position
- Remote Control Setpoint
- Suction Pressure
- Suction Temperature
- System Discharge Pressure
- Volume Slide Position
- Vyper Coolant Temperature (if installed)

CAPACITY MANAGEMENT

Capacity Control - A drop down selection box is provided to select and display one of the following:

- Mode 1
- Mode 2
- Mode 3
- Mode 4

Setpoint - A setpoint box is provided to allow the user to set the value at which to control to. This value is also shown in the Header on all screens.

Actual - This will show the Actual value of the Control input. This value is also shown in the Header on all screens.

COMPRESSOR (Current Start Status is shown)

Start Status - One of the following messages may be shown:

Ready - The Compressor is ready to start.

Start Inhibit In Shutdown - Compressor is not able to start. A Shutdown alarm is present. A Start command is required when the unit is in Ready status.

Start Inhibit In Recycle Delay - Compressor is not able to start. The Compressor Recycle Delay time is timing out. A Start command is required when in the unit is in Ready status.

Start Inhibit High Discharge Temperature - Compressor is not able to start. The Discharge temperature is above it's Shutdown setpoint. A Start command is required when in the unit is in Ready status.

Start Inhibit High Oil Temperature - Compressor is not able to start. The Oil temperature is above it's Shutdown setpoint. A Start command is required when in the unit is in Ready status.

Start Inhibit Low Separator Temperature - Compressor is not able to start. The Separator temperature is below it's Shutdown setpoint. A Start command is required when in the unit is in Ready status.

Start Inhibit Slide Valve Too High - This will set the Compressor Run Status to Starting status and then transition to Running when the Slide Valve is below the "Highest Capacity To Permit Starting" setpoint.

Start Inhibit Still In Prelube - A Start command has already been sent. The Compressor Run status is Starting and will transition to Running when the oil pump pre-lube is complete.

Start Inhibit High Suction Pressure - The Compressor is not able to start. The Suction pressure input is at its high end of the sensor range. A Start command is required when in the Ready status.

Start Inhibit High Suction/Discharge Differential - The Compressor is not able to start. The Suction/Discharge differential pressure is above the "Start Differential" setpoint. A Start command is required when in a Ready status.

Start Inhibit Permissive Start - The Compressor is not able to start. The Permissive Start input is off. A Start command is required when in a Ready status.

Start Inhibit Digital Auxiliaries - This will set the Compressor Run Status to Starting status and then transition to Running if the Digital Auxiliary input is On before the end of the delay time.

Power Fail Restart - The Compressor is not able to start. Power Fail Restart is enabled and delay timer has not timed out. This only occurs in Compressor Auto Mode. A Start command is required when in a Ready status.

Start Inhibit Low Oil Pressure - This will set the Compressor Run Status to Starting status and then transition to Running when the Oil Pressure is 10 PSI above the Low Oil Pressure Shutdown setpoint. This is only used with "Other Manufacturer" compressor type.

Running - A Start command has already been sent, and the Compressor is running.

Start Inhibit In Discharge Pressure Blowdown - The Compressor is not able to start. This is only used on RCSI systems.

Start Inhibit Separator Condensing

Compressor - Shows the present operating status of the compressor and from what source it has been initiated:

- Off
- Running
- Starting
- Stopping
- Stopping - High Capacity
- Stopping - Pumpdown
- Stopping - Cool Down Period

A drop down menu icon is provided to select from the following Compressor controls options:

Manual - A compressor manual start or stop command was sent.

Automatic - The compressor auto command was sent. The compressor starting and stopping is being controlled from automatic cycling control setpoints at the panel. The automatic cycling control setpoints of the active capacity control are used.

Remote Comm - The compressor remote communications command was sent. The compressor starting and stopping is through the serial Comm3 channel.

Remote IO - The compressor remote I/O command was sent.

Remote Seq - The compressor remote sequencing command was sent.

NOTICE

If there is a shutdown in response to a safety setting, a compressor in Remote or Automatic mode is placed into Manual mode requiring operator intervention.

Capacity Slide - Shows the current status of the Capacity Slide as either Idle, Load or Unload - along with the percentage. A drop down selection box is provided to select what source to use to control the Capacity Slide Valve.

- Manual
- Automatic
- Remote Comm
- Remote IO
- Remote 4-20 Input
- Remote Seq

Volume Slide - Shows the current status of the Volume Slide as either Idle, Increase or Decrease - along with the percentage. A drop down selection box is provided to select what source to use to control the Volume Slide Valve.

- Manual
- Automatic

Oil Pump - (If selected in Configuration) - The On or Off message is shown for the status of the oil pump. The Manual or Auto message is shown to indicate the position of the HAND-OFF-AUTO switch. If dual pump control was enabled in Configuration, the lead pump (either Oil Pump 1 or Oil Pump 2) is shown.



The lower half of the Compressor box shows three columns of interactive buttons, which duplicate the functions of the physical keypad buttons:

- Compressor
- Capacity
- Volume

NOTICE

A fourth set of buttons may be present if a variable speed drive is selected, to increase or decrease the motor speed.

HOME – USER DEFINED

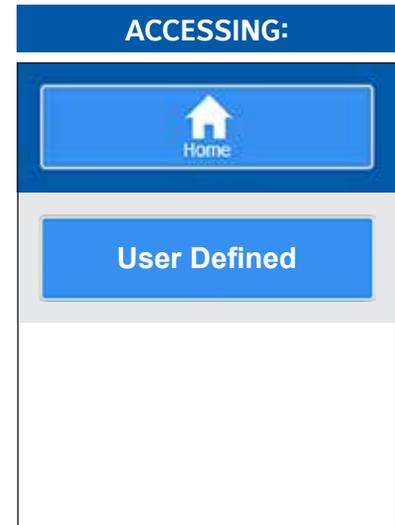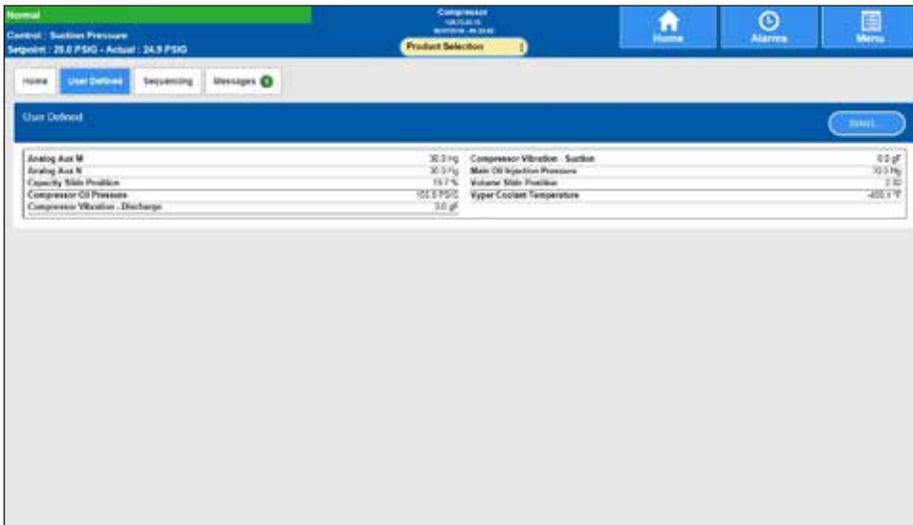

DESCRIPTION: The purpose of this screen is to allow the user to assign additional analog channels to be more readily viewable. Since the main Operating Status screen is capable of only showing a limited number of preassigned analog values, it may be desirable for the user to have a method of viewing additional information that they can select, on a common screen.

This screen is provided to allow the user to view up to 51 different analog channels of their choosing.

As an example of how this screen works, assume that in addition to the data that is shown on the Operating Status screen, the user would like to monitor the Capacity Slide Position, Auxiliary Analog Channel 1 and Compressor Vibration –Suction, all on the same screen (this one). Notice that Capacity Slide Position is already shown on the Operating Status screen, but the user would also like to see Auxiliary Analog Channel 1 and Compressor Vibration –Shaft Side on the same screen. In order to set this screen up this way, the user would select the [Select Data] button, and on the pop-up menu that appears, simply select the additional channels that you wish to view. Once selected, a check will appear in the box to the left of the channel selected. When finished, simply select the **[Save Data Points]** button to exit the menu and return to the *User Defined* screen. The changes you made will now appear.


The following selections may be shown on this screen:

- Auxiliary Analog A-T
- Balance Piston Pressure
- Capacity Slide Position
- Compressor Oil Pressure
- Compressor Oil Temperature
- Compressor Vibration – Discharge
- Compressor Vibration – Suction
- Discharge Pressure
- Discharge Temperature
- Economizer Pressure
- Filter Pressure
- Intermediate Pressure
- Kilowatts
- Main Oil Injection Pressure
- Manifold Pressure
- Motor Current
- Motor Stator #1 - #3
- Motor Temperature – Opposite Shaft Side
- Motor Temperature – Shaft Side
- Motor Vibration – Opposite Shaft Side
- Motor Vibration – Shaft Side
- Oil Separator Temperature
- Outside Air Temperature
- Outside Relative Humidity
- Process/Brine Temperature Entering
- Process/Brine Temperature Leaving
- RPM
- Remote Capacity Position
- Remote Control Setpoint
- Suction Pressure
- Suction Temperature
- System Discharge Pressure
- Volume Slide Position

NOTICE

The screens that follow throughout the remainder of this manual are accessed from the Navigation Menu, and availability may be restricted by assigned privilege level, or installed options.

EVENTS

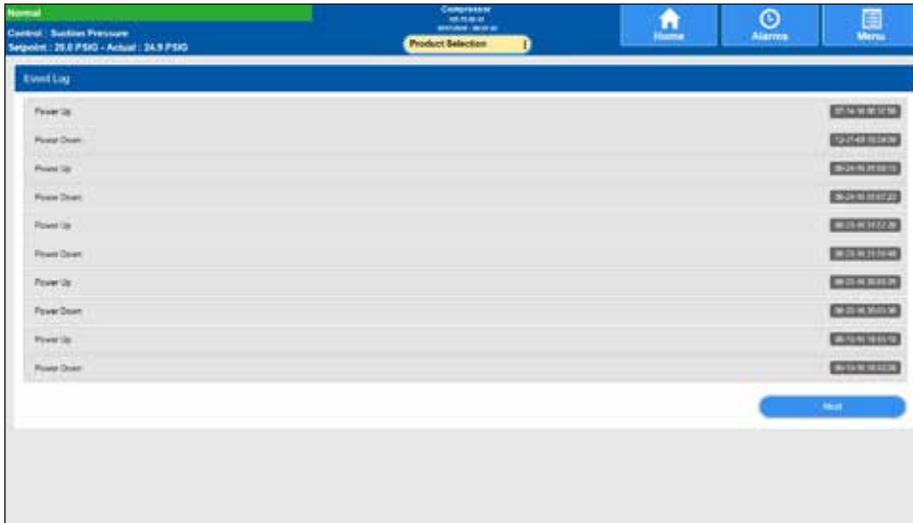

ACCESSING:



EVENTS:



The "Events" page displays recorded events such as power down and power up times. Touch the Next button in the lower right to view earlier events that do not appear on this screen.

DESCRIPTION: This screen is used to log certain messages and events that are generated through normal unit operation. Occurrences such as normal power up and power down sequences, as well as all maintenance schedule messages (see the Service > Maintenance > Factory screen for more information on these messages).

The left side of this screen is numbered for each event which has occurred. Under the Event heading, the specific event will be shown that caused a normal system event.

The column at the right side of the screen shows the date and the time of the event. It is very important to ensure that the correct Date and Time are set, so that the Events that are logged here are accurately represented.

TRENDING - HISTORICAL TRENDING

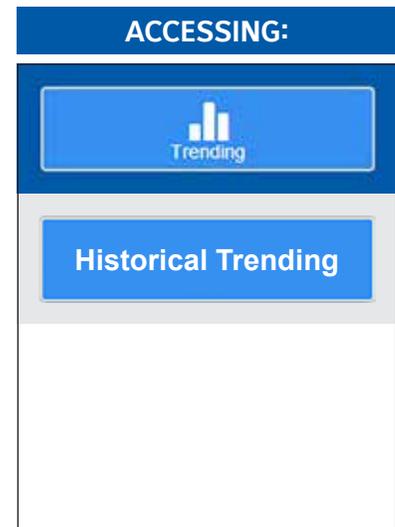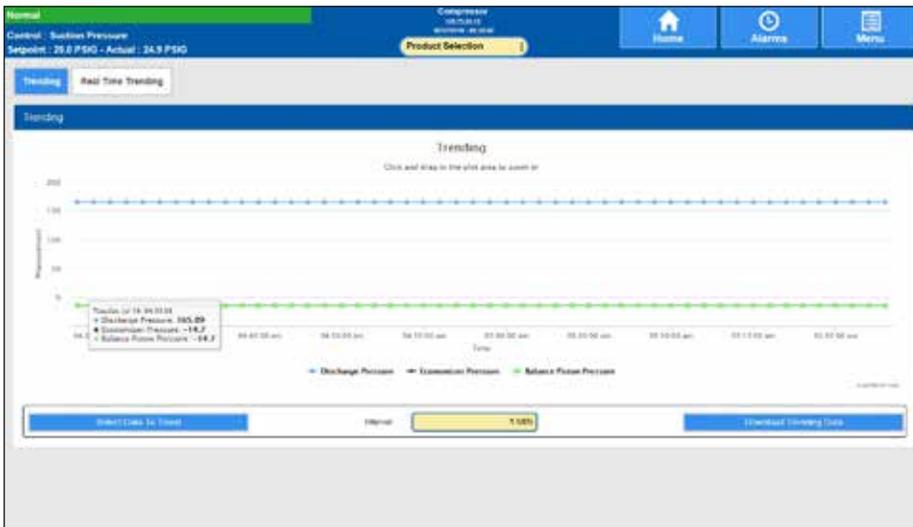

DESCRIPTION: The Trending screen is accessible from the Main Menu by pressing **[Trending]**. This screen will display in a graphical chart format, the data values as selected on the Real Time Trending Setup screen. The selectable channels will be shown at the bottom of the screen, each in a different color. The color data values displayed in the chart correspond to the matching color of the trending channels at the bottom of the screen. A total of 20,000 data points are saved.

Trending data is stored in Flash memory. Flash memory is non-volatile and all information is retained even if the power to the panel is lost. Trending files can be downloaded to a USB thumb-drive or over an Ethernet Network and viewed in Excel.

The following button is provided:

[Select Data to Trend] - When this button has been selected, a pop up menu will appear with all of the possible data channels shown that may be trended. A check box appears at the left side of each channel, and those channels that have been selected to be trended will have this box checked. Up to ten (10) channels may be trended simultaneously.



Once selected, the value for this channel will be automatically trended and shown on the Trending graph.

Download Trending Data - Selecting this will download a spreadsheet with recent Trending data.

The following list shows the selectable analog channels that may be trended:

- Auxiliary Analog A-T
- Balance Piston Pressure
- Capacity Slide Position
- Compressor Oil Pressure
- Compressor Oil Temperature
- Compressor Vibration – Discharge
- Compressor Vibration – Suction
- Discharge Pressure
- Discharge Temperature
- Economizer Pressure
- Filter Pressure
- Intermediate Pressure
- Kilowatts
- Main Oil Injection Pressure
- Manifold Pressure
- Motor Current
- Motor Stator #1 - #3
- Motor Temperature – Opposite Shaft Side
- Motor Temperature – Shaft Side
- Motor Vibration – Opposite Shaft Side
- Motor Vibration – Shaft Side
- None
- Oil Separator Temperature
- Process/Brine Temperature Entering
- Process/Brine Temperature Leaving
- RPM
- Remote Capacity Position
- Remote Control Setpoint
- Suction Pressure
- Suction Temperature
- System Discharge Pressure
- Volume Slide Position
- Vyper Coolant

TRENDING – REAL TIME TRENDING

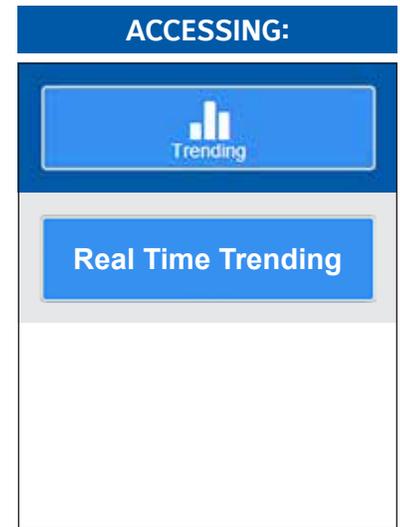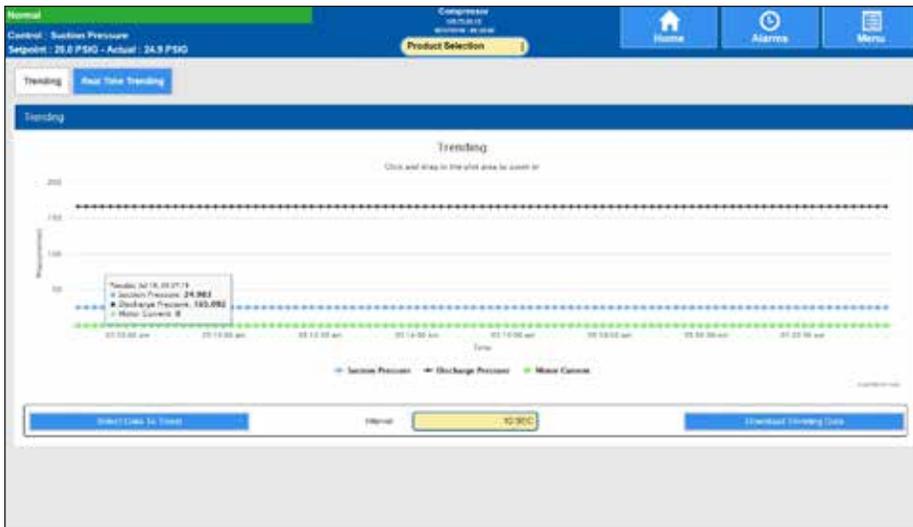

DESCRIPTION: From the Real Time Trending screen up to eight analog channels can be monitored in real time fashion in a graphical chart format (as the values are changing).

Each of the possible eight selectable channels will be shown at the right side of the screen, each in a different color. The color data values displayed in the chart correspond to the matching color of the trending channels at the right of the screen. Real Time events are lost upon each power cycle. A total of 2,000 data points are saved. Trending files can be downloaded to a USB thumbdrive or over an Ethernet Network and viewed in Excel.

The following buttons are provided:

Select Data to Trend - When this button has been selected, a pop up menu will appear with all of the possible data channels shown that may be trended. A check box appears at the left side of each channel, and those channels that have been selected to be trended will have this box checked.



Once selected, the value for this channel will be automatically trended and shown on the Real Time Trending graph.

Download Trending Data - Selecting this will download a spreadsheet with recent Real Time Trending data.

The following list shows the selectable analog channels that may be trended:

- Auxiliary Analog A-T
- Balance Piston Pressure
- Capacity Slide Position
- Compressor Oil Pressure
- Compressor Oil Temperature
- Compressor Vibration – Discharge
- Compressor Vibration – Suction
- Discharge Pressure
- Discharge Temperature
- Economizer Pressure
- Filter Pressure
- Intermediate Pressure
- Kilowatts
- Main Oil Injection Pressure
- Manifold Pressure
- Motor Current
- Motor Stator #1 - #3
- Motor Temperature – Opposite Shaft Side
- Motor Temperature – Shaft Side
- Motor Vibration – Opposite Shaft Side
- Motor Vibration – Shaft Side
- None
- Oil Separator Temperature
- Process/Brine Temperature Entering
- Process/Brine Temperature Leaving
- RPM
- Remote Capacity Position
- Remote Control Setpoint
- Suction Pressure
- Suction Temperature
- System Discharge Pressure
- Volume Slide Position
- Vyper Coolant

ABOUT

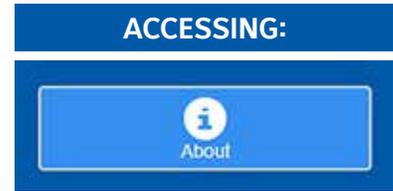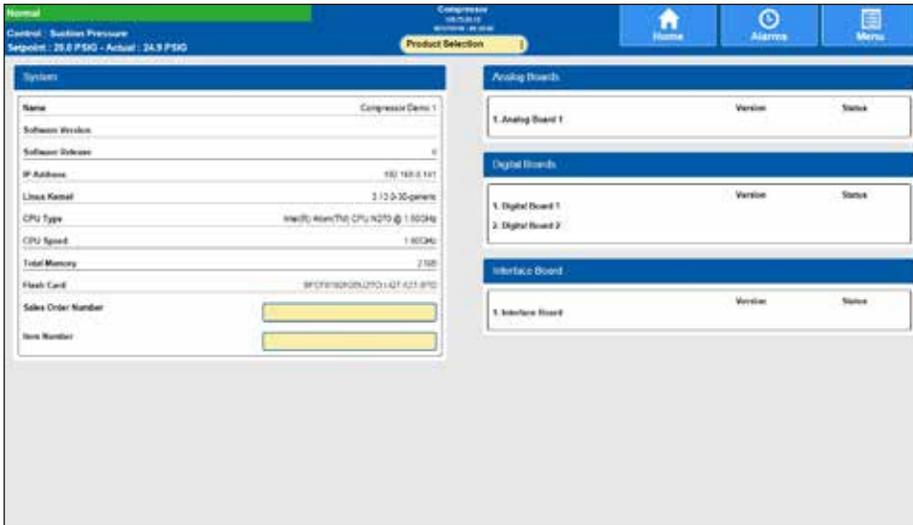

ABOUT:

The “About” page lists the software and firmware version for the processor, interface, analog and digital boards. It also lists the Sales Order and Item numbers.

DESCRIPTION: This screen shows all I/O boards that have been detected by the Quantum™ HD, as well other related software information and consists of four sections:

SYSTEM

Name - A customized name for that has been assigned for this panel.

Software Version - The version of the software program that does the actual control of the compressor. It runs in the Linux environment.

Software Release - The date that the software was released for use.

IP Address - The value shown here represents the IP (Internet Protocol) address that has been assigned to this panel.

Linux Kernel - The Quantum™ HD controller runs on a Linux programming architecture (rather than Microsoft Windows). This is the software version number for the main Linux Kernel.

CPU Type - The information that is shown here describes the CPU micro-chip that is installed on the Q6 or Q5 control board.

CPU Speed - This indicates the clock rate at which the CPU can perform at.

Total Memory - This shows the total amount of on-board memory that is installed on the Q6 or Q5 control board.

Flash Card - This value is a manufacturers identifier.

Sales Order Number - A six digit numerical value that has been assigned to a specific compressor package by Frick Company. It is very important to have this number available when calling the factory for assistance or parts ordering.

Item Number - This is actually an extension of the Sales Order number. It would potentially be used for a multiple compressor site, where the same Sales Order number was assigned for all compressors. The Item Number would be different for each compressor.

ANALOG BOARDS

Shows all analog boards that were detected through communications at the last power up. If a board is detected, the software version of the program running on that board will be shown.

DIGITAL BOARDS

Shows all digital boards that were detected through communications at the last power up. If a board is detected, the software version of the program running on that board will be shown.

INTERFACE BOARD

Shows the software version of the program running on the Interface Board board.

STATUS – VYPER INFO

Vyper Info	
Average Current	0 AMPS
Current Phase A	0 AMPS
Current Phase B	0 AMPS
Current Phase C	0 AMPS
Output Frequency	0.00
Output Voltage	0
DC Bus Voltage	0
DC Inverter Link Current	0 AMPS
Input Power	0 kW
VSD Model	0
VSD Operating Mode	OP
Trigger 30s Energized	OP
Precharge Relay Energized	OP
Water Pump Energized	OP
Vyper Coolant Temperature	40.4 °F
Actual Speed	0 RPM
Speed Command	0 RPM
Job FLA	0 AMPS
Job FLA %	0.0 %
Internal Ambient Temperature	0.0 °F
Converter Heatsink Temperature	0.0 °F
Phase A Baseplate Temperature	0.0 °F
Phase B Baseplate Temperature	0.0 °F
Phase C Baseplate Temperature	0.0 °F
Harmonic Filter Present	No
Harmonic Filter Operating Mode	OP
Total kWh	0
Standby Timer	0 SEC
Vyper Cooling Output	0.0 %

ACCESSING:

Status

Vyper Info

DESCRIPTION: This screen is used to view specific operating values of the Vyper™ drive. These values are received via communications directly from the Vyper™ drive, and populated here.

STATUS – FILTER INFO

Harmonic Filter Info			
	Leg 1	Leg 2	Leg 3
Total Harmonic Distortion	0.0 %	0.0 %	0.0 %
Total Demand Distortion	0.0 %	0.0 %	0.0 %
Filter Current	0 AMPS	0 AMPS	0 AMPS
Supply Line Side Current	0 AMPS	0 AMPS	0 AMPS
Phase Rotation Direction - ABC			
L1-N Voltage	0		
L2-N Voltage	0		
L3-N Voltage	0		
L1-L2 Voltage	0		
L2-L3 Voltage	0		
L3-L1 Voltage	0		
VSD Low Converter Heatsink Temp Fault	0		
Run Command Signal Status	0		
No Faults Signal Status	0		
Run Command Relay Status	0		
Run Acknowledge Relay Status	0		
VSD Version	0		
Baseplate Temperature			0.0 °F
DC Bus Voltage			0
Total Supply KVA			0
Total Power Factor			0.00
Precharge Contactor Energized			0
Supply Contactor Energized			0
CP To VD Timeout Errors			0
HF To VD Timeout Errors			0
VD To HF Receive Errors			0
HF To VD Checksum Errors			0
Software Reboots			0
VSD Model / Build			0

ACCESSING:

Status

Filter Info

DESCRIPTION: This screen is used to view specific operating values of the Vyper™ drive harmonic filter. These values are received via communications directly from the Vyper™ drive, and populated here.

STATUS – ANALOG

Analog	Input Channel	Input Channel	Input Channel
Input	1	2131	12
Combin 1-2	2	2633	14
All Comms	3	2536	15
Combin 1 Log	4	2937	16
Combin 1 Log	5	2131	17
Combin 1 Log	6	1936	18
Combin 2 Log	7	1868	19
Combin 2 Log	8	1867	20
Combin 2 Log	9	1868	21
Combin 2 Log	10	2204	22
Combin 2 Log	11	1901	23
Combin 2 Log	12	207	24
Modbus TCP Log	Output Channel	Output Channel	
Ethernet I/P	1	5	5
	2	5	5
	3	1021	7
	4	819	8

ACCESSING:

Analog

STATUS:
The Status page displays the real time status of the analog and digital I/O, serial comm. ports 1-3, I/O comms., Modbus TCP and Ethernet I/P.

DESCRIPTION: This screen allows the technician to view the status of all installed analog board inputs and outputs. The top section of this screen shows the analog inputs. A value displayed next to each available channel indicates a raw count that can be calculated to a DC voltage that is present as an input.

The lower half of the screen shows the analog outputs. A value displayed next to each available channel indicates a raw count that can be calculated to a DC voltage that is present as an output.

STATUS – DIGITAL



Analog	Digital Board 1	Digital Board 2
Input	12 Channel	12 Channel
Combin 1-2	1	1
All Comms	2	2
Combin 1 Log	3	3
Combin 1 Log	4	4
Combin 1 Log	5	5
Combin 1 Log	6	6
Combin 2 Log	7	7
Combin 2 Log	8	8
Combin 2 Log	9	9
Combin 2 Log	10	10
Combin 2 Log	11	11
Combin 2 Log	12	12
Modbus TCP Log		
Ethernet I/P		

ACCESSING:

Digital

DESCRIPTION: This screen allows the technician to view the status of all installed digital board inputs and outputs. An OFF status indicates that the associated input or output is not energized. An ON status indicates that the associated input or output is energized.

STATUS – COMMS 1-3

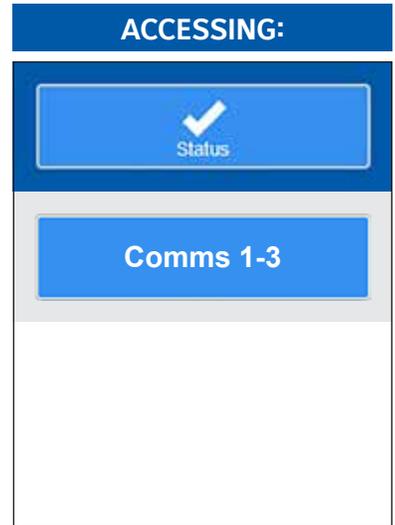
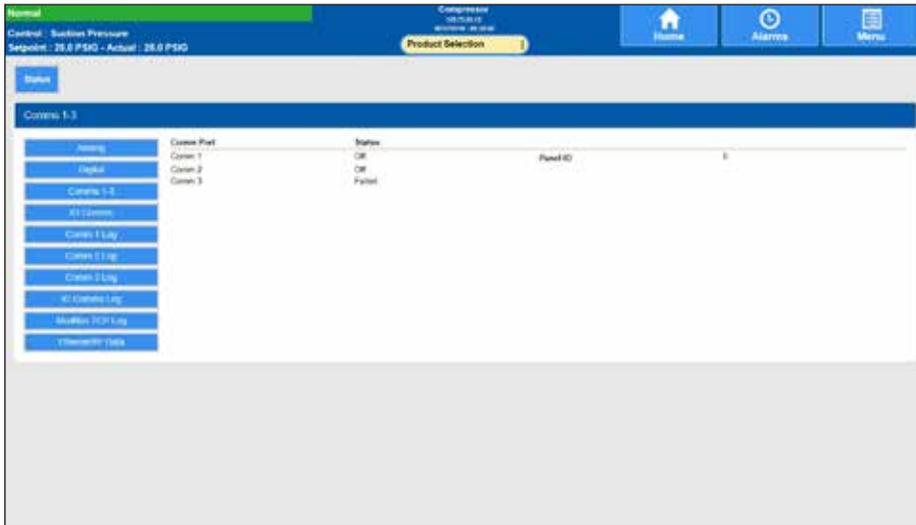


DESCRIPTION: This screen shows the current communications status of the three serial communications ports. The Panel ID number is shown at the right side of the screen:

Panel ID - This setpoint box allows for a distinctive number to be entered that will identify this unit. A number that is used by an external communications application, to converse to individual compressors. On interconnected systems, this number must be unique. Valid values are 0 - 99.

Comm1	Comm2	Comm3
• Off	• Off	• Off
• Active	• Active	• Active
• Failed	• Failed	• Failed

STATUS – I/O COMMS

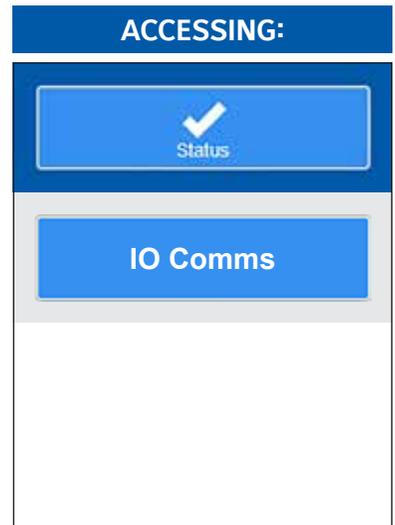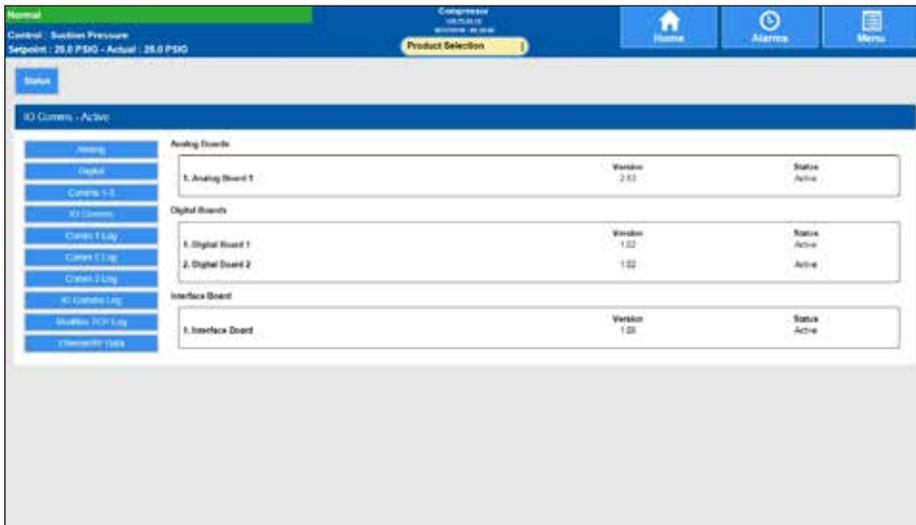

DESCRIPTION: This screen shows the currently active I/O boards that have been detected, as well as the software version of the board, and its current communication status:

Digital Boards
Shows all digital boards that were detected through communications at the last power up. If a board is detected, the software version of the program running on that board will be shown, as well as the current status for that board.

I/O COMMS (Current status is shown)



Analog Boards

Shows all analog boards that were detected through communications at the last power up. If a board is detected, the software version of the program running on that board will be shown, as well as the current status for that board.

Interface Board

Shows the software version of the program running on the Interface Board board, as well as the current status for the board.

STATUS – COMMS (1-3) LOG

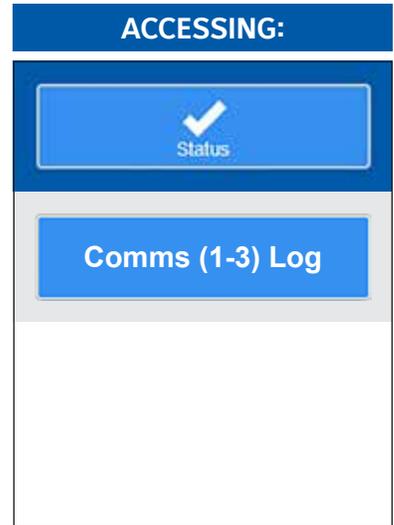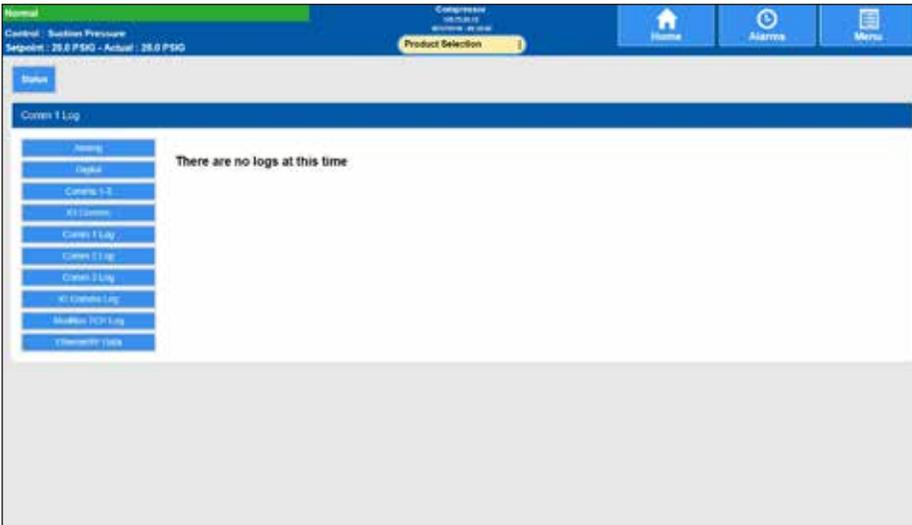

DESCRIPTION: These screens allow the technician to view all of the serial communications information via these logs that the Quantum™ HD has received and transmitted.



COMM 1 (2, 3) LOG

Simply select the Comms 1 Log, Comms 2 Log or Comms 3 Log buttons on the left side of the screen that corresponds to the port that you wish to view. The selected port name (in this case Comm 1 Log) will appear in the blue status bar.

Each time a new command is sent or received, the screen will refresh automatically.

This screen will display all data that is coming through the selected Communications (Comm) port. The top line of data is the most recent activity. At the left of each line, you should see whether the data is IN or OUT (Receive or Send), and the actual data (in Hexadecimal format). This information can be used to compare against the data being sent and received at the other end of the communications link, to verify proper operation.

STATUS – I/O COMMS LOG

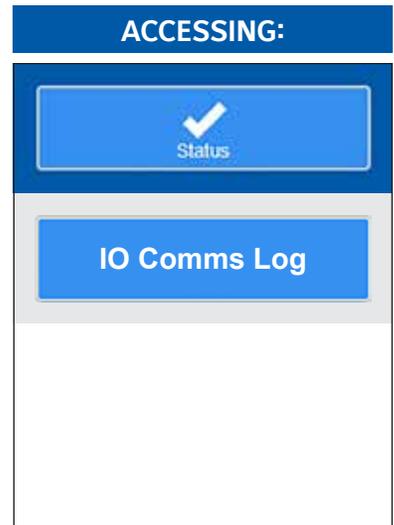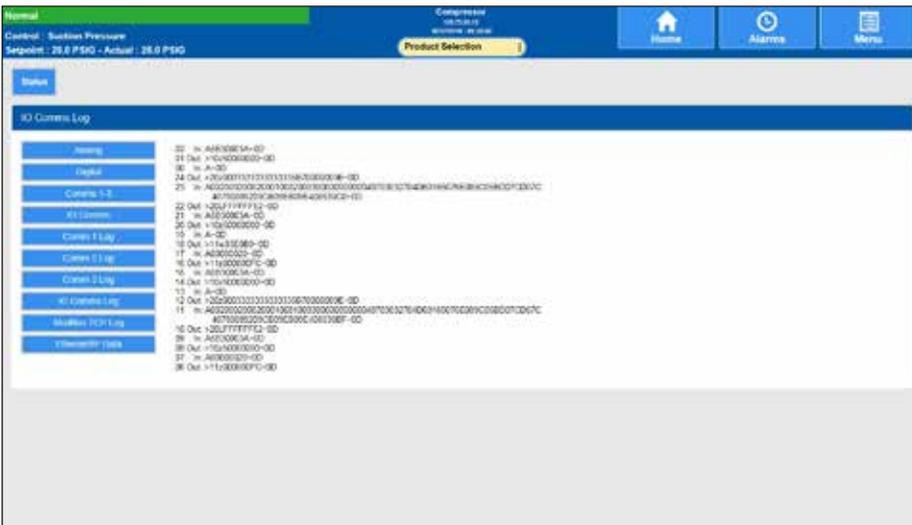


DESCRIPTION: This screen allows the technician to view all of the serial communications that the Quantum™ HD has received and transmitted.

I/O COMMS LOG

Each time a new command is sent or received, the screen will refresh automatically.



The top line of data is the most recent activity. At the left of each line, you should see whether the data is IN or OUT (Receive or Send), and the actual data (in Hexadecimal format). This information can be used to compare against the data being sent and received at the other end of the communications link, to verify proper operation.

STATUS – PANEL (MODBUS TCP LOG)

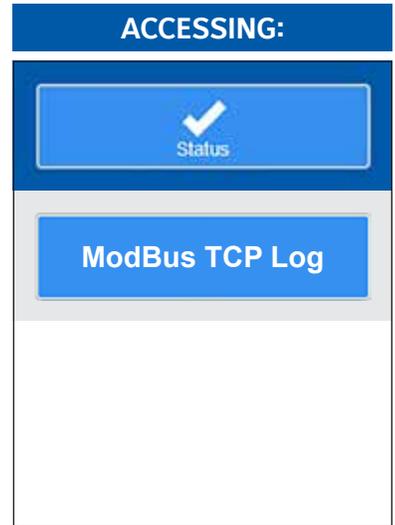

DESCRIPTION: This screen allows the technician to view the status of all ModBus TCP communications. Refer to the Communications manual for detailed information on this screen (090.040-CS).


STATUS – ETHERNET/IP DATA

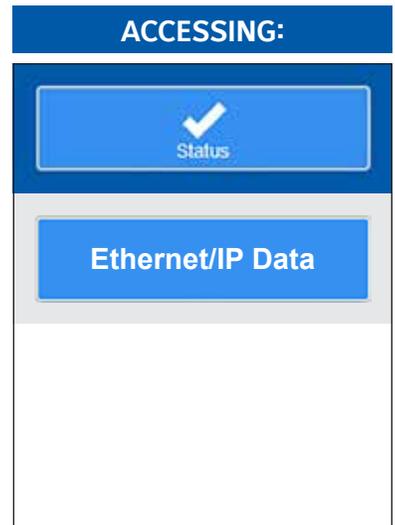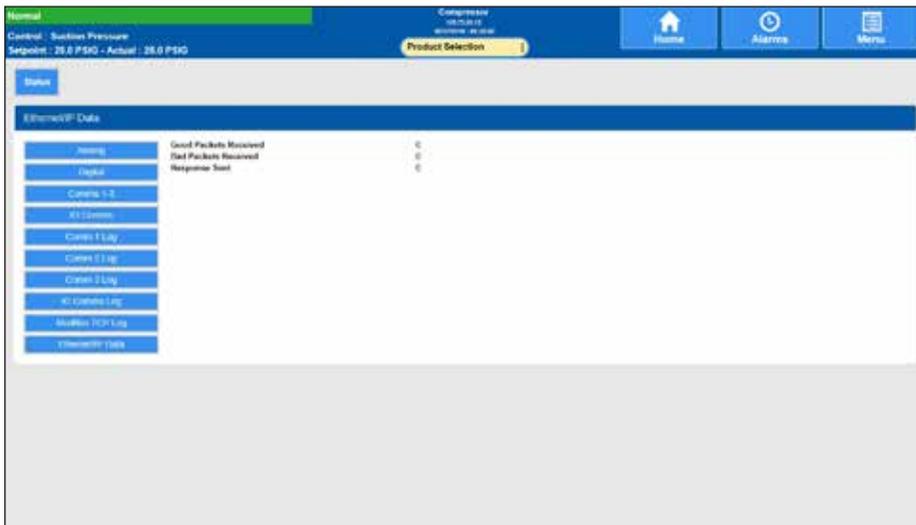

DESCRIPTION – This screen allows the technician to view the status of Ethernet/IP data.

STATUS – DBS STARTER INFO

DBS Starter Info			
DBS Software Version	0.00	DBS Current	Failed
Current Phase A	0.00 A	Heatsink Temperature	32.0 °F
Current Phase B	0.00 A	RTD Temperature	32.0 °F
Current Phase C	0.00 A	Thermal Capacity	2.5 %
Average Current	0.00 A	DBS Recycle Delay Timeout	1.000
Full Load Amps	0.00 A	Bypass Time	0.000
Starter Wiring	None	Ramp Time	0.000
Starter Size		Constant Current Level	50 %
Starting Mode		Thermal Overload Status	Disabled

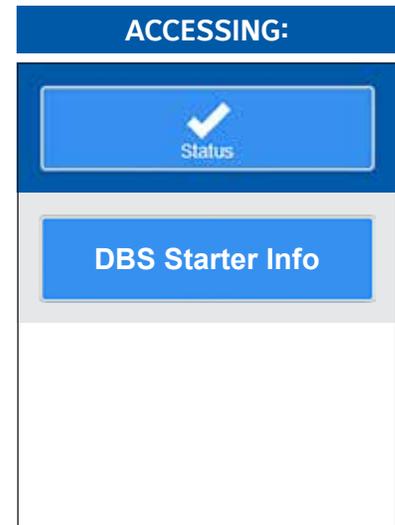


DESCRIPTION – The information shown on this screen is received directly from the DBS via communications, and represents the operational status of the DBS. These items are:

- **DBS Software Version** – If the DBS and Quantum™ HD are communicating properly, a value other than zero should be displayed here. This represents the current version of software that is running the DBS. A value of zero may indicate a communications error.
- **Current Phase (A, B, C)** – When the DBS is running, the actual current value for each of the three phases will be shown here.
- **Average Current** – This is a calculated value that represents the average current from all three phases.
- **Full Load Amps** – Motor Full Load Current (Amps) has been factory set using a switch within the DBS main control board. This switch is set based on starter size.
- **Starter Wiring** – This value is read from a switch within the DBS, and will show one of two possible types of wiring, either Delta or Inline. This is set at installation and is shown here for informational purposes only.
- **Starter Size** – This value is read from a switch within the DBS, and will show the size of the starter that is being used to control the motor. This is set at installation and is shown here for informational purposes only.
- **Starting Mode** – This value is read from a switch within the DBS, and will show whether the starter is set to run at Constant Current, or is set to Step Ramp. This is set at installation and is shown here for informational purposes only.
- **Heatsink Temperature** – This will display the value of a heatsink thermostat that is located on the DBS control board. If this thermostat opens (at 85°C), a fault will occur, and the motor will shutdown. The unit will only be able to re-start when this thermostat resets (after be allowed to cool) at 60°C.
- **RTD Temperature** – An RTD (resistive) temperature sensor is located on the DBS starter. This value is compared against the RTD Temperature Warning Level and RTD Temperature Trip Level setpoints and if the value shown exceeds either of these setpoints, either a warning or a trip will occur.
- **Thermal Capacity** – The allowable amount of thermal energy that can be absorbed before damage may occur to the motor. This value is based upon an internal calculation.
- **DBS Recycle Delay Timeout** – The motor has exceeded its Thermal Capacity and will not be allowed to start until enough time has elapsed to allow the motor to cool.
- **Bypass Time** – When the controller is set for Constant Current, a 10-position switch (SW3) on the main control board of the DBS, (adjustable from 3–30 seconds) sets the bypass time. The bypass time for Step Ramp mode is 5 seconds, plus Ramp time.
- **Ramp Time** – A 10-position switch (SW3), on the main control board of the DBS, is adjustable from 3–30 seconds and sets the time in seconds in which the current rises in the Step Ramp mode from its initial Current Step level to 500% FLA.
- **Constant Current Level** – A 10-position switch (SW2), located on the main control board of the DBS, sets the initial current step of the controller in either Constant Current or Step Ramp mode. This switch is adjustable from 200–425% FLA for smooth acceleration. When the controller is set for Constant Current, this switch sets the maximum current limit for the motor in this mode of operation. This current is maintained until the motor reaches full speed. When the controller is set for Step Ramp, this switch sets the initial current limit, and then allows the controller to continue its ramp to 500% FLA.
- **Thermal Overload Status** – If this feature has been enabled, then a trip will occur if the thermal energy stored in the motor exceeds 100% of motor Thermal Capacity. The estimated temperature of the motor windings is calculated based on the highest phase current. The overload trip level is computed based on the following setpoints: Full Load Amps, Locked Rotor Current, Stall Time, and Service Factor. A start will not be allowed until the motor has sufficiently cooled.

NOTICE
Contact Schneider Electric at 800-220-8697 with any further questions concerning the setup and operation of the RAM DBS.

ALARMS

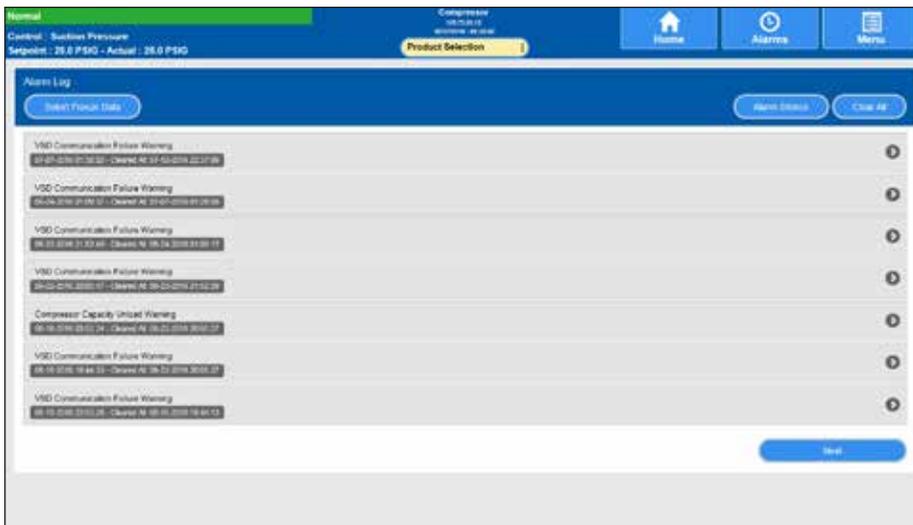

ALARMS:

The Alarms page displays current and historical alarms as well as freeze data for each alarm. Alarm Silence or Clear All alarms from this page. Freeze Data Selection is also initiated from this page. View earlier alarms by pressing the Next button.

DESCRIPTION – This screen shows the Warnings and Shutdowns that have recently occurred. When a warning or shutdown is triggered, a blue descriptive message shows on this screen. The date and time of the warning or shutdown occurrence is shown below the message. The most recent message will appear on the top line of the screen with the oldest appearing at the bottom.

The following selections appear on this screen:

Clear – Selecting this button will clear all warnings and/or shutdowns from this screen.

Next – If there are more than one page of alarms, this button will appear at the bottom right side of each page that has a page to follow.

Previous – If there are more than one page of alarms, this button will appear at the bottom left side of each page that has a page before it.


Freeze Screen					
VSD Communication Failure Warning					
Compressor Data					
Suction Pressure	25.0 PSIG	Suction Temperature	20.4 F	Discharge Pressure	164.9 PSIG
Discharge Temperature	111.2 F	Oil Pressure	155.6 PSIG	Oil Temperature	112.3 F
Filter Differential	0.0 PSI	Separator Temperature	105.4 F	Capacity Slide	23.8 %
Volume Slide	2.92	Motor Amps	0 AMPS	Frid was here	30.0 Hg
Analog Aux B	30.0 Hg	Analog Aux C	30.0 Hg	Analog Aux D	30.0 Hg
Analog Aux E	30.0 Hg	Analog Aux F	30.0 Hg	Analog Aux G	30.0 Hg
Analog Aux H	30.0 Hg	Analog Aux I	30.0 Hg	Analog Aux J	30.0 Hg
Drive Output	0.0 %	Condenser Step #1	0.0 %	Condenser Step #2	0.0 %
EZ Cool LIOC Output	0.0 %	Vyper Cooling Control Output	0.0 %		
Package Modes					
Compressor	Manual	Capacity Slide	Manual	Volume Slide	Manual
Capacity Mode	Mode 1	Setpoint	35.0 PSIG		

Selecting a message will cause the following informational box to appear:

Freeze Screen

This screen provides a snapshot of the values that were current at the time of the latest shutdown. The information on the Freeze screen can help the user to identify the cause of a fault, which occurred when no one was present. The Freeze screen freezes the information of the Operating Status screen AT THE MOMENT OF A COMPRESSOR WARNING OR SHUTDOWN.

CLEAN SCREEN MODE

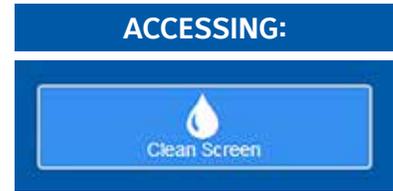

CLEAN SCREEN:

Clean Screen disables the screen for one minute for cleaning purposes. The countdown timeout is displayed on the page.

DESCRIPTION: Accessing this screen allows the user to clean the screen. When accessed, the screen touch feature is deactivated, allowing the screen to be touched in any area.

Use a pre-packaged lens or screen cleaning wipe containing isopropyl alcohol, or a spray aerosol such as Spartan® Glass Cleaner. This product quickly emulsifies and suspends surface soils and smoke film for easy removal without streaking. The formula incorporates isopropyl alcohol to provide rapid drying


and excellent film-free characteristics. Once the screen has been sprayed, wipe off the liquid with a clean, soft micro-fiber or cotton cloth.

When finished, allow the Clean Screen Mode to time out (the screen is disabled for one minute) and the display will return to the Home screen.

This feature is not available if logging in from a web browser.

NOTES

CONTROL SETPOINTS – CAPACITY CONTROL

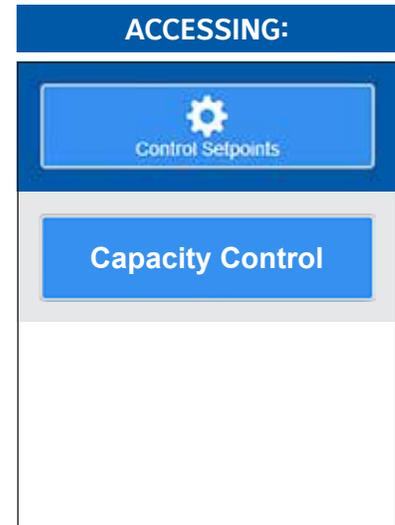

DESCRIPTION: The Capacity 1 -4 screens are identical in appearance. All setpoints having to do with Capacity Control, Autocycle, Mode Safeties and Low Suction are found here.

Capacity Control is setup by accessing the Configuration > Capacity Control screen. From that screen, the user can enable or disable any of the four possible modes, as well as select the channel that they wish to control from, and select whether the control will be Forward or Reverse acting.

MODE 1 (2, 3, 4)

The Capacity Control screen shown above displays four window areas of information:

Setpoint - This setpoint is used to control the loading and unloading of the compressor when the Capacity Control is in the AUTO (Automatic) or in REM SEQ (Remote Sequencing) modes.

Proportional Band High - A band, measured in the units of the Capacity Control setpoint, above the Dead Band High, where proportional load or unload control is used. If the actual reading rises into this proportional band the load or unload output will be pulsed as explained below in the description about proportional band.

Proportional Band Low - A band, measured in the units of the Capacity Control setpoint, below the Dead Band Low, where proportional load or unload control is used. If the actual reading falls into this proportional band the load or unload output will be pulsed as explained below in the description about proportional band.

Description Of Proportional Band Control: The Proportional Band setpoint determines a range of Capacity Control values where pulsed output control is used. Outside of the proportional band the output is continuously energized. The length of time the output will be pulsed on is proportional to the distance the actual reading is from the Capacity Control setpoint. The further the distance from setpoint, the longer the output is pulsed on and the shorter the output is off. The closer the distance to setpoint, the

shorter the output is pulsed on and the longer the output is off. If the actual reading is midpoint from setpoint, the output is on and off an equal amount of time.

Dead Band High - A band, measured in the units of the Capacity Control setpoint, above the setpoint at which the compressor will neither load nor unload.

Dead Band Low - A band, measured in the units of the Capacity Control setpoint, below the setpoint at which the compressor will neither load nor unload.

Cycle Time High - This setpoint determines the amount of time in seconds that the load or unload output is on and off, when in the upper proportional band. Refer to the description below about cycle time.

Cycle Time Low - This setpoint determines the amount of time in seconds that the load or unload output is on and off, when in the lower proportional band. Refer to the description below about cycle time.

Description Of Cycle Time: The Cycle Time setpoint determines the total amount of time for one on/off cycle, when in the proportional band. At the completion of the cycle time the actual reading and necessary response is re-evaluated. If a four second period is selected, then the following will result:

Proportional Distance (Actual Reading is From Setpoint)	Output Pulsed On (seconds)	Output Off (seconds)
0	0	4
1/4	1	3
1/2	2	2
3/4	3	1
1	4	0

If a variable speed drive is used, the VSD Proportional Band and Intergrated Time setpoints will be preset

[Proportional Band] – This setpoint determines the size of a region either above or below the Control Setpoint. Within this region, the Proportional component of the PI Output value is the number between 0% and 100% that directly corresponds to the difference between the Control Input (Actual) and the Control Setpoint (Setpoint). Outside of this region, the Proportional component is either 100% or 0%. If the PI's Action is Forward, the Proportional Band extends above the Control Setpoint. If the PI's Action is Reverse, the Proportional Band extends below the Control Setpoint.

[Integration Time] – This setpoint controls the influence that the Integral component exerts on the PI Output value. The Integral component works to push the Control Input toward the Control Setpoint by tracking the difference between the Control Input and the Control Setpoint over time.

AUTOCYCLE – The following setpoint boxes are provided:

Start – The compressor turns on when the value of the capacity control input reaches this setpoint. This setpoint is used in both AUTO (Automatic) or in REM SEQ (Remote Sequencing) modes.

Start Delay – The time in minutes that the value of the capacity control input must be above (forward) or below (reverse) the start setpoint before the compressor will start.

Stop – The compressor is stopped when the value of the capacity control input reaches this setpoint. This setpoint is used in both AUTO (Automatic) or in REM SEQ (Remote Sequencing) modes.

Stop Delay – The time in minutes that the value of the capacity control input must be below (forward) or above (reverse) the stop setpoint before the compressor will stop.

MODE SAFETIES

Load Inhibit – This setpoint prevents the compressor from loading.

Force Unload – This setpoint will actively decrease the capacity of the compressor to avoid reaching the warning and shutdown setpoints.

Warning – If the Capacity Control value is less than (forward) or greater than (reverse) this setpoint for the Warning Delay, a warning occurs.

Shutdown – If the Capacity Control value is less than (forward) or greater than (reverse) this setpoint for the Shutdown Delay, a shutdown occurs.

LOW SUCTION – The following setpoint boxes are provided (NOTE: This box will be empty if Suction Pressure has been selected as the Mode control channel):


Load Inhibit – As the suction pressure drops below this setpoint, the compressor is prevented from loading.

Force Unload – When the suction pressure reaches this setpoint, the capacity of the compressor will be decreased to avoid reaching the low warning and shutdown setpoints.

Warning – If the Suction Pressure is less than this setpoint for the Warning Delay, a warning occurs.

Shutdown – If the Suction Pressure is less than this setpoint for the Shutdown Delay, a shutdown occurs.

CONTROL SETPOINTS – PI CONTROL

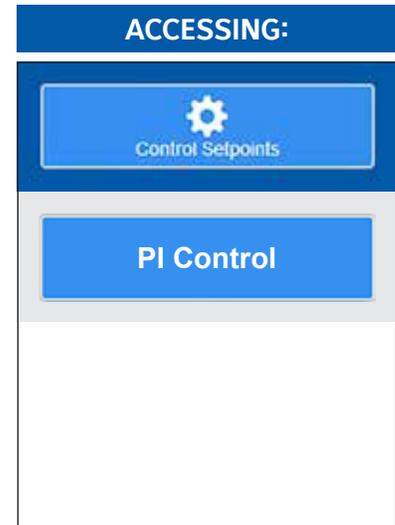

DESCRIPTION: This screen allows for certain specific setpoints to be adjusted. The following information is shown on this screen:

CHANNEL CONFIGURATION – This information is set using the Configuration > Proportional / Integral screen.

[Name] – The name of the control channel is shown here.

[Control Input] – One of the following channels will be shown here:

- Capacity Slide Position
- Volume Slide Position
- Suction Pressure
- Discharge Pressure
- Compressor Oil Pressure
- Main Oil Injection Pressure
- Economizer Pressure
- Filter Pressure
- Intermediate Pressure
- Balance Piston Pressure
- System Discharge Pressure
- Suction Temperature
- Discharge Temperature
- Compressor Oil Temperature
- Oil Separator Temperature
- Process/Brine Temperature Leaving
- Process/Brine Temperature Entering
- Remote Control Setpoint
- Motor Current
- RPM
- Kilowatts
- User defined analog inputs #1 - #10
- EZ Cool Feedback %
- User defined analog inputs #12 - #20
- Manifold Pressure
- Remote Capacity Position
- Compressor Vibration – Suction
- Compressor Vibration – Discharge
- Motor Vibration – Shaft Side
- Motor Vibration – Opposite Shaft Side
- Motor Temperature – Shaft Side
- Motor Temperature – Opposite Shaft Side
- Motor Stator #1 - #3

[Control] – One of the following control options will be shown:

- Disabled – No PID control.
- Running – PID Control only controls when the compressor is running.
- Active – PID control always active.

PI CONFIGURATION

[Action] – One of the following actions will be shown here:

- Forward – The output will increase at values greater than the Control Setpoint.
- Reverse – The output will increase at values less than the Control Setpoint.

[Setpoint] – Enter the value that you wish to control to.

[Proportional Band] – This setpoint determines the size of a region either above or below the Control Setpoint. Within this region, the Proportional component of the PI Output value is the number between 0% and 100% that directly corresponds to the difference between the Control Input (Actual) and the Control Setpoint (Setpoint). Outside of this region, the Proportional component is either 100% or 0%. If the PI's Action is Forward, the Proportional Band extends above the Control Setpoint. If the PI's Action is Reverse, the Proportional Band extends below the Control Setpoint.

[Integration Time] – This setpoint controls the influence that the Integral component exerts on the PI Output value. The Integral component works to push the Control Input toward the Control Setpoint by tracking the difference between the Control Input and the Control Setpoint over time.

[High Limit] – The highest value that the output can be is shown.

[Low Limit] – The lowest value that the output can be is shown.

[Off Value] – If the PI's Control is set to When Running, then the value shown here sets the value of the PI output when the compressor is off.

STATUS

Control Value – The Actual value of the input signal. This is not a setpoint value.

Output Value – The value of the Output signal as controlled by the PI. This is not a setpoint value.



IO SETUP

[I/O Board] – One of the following Analog Boards will be shown:

- None
- Analog Board 1
- Analog Board 2

[Output Channel] – The analog board output channel that will be used is shown here.

CONTROL SETPOINTS – CONDENSER CONTROL

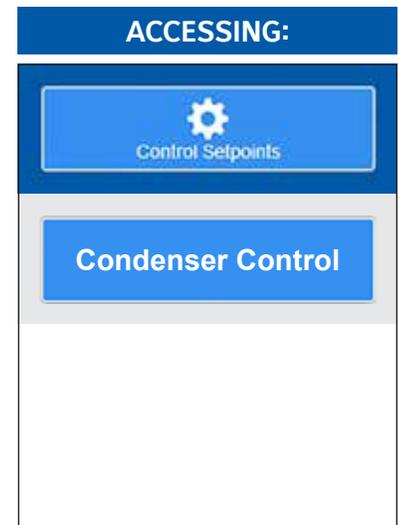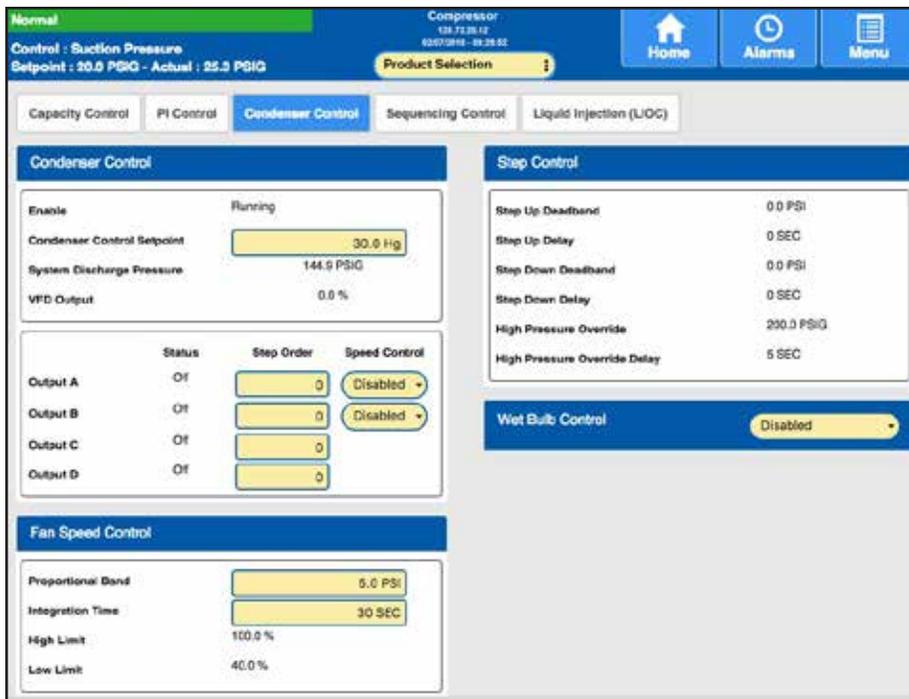

DESCRIPTION: If Condenser is enabled, this screen allows the end user to enter and view the basic operating parameters related to condenser digital operation. This information is set using the Configuration > Condenser Control screen.

The following information is shown on this screen:

CONDENSER CONTROL

Enable – Selecting this button provides the following options:

Condenser Control Setpoint – This is the value that the Condenser Control will attempt to maintain.

System Discharge Pressure – This shows the actual System Discharge Pressure.

VFD Output – This is the current VSD output as a percentage relative to the minimum and maximum VSD output settings.

[Module A - D Step Order] – The four different output modules are enabled by putting a number (1-4) into the Step Order setpoint boxes. These determine the order that the modules are turned on or off. If a Module has a 0 (zero) as its Step Order setpoint, it is disabled from the control process.

FAN SPEED CONTROL

The following setpoint boxes are provided:

Proportional Band – – The range over which the PID control will be managing the Variable Speed Fan (provided Integration Time is not set to zero, in which case it will be strictly proportional).

Integration Time – This setpoint controls the influence that the Integral component exerts on the PI Output value.

The following information is displayed

[High Limit] – The percentage of the 4-20mA signal which should be considered maximum capacity (usually 100%).

[Low Limit] – – The percentage of the 4-20mA signal which should be considered minimum capacity (usually 40%).

STEP CONTROL

[Step Up Deadband] & [Step Up Delay] – When the System Discharge Pressure stays above the combined values of the Condenser Control Setpoint plus the Step Up Deadband for the amount of time as set in the Step Up Delay, the next module in the Step Order will turn on.

[Step Down Deadband] & [Step Down Delay] – When the System Discharge Pressure stays below the difference of the values for Condenser Control Setpoint minus the Step Down Deadband for the amount of time as set in the Step Up Delay, the next module in the Step Order will turn off.

[High Pressure Override] & [High Pressure Override Delay] – When the System Discharge Pressure goes and stays at or above the High Pressure Override value for the amount of time as set in the High Pressure Override Delay, all modules will turn on.

WET BULB CONTROL

The Quantum™ HD control panel provides a Wet Bulb control strategy which has the ability to run a condenser based on current atmospheric conditions by sensing the outdoor air temperature and humidity. This technique, also referred to as floating head pressure, provides the ability to run a refrigeration system at the lowest permissible head pressure. Traditional condenser control uses a fixed head pressure that does not change with weather conditions or system load. However studies have found that allowing the condenser/head pressure to float will result in energy savings. These savings result from the compressor not working as hard. While the condenser may use more energy to achieve a lower head pressure, the reduction in energy consumption by the compressor is significantly greater, providing an overall savings.

The Wet Bulb control utilizes a humidity sensor along with a standard (dry bulb) temperature sensor. These values are combined to produce a Wet Bulb temperature. The Wet Bulb Approach temperature is then added to the calculated Wet Bulb temperature. The Approach temperature sets how close the condenser will run to the Web Bulb temperature and will be determined by the condenser and system design. Finally, the Control temperature (which is the sum of the Wet Bulb Temperature and the Approach Temperature) is converted to the saturated vapor pressure which in turn becomes the condenser control pressure. A minimum condensing pressure setpoint specifies the lowest permissible condenser control pressure.

The following selections are provided:

- **Disabled** – The Wet Bulb feature is ignored.
- **Enabled** – The Wet Bulb feature will be utilized.

The following setpoint is available (if Wet Bulb is enabled):

[Wet Bulb Approach] - This is a value to be entered by the facilities refrigeration engineer, which will be added to the Wet Bulb Temperature to determine the Control Temperature.

The following information is provided (if Wet Bulb is enabled):

Minimum Condensing Pressure - This value specifies the lowest condenser control pressure that is permitted while the wet bulb control strategy is in use.

Refrigerant - The type of refrigerant being used is shown.


Outside Air Temp. - The actual outside air temperature is shown.

Outside Relative Humidity - The actual outside relative humidity is shown.

Wet Bulb Temperature - The value shown here is the calculation of Outside Air Temperature and Outside Relative Humidity to arrive at a Wet Bulb Temperature.

Saturated Control Temperature - This is the calculated control Saturated Condensing Temperature. This value is converted to the associated pressure which serves as the control pressure setpoint.

CONTROL SETPOINTS – SEQUENCING CONTROL (ORDER)

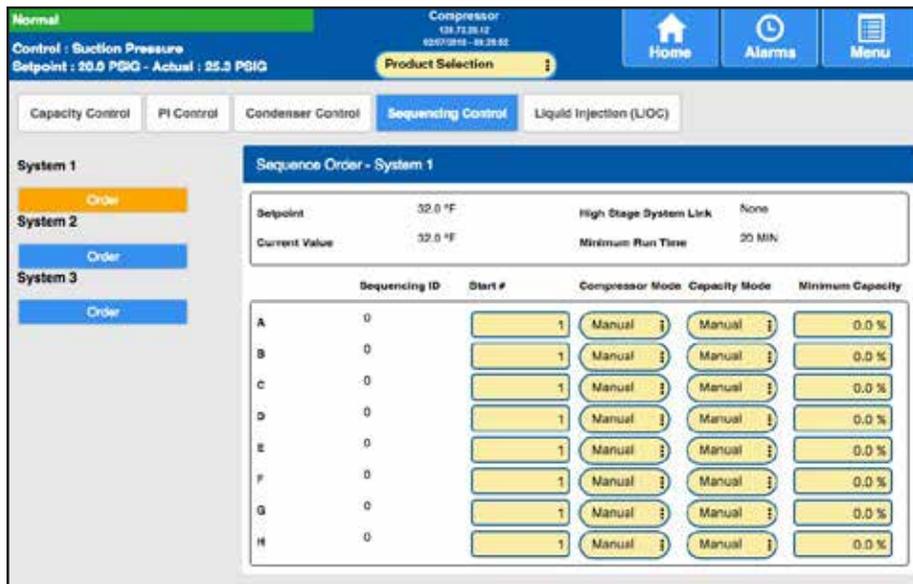

DESCRIPTION: This screen is used to set Sequencing order, and will be available if Sequencing is enabled in Compressor configuration. The following pull-down menus and setpoint boxes are shown here:

SEQUENCING ORDER

Setpoint - Use this setpoint box to set the value that you wish all compressors within this System to maintain.

Current Value - This is the actual value for the capacity control (as measured from the Master compressor). It is to this value that the compressors will attempt to maintain. This is strictly a displayed value, and cannot be changed here.

High Stage System Link - The High Stage System Link setpoint is provided to tie a system of Booster compressors to a system of High Stage compressors. This is strictly a displayed value, and cannot be changed here.

Minimum Run Time - This is the minimum amount of time that each compressor within this system will run, when called upon to do so. This is strictly a displayed value, and cannot be changed here.

There are eight rows of setpoint boxes shown at the bottom of this screen. These rows correspond to up to eight different compressors, which combined will make up this system. The user may program as few or as many of these rows as their situation requires:

Sequencing ID - Enter the last octet of the IP Address here. This will identify each of the possible eight compressors to the Master. A row with a 0 (zero) as the sequencing ID will be ignored. The lowest number will identify which compressor is to be the Master. If the Master is for some reason turned off, the next lowest numbered compressor will become the Master, and so on.

Start # - The allowable numbers here are 0 - 8. This number determines which compressor to start or stop next, based upon capacity need (see pages 13 - 14). Entering a 0 (zero) in this field will exclude the compressor from starting consideration.

Compressor Mode	Capacity Mode
• Manual	• Manual
• Automatic	• Automatic
• Remote Comm	• Remote Comm
• Remote IO	• Remote 4-20
• Remote Seq.	• Remote IO
	• Remote Seq.

Minimum Capacity - This is the capacity that a compressor will load to when it is started. It will remain at or above this capacity until it is commanded to stop.

NOTICE

The Compressor Mode and Capacity Mode listed above should both be set to Remote Seq. for complete execution of the sequencing system by the master to occur.

The following is a description of the Sequencing strategy:

Start/Stop

System Setup:

- Control Input – Suction Pressure
- Control Direction – Forward
- High Stage Link – Disabled

Start Procedure

Before starting a compressor, the master must determine that all running compressors are loaded and that the Suction Pressure has risen to a point where an additional compressor is needed.

First, the master checks that either no compressors are running or all the running compressors average 90% capacity. If a running compressor is at less than 90% capacity but is in a Load Inhibit or Force Unload condition, for the purposes of this calculation it is assumed to be at 90% capacity.

If all the running compressors are loaded the master next begins comparing its Suction Pressure to the Autocycle Start setpoint. When the Suction Pressure rises above the Start setpoint, the start timer is initiated. If the start timer reaches the Autocycle Start Delay setpoint time and the Suction Pressure has remained above the Start setpoint for the entire time, the master attempts to start an additional compressor. If the Autocycle Start Delay setpoint is 0 minutes, the master still waits 15 seconds before starting a compressor.

To determine which compressor to start, the master first sorts all the compressors in the system based on their start number, low to high. If two compressors have the same start number, the first one on the list remains ahead of the second. Next, the master starts at the top of the list and works down through list until it finds a compressor that is available to run. To be deemed available, a compressor must have good sequencing communications and its Compressor Mode and Capacity Mode must be set as Remote Sequencing. In addition the compressor must be off, and it cannot be in a Start Inhibit condition except for the Start Inhibit Slide Value Too High condition. The compressor with the lowest start number that also meets these conditions is then sent a start command. If no compressors are currently available to start, the master will continue checking until one becomes available or until the Suction Pressure drops below the Start setpoint.

After a compressor has been sent a start command, the master waits for that compressor to reach a Running state. If 3 minutes passes and the compressor has not yet begun to run, the master sends it a stop command. This compressor is then flagged as Unable to Start for 1 hour. After that time the master may again try to restart the compressor if additional capacity is needed. After a compressor begins running, or after one fails to start and is sent a stop command, the master can begin the process of starting another compressor.

Stop Procedure

If the Suction Pressure drops to a point where one of the running compressors is no longer needed, the master will stop the last compressor in the sequence list.

When the Suction Pressure drops below the Autocycle Stop setpoint, the stop timer is initiated. If the stop timer reaches the Autocycle Stop Delay setpoint time and the Suction Pressure has remained below the Stop setpoint for the entire time, the master attempts to stop one of the running compressors. If the Autocycle Stop Delay setpoint is 0 minutes, the master still waits 15 seconds before stopping a compressor.

To select the compressor to stop, the master also sorts all the compressors in the system according to their start number. Then the master starts at the bottom of the list and works up, looking for a running compressor that can be stopped. To be

selected a compressor must have good sequencing communications and its Compressor Mode and Capacity Mode must be set as Remote Sequencing. In addition, the compressor's run time must be greater than the compressor's Minimum Run Time setpoint. If the Minimum Run Time setpoint is 0 minutes, a compressor can also be stopped if it is still in Starting mode. The compressor with the highest start number that meets these conditions is sent a stop command. If no compressors are currently available to stop, the master will continue checking until one becomes available or until the Suction Pressure rises above the Stop setpoint.

After a compressor has been sent a stop command, the master waits for that compressor to go to off. If 3 minutes passes and the compressor has not yet turned off, the master then flags this compressor as Unable to Stop for 1 hour. After that time the master may again try to stop the compressor. After a compressor goes to off or after one fails to stop within 3 minutes, the master can begin the process of stopping another compressor.

Load/Unload

System Setup:

- Control Input – Suction Pressure
- Control Direction – Forward
- High Stage Link – Disabled

Load Procedure

If the master compressor's Suction Pressure is above the Capacity Control setpoint, the master calculates the increase in capacity that is required. The calculation is as follows:

$$\text{Difference} = \text{Suction Pressure} - (\text{Capacity Control Setpoint} + \text{Upper Dead Band})$$

If the Difference is less than the Upper Proportional Band:

$$\text{Capacity Change} = (\text{Difference} / \text{Upper Proportional Band}) * \text{Upper Cycle Time}$$

If the Difference is greater than the Upper Proportional Band:

$$\text{Capacity Change} = \text{Upper Cycle Time}$$

After the capacity increase has been calculated, the master then finds the compressor whose capacity should be changed. To make this determination, the master sorts all the compressors based on their start number. Beginning at the compressor with the lowest start number, the master finds the first compressor on the list that is running but is not at its maximum capacity. A compressor is at maximum capacity if it is at 100 percent capacity or if it is in a Load Inhibit or Force Unload condition.

If the selected compressor is running the Quantum™ HD software, the capacity increase is added to the compressor's current capacity. This new value is then sent to the compressor as its Capacity Command, and that compressor will try to increase its capacity to match the Command value.

If the selected compressor is controlled by a Quantum™ 1-4 or a Plus panel, the capacity increase is interpreted as the time period for a load pulse and is sent to the compressor as a load command. The slave compressor will then turn on its load output for the given number of seconds.

Unload Procedure

If the master compressor's Suction Pressure is below the Capacity Control setpoint, the master calculates the decrease in capacity that is required. The calculation is as follows:

$$\text{Difference} = (\text{Capacity Control Setpoint} - \text{Upper Dead Band}) - \text{Suction Pressure}$$

If the Difference is less than the Lower Proportional Band:

$$\text{Capacity Change} = (\text{Difference} / \text{Lower Proportional Band}) * \text{Lower Cycle Time}$$

If the Difference is greater than the Lower Proportional Band:

$$\text{Capacity Change} = \text{Lower Cycle Time}$$

After the capacity decrease has been calculated, the master then finds the compressor whose capacity should be changed. To make this determination, the master sorts all the compressors based on their start number. Beginning at the compressor with the highest start number, the master finds the last compressor on the list that is running and whose capacity is above its Minimum Capacity setpoint. If two compressors are currently running at or below their Minimum Capacity setpoints, the master will not allow any additional compressors to unload. This will allow the Suction Pressure to continue to drop and will cause the master to turn off one of the unloaded compressors. If the master sees that only one compressor is running in this system, it will continue to unload the compressor down to the master's Automatic Capacity Mode Minimum Slide Valve Position setpoint.

If the selected compressor is running the Quantum™ HD software, the capacity decrease is subtracted from the compressor's current capacity. This new value is then sent to the compressor as its Capacity Command, and that compressor will try to decrease its capacity to match the Command value.

If the selected compressor is controlled by a Quantum™ 1-4 or a Plus panel, the capacity decrease is interpreted as the time-period for an unload pulse and is sent to the compressor as an

unload command. The slave compressor will then turn on its unload output for the given number of seconds.

High Stage/Booster



The High Stage System Link setpoint is provided to tie a system of Booster compressors to a system of High Stage compressors. For example, if the Booster compressors are setup on System #1 and the High Stage Compressors are on System #2, the High Stage System Link setpoint from System #1 would be set as System 2.

When the Booster System's master wants to start the first Booster compressor, it first checks that a Booster compressor is available to run and then sends a signal to the High Stage System's master telling it to start a High Stage compressor. If all the High Stage compressors are off, the High Stage System's master will start its first compressor, regardless of what the High Stage Control Input is reading. When the Booster System's master observes that a High Stage compressor is running, it will allow a Booster compressor to start.

After the first High Stage compressor begins to run, compressors in both systems will cycle on and off as their Control Inputs move up and down. The only stipulation to the control strategy is that one High Stage compressor must always remain on as long as at least one Booster compressor is running. If all the Booster compressors turn off, the High Stage compressor can then turn off as well.

This concludes the Sequencing setup.

CONTROL SETPOINTS – SEQUENCING CONTROL (CONTROL)

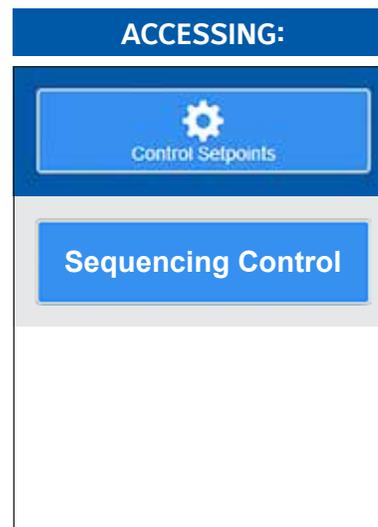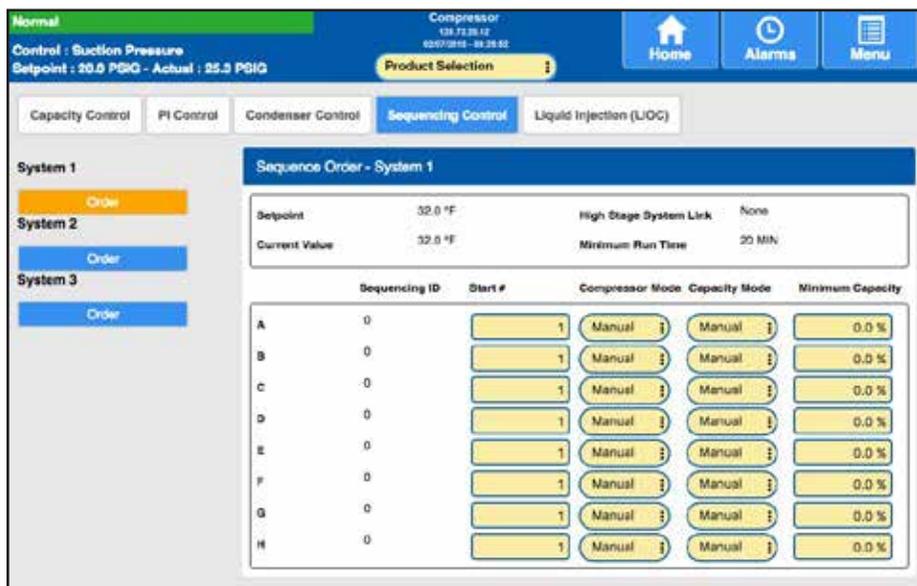


DESCRIPTION: This screen is used to set Sequencing control, and will be available if Sequencing is enabled in Compressor configuration.

The following setpoint boxes appear on this screen:

- **Average Capacity Slide Position to Start Next Compressor** - If more than one compressor is running and the Average Capacity is greater than this setting, the next compressor in line can be started, if needed.
- **Full Load Capacity Slide Position** - This setpoint represents the Capacity Slide Valve Position at which this machine will be considered at full load capacity.
- **Full Load Drive Speed Position** - This is the speed value at which the compressor will be considered at full capacity by speed.
- **Minimum Capacity Dead Band** - This is the dead band above and below the Minimum Capacity % setpoints that the controller will load or unload. If the Minimum Capacity % is 40% and the dead band is 1%, the controller will unload above 41% and load below 39% Capacity Slide.
- **Start Failure Reset Delay** - This is the time that needs to pass after a sequencing start fails before the compressor is available to be back in the sequence operation.
- **Slide Valve Failure Delay** - If the compressor is unavailable to start based upon the Capacity Slide Position, the sequencing will move on to the next compressor in order.

CONTROL SETPOINTS – LIQUID INJECTION LIOC

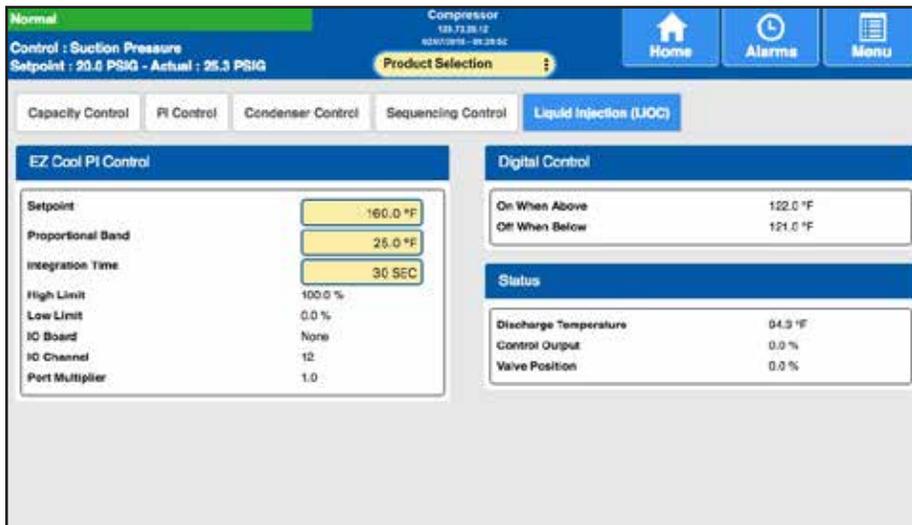

DESCRIPTION: This screen allows the user to enter and view the basic operating parameters related to EZ Cool LIOC PI control.

The following are the EZ Cool LIOC Setup screen selections available on this screen:

EZ COOL PI CONTROL

[Setpoint] – Enter the value that you wish to control to.

[Proportional Band] – This setpoint determines the size of a region either above or below the Control Setpoint. Within this region, the Proportional component of the PI Output value is the number between 0% and 100% that directly corresponds to the difference between the Control Input (Actual) and the Control Setpoint. Outside of this region, the Proportional component is either 100% or 0%. If the PI's Action is Forward, the Proportional Band extends above the Control Setpoint. If the PID's Action is Reverse, the Proportional Band extends below the Control Setpoint.

[Integration Time] – This setpoint controls the influence that the Integral component exerts on the PI Output value. The Integral component works to push the Control Input toward the Control Setpoint by tracking the difference between the Control Input and the Control Setpoint over time.

High Limit – The highest value that the output can be.

Low Limit – The lowest value that the output can be.

I/O Board – One of the following will be shown:

- None
- Analog Board 1
- Analog Board 2

I/O Channel – The output channel that will be used will be shown.

Port Multiplier – The standard value is 1 (one).

DIGITAL CONTROL

An output is provided for an optional Liquid Injection solenoid valve. The function of this output is only available if the compressor has Liquid Injection oil cooling and it has been enabled. Liquid Injection controls the supply of liquid refrigerant to the compressor. Liquid Injection is off (the solenoid is closed) if the compressor is off.

[On When Above] – When the Discharge Temperature is above this setpoint, the Liquid Injection solenoid output will energize, until the Discharge Temperature drops below this setpoint.

[Off When Below] – When the Discharge Temperature is below this setpoint, the Liquid Injection solenoid output will de-energize, until the Discharge Temperature raises above this setpoint.

STATUS

Discharge Temperature – The actual Discharge temperature is shown here.

Control Output – The value of the Output signal as controlled by the PI. This is not a setpoint value.

Valve Position – The value shown here represents the position of the valve with relationship to the Control Output.

CALIBRATION – PRESSURE

	Current Value	Offset	Low	High	Sensor Output	IO Board	IO Channel
Suction	25.2 PSIG	0.0 PSI	30.0 Hg	135.0 PSIG	1.5V	Analog Board 1	0
Discharge	147.7 PSIG	0.0 PSI	30.0 Hg	435.3 PSIG	1.5V	Analog Board 1	6
Oil	144.6 PSIG	0.0 PSI	30.0 Hg	435.3 PSIG	1.5V	Analog Board 1	6
Filter Inlet	150.9 PSIG	0.0 PSI	30.0 Hg	435.3 PSIG	1.5V	Analog Board 1	7
Economizer	42.1 PSIG	0.0 PSI	30.0 Hg	435.3 PSIG	1.5V	Analog Board 1	13
Balance Piston	30.0 Hg	0.0 PSI	30.0 Hg	435.3 PSIG	1.5V	None	0
System Discharge	144.9 PSIG	0.0 PSI	30.0 Hg	435.3 PSIG	1.5V	Analog Board 1	11
Main Oil Injection	30.0 Hg	0.0 PSI	30.0 Hg	435.3 PSIG	1.5V	None	15
Manifold	30.0 Hg	0.0 PSI	30.0 Hg	37.8 PSIG	1.5V	None	3
Economizer Port	30.0 Hg	0.0 PSI	30.0 Hg	435.3 PSIG	1.5V	None	0
Control Oil	30.0 Hg	0.0 PSI	30.0 Hg	435.3 PSIG	1.5V	None	0
Filter Outlet	30.0 Hg	0.0 PSI	30.0 Hg	435.3 PSIG	1.5V	None	0

Pressure Display Resolution: 1 Place Atmospheric Pressure: 14.7 PSI

ACCESSING:

Calibration

Pressure

DESCRIPTION: This screen is used to view and set the pressure calibration values.

This screen should be used anytime a pressure sensor is found to be out of calibration. The recommended practice for adjusting the calibration reading is to first determine which sensor(s) need to be calibrated. Once this is determined, you must know the actual reading that should be showing. This can be accomplished by comparing the Current Value shown, with the actual value using a separate measurement device, such as a Digital Volt Meter, or temperature probe, etc. Determine the difference between what the Current Value for the sensor is, and what the reading of the separate device shows. As an example, assume that the Suction Pressure on this screen reads 135 PSIG, but a separate device shows a reading of 142 PSIG. Select either the Current Value box and enter 142 there, or enter the difference between the Current Value and the actual reading (7) into the Offset box. The new reading will now be 142, and should match your separate reading.

PRESSURE

Sensors - The following sensor values are displayed along with the unit of measure at the left side of the screen:

- Suction
- Discharge
- Oil
- Filter
- Economizer
- Balance Piston
- System Discharge
- Main Oil Injection
- Manifold

[Current Value] - This box will initially show the actual value being read by a sensor. It is also a setpoint box that allows the user to set the current value that is being read by the sensor to a different value, in the case that the calibration is inaccurate, this new value will be added to the actual value to update the offset (see below).

[Offset] - A value entered here will allow the user to compensate for calibration issues with a sensor. This value is then added to the Current Value, to create a new Current Value (see above).

Low - This will show the low end range that the sensor is capable of reading.

High - This will show the high end range that the sensor is capable of reading.

Sensor Output - This will show the current type of sensor that is being used.

I/O Board - This will show the current I/O board that the sensor is assigned to.

I/O Channel - This will show the current I/O channel that the sensor is assigned to.

CALIBRATION – TEMPERATURE

	Current Value	Offset	Low	High	Sensor Output	I/O Board	I/O Channel
Suction	15.0 °F	0.0 °F			ICTD	Analog Board 1	1
Discharge	94.3 °F	0.0 °F			ICTD	Analog Board 1	2
Oil	141.0 °F	0.0 °F			ICTD	Analog Board 1	3
Separator	122.5 °F	0.0 °F			ICTD	Analog Board 1	4
Process Leaving	33.7 °F	0.0 °F	-459.4 °F	453.1 °F	ICTD	Analog Board 1	5
Process Entering	40.0 °F	0.0 °F	-459.4 °F	453.1 °F	ICTD	Analog Board 1	10
Outside Ambient	-455.4 °F	0.0 °F			ICTD	None	03
Vyper Coolant	-455.4 °F	0.0 °F			ICTD	None	24
Panel	32.0 °F	0.0 °F					

ACCESSING:

Calibration

Temperature

DESCRIPTION: This screen is used to view and set the temperature calibration values.

This screen should be used anytime a temperature sensor is found to be out of calibration. The recommended practice for adjusting the calibration reading is to first determine which sensor(s) need to be calibrated. Once this is determined, you must know the actual reading that should be showing. This can be accomplished by comparing the Current Value shown, with the actual value using a separate measurement device, such as a Digital Volt Meter, or temperature probe, etc. Determine the difference between what the Current Value for the sensor is, and what the reading of the separate device shows. As an example, assume that the Suction Temperature on this screen reads 120°F, but a separate device shows a reading of 123°F. Select either the Current Value box and enter 123 there, or enter the difference between the Current Value and the actual reading (3) into the Offset box. The new reading will now be 123, and should match your separate reading.

The following fields are provided:

TEMPERATURE

Sensors - The following sensor values are displayed along with the unit of measure at the left side of the screen:

- Suction
- Discharge
- Oil
- Separator
- Process Leaving
- Process Entering
- Outside Ambient
- Vyper Coolant
- Panel

[Current Value] - This box will initially show the actual value being read by a sensor. It is also a setpoint box that allows the user to set the current value that is being read by the sensor to a different value, in the case that the calibration is inaccurate, this new value will be added to the actual value to update the offset (see below).

[Offset] - A value entered here will allow the user to compensate for calibration issues with a sensor. This value is then added to the Current Value, to create a new Current Value (see above).

Low - This will show the low end range that the sensor is capable of reading.

High - This will show the high end range that the sensor is capable of reading.

Sensor Output - This will show the current type of sensor that is being used.

I/O Board - This will show the current I/O board that the sensor is assigned to.

I/O Channel - This will show the current I/O channel that the sensor is assigned to.

CALIBRATION – CAPACITY VOLUME



DESCRIPTION: This screen is used to view and set the capacity and volume calibration values, and provides the following information:

CAPACITY

Value - The following three values are shown:

- Low - The Low end percentage of range.
- Current - The Current percentage.
- High - The High end percentage of range.

Volts - The following three values are shown:

- Low - The Low end actual voltage of the output.
- Current - The Current voltage of the output.
- High - The High end actual voltage of the output.

Mode - One of the following Mode states will be shown:

- Manual
- Remote IO
- Automatic
- Remote 4-20 Input
- Remote Comm
- Remote Seq

Status - One of the following Mode statuses will be shown:

- Idle
- Load
- Unload

VOLUME

Value - The following three values are shown:

- Low - The Low end percentage of range.
- Current - The Current percentage.
- High - The High end percentage of range.

Volts - The following three values are shown:

- Low - The Low end actual voltage of the output.
- Current - The Current voltage of the output.
- High - The High end actual voltage of the output.

Mode - One of the following Mode states will be shown:

- Manual
- Automatic

Status - One of the following Statuses will be shown:

- Idle
- Increase
- Decrease

The following setpoint boxes have been provided:

- Bottom of Range
- Deadband
- Top of Range
- Minimum On Time

CALIBRATION AREA

The nine buttons in this area allow for calibration of the Slide Valve and Slide Stop.

The top button functions as follows:

- **[Start Calibration]** - Selecting this button will automatically perform all 8 steps of the manual calibration.

The following group of eight buttons allow for manually calibrating the Slide Valve and Slide Stop.

- [Unload Capacity]
- [Set Low Capacity]
- [Increase Volume]
- [Set High Volume]
- [Decrease Volume]
- [Set Low Volume]
- [Load Capacity]
- [Set High Capacity]

To manually calibrate the Slide Valve (capacity) and Slide Stop (Volume):

- Press the [Unload Capacity] button. Monitor the voltage relative to the Current value. Once the voltage stops decreasing and holds steady for 10-15 seconds. Press the [Set Low Capacity] button.
- Press the [Increase Volume] button. Monitor the voltage relative to the Current Volume value. When the voltage stops rising and holds steady for 10-15 seconds. Press the [Set High Volume] button.
- Press the [Decrease Volume] button. Monitor the voltage relative to the Current value. Once the voltage stops decreasing and holds steady for 10-15 seconds. Press the [Set Low Volume] button.
- Press the [Load Capacity] button. Monitor the voltage relative to the Current value for Capacity. When the voltage stops increasing and holds steady for 10-15 seconds. Press the [Set High Capacity] button.

OPERATING VALUES


The following informational readings are displayed for Suction, Discharge and Oil:

- Temperature
- Pressure

Motor displays information for:

- Amps

CALIBRATION – MOTOR DRIVE

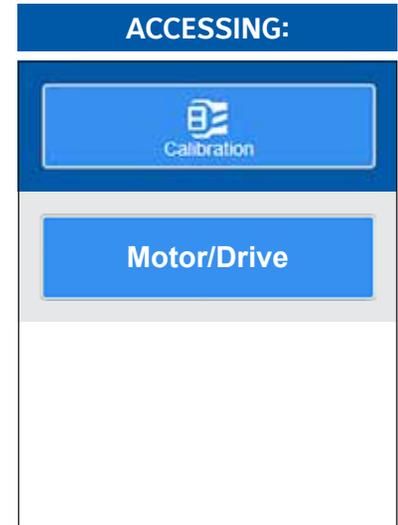

DESCRIPTION: This screen is used to view and set motor related calibration values that are not shown on other screens.

This screen should be used anytime a motor related sensor is found to be out of calibration. The recommended practice for adjusting the calibration reading is to first determine which sensor(s) need to be calibrated. Once this is determined, you must know the actual reading that should be showing. This can be accomplished by comparing the Current Value shown, with the actual value using a separate measurement device, such as a Digital Volt Meter, or Current Clamp, etc. Determine the difference between what the Current Value for the sensor is, and what the reading of the separate device shows. As an example, assume that the Motor Amps on this screen reads 120, but a separate device shows a reading of 123. Select either the Current Value box and enter 123 there, or enter the difference between the Current Value and the actual reading (3) into the Offset box. The new reading will now be 123, and should match your separate reading.

The following fields are provided:

DRIVE

Sensors - The following sensor values are displayed along with the unit of measure at the left side of the screen:

- Motor Amps
- Kilowatts
- RPM

[Current Value] - This box will initially show the actual value being read by a sensor. It is also a setpoint box that allows the user to set the current value that is being read by the sensor to a different value, in the case that the calibration is inaccurate, this new value will be added to the actual value to update the offset (see below).

[Offset] - A value entered here will allow the user to compensate for calibration issues with a sensor. This value is then added to the Current Value, to create a new Current Value (see above).

Low - This will show the low end range that the sensor is capable of reading.

High - This will show the high end range that the sensor is capable of reading.


Sensor Output - This will show the current type of sensor that is being used.

I/O Board - This will show the current I/O board that the sensor is assigned to.

I/O Channel - This will show the current I/O channel that the sensor is assigned to.

CALIBRATION – AUXILIARIES

Aux Inputs A - J	Current Value	Offset	Low	High	Sensor Output	I/O Board	I/O Channel
Tank Pressure	-45.0 in H2O	0.0 in H2O	-30.0 in H2O	30.0 in H2O	1-5V	Analog Board 2	5
Aux Input K - T							
Analog Aux B	30.0 Hg	0.0 PSI	30.0 Hg	485.3 PSIG	1-5V	Analog Board 2	6
Analog Aux C	30.0 Hg	0.0 PSI	30.0 Hg	485.3 PSIG	1-5V	Analog Board 2	7
Analog Aux D	30.0 Hg	0.0 PSI	30.0 Hg	485.3 PSIG	1-5V	Analog Board 2	8
Analog Aux E	30.0 Hg	0.0 PSI	30.0 Hg	485.3 PSIG	1-5V	Analog Board 2	9
Analog Aux F	30.0 Hg	0.0 PSI	30.0 Hg	485.3 PSIG	1-5V	Analog Board 2	10
Analog Aux G	30.0 Hg	0.0 PSI	30.0 Hg	485.3 PSIG	1-5V	Analog Board 2	11
Analog Aux H	30.0 Hg	0.0 PSI	30.0 Hg	485.3 PSIG	1-5V	Analog Board 2	12
Analog Aux I	30.0 Hg	0.0 PSI	30.0 Hg	485.3 PSIG	1-5V	Analog Board 2	13
Analog Aux J	30.0 Hg	0.0 PSI	30.0 Hg	485.3 PSIG	1-5V	Analog Board 2	14

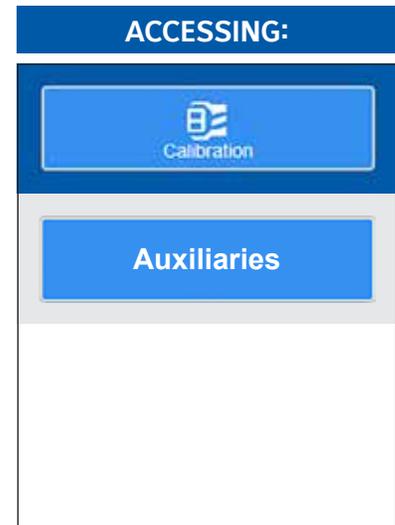

DESCRIPTION: This (Aux Inputs A-j) screen and the Aux Inputs K-T screen is used to view and set Auxiliary Analog Input calibration values that are not shown on other screens.

These screens should be used anytime an Aux Analog sensor is found to be out of calibration. The recommended practice for adjusting the calibration reading is to first determine which sensor(s) need to be calibrated. Once this is determined, you must know the actual reading that should be showing. This can be accomplished by comparing the Current Value shown, with the actual value using a separate measurement device, such as a Digital Volt Meter, or Current Clamp, etc. Determine the difference between what the Current Value for the sensor is, and what the reading of the separate device shows. As an example, assume that the Aux Analog A on this screen reads 120, but a separate device shows a reading of 123. Select either the Current Value box and enter 123 there, or enter the difference between the Current Value and the actual reading (3) into the Offset box. The new reading will now be 123, and should match your separate reading.

The following fields are provided on both screens:

AUX INPUTS A-J (K-T)

Channels - The following channel values are displayed along with the unit of measure at the left side of the screen:

- Aux Analog A_J (K-T)
- Kilowatts
- RPM

[Current Value] - This box will initially show the actual value being read at the channel. It is also a setpoint box that allows the user to set the current value that is being read by the channel to a different value, in the case that the calibration is inaccurate, this new value will be added to the actual value to update the offset (see below).

[Offset] - A value entered here will allow the user to compensate for calibration issues with a channel. This value is then added to the Current Value, to create a new Current Value (see above).

Low - This will show the low end range that the channel is capable of reading.


High - This will show the high end range that the channel is capable of reading.

Sensor Output - This will show the current type of sensor that is being used.

I/O Board - This will show the current I/O board that the sensor is assigned to.

I/O Channel - This will show the current I/O channel that the sensor is assigned to.

CALIBRATION – OUTPUTS

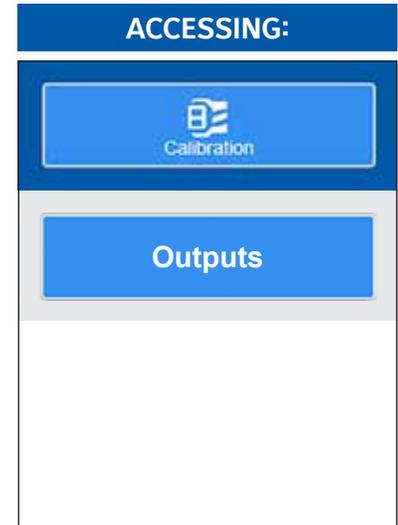

DESCRIPTION: This screen is used to calibrate individual analog outputs. NOTE: *All analog outputs are calibrated at the factory. The following can be used to confirm or verify this calibration.* Use this screen if an analog output signal (channel) requires calibration.

The Quantum’s analog outputs have a range of approximately 0 to 25mA, but most devices that are controlled by the Quantum™ HD require a signal that varies between 4 and 20mA. To restrict the analog outputs to the proper values, each of the outputs must be calibrated before they can be used. Every output channel has a Low End and a High End value that are used for calibration. Both values can be set from 0% to 100%. The output channel’s maximum value is represented by 100% and its minimum value is represented by 0%. To calibrate the channel, the High End percentage is decreased until the maximum output for the channel is limited to 20mA. Also, the Low End percentage is increased until the minimum output for the channel is 4mA.

The following fields are provided on this screen:

ANALOG OUTPUT CALIBRATION

Select Analog Board - Select form the following:

- Analog Board 1
- Analog Board 2

Select Analog Output to Calibrate - Select the channel that you wish to calibrate:

- 1 - 8

The Selected Output Is - The name of the output that has been selected is shown here.

Output Percentage For Selected Output - This shows the percent of output signal value that is currently being output for this channel.

Low End Percentage Calibrated - The percentage shown here represents the low (or bottom) end of the calibration value.

High End Percentage Calibrated- The percentage shown here represents the high (or upper) end of the calibration value.

The following calibration selections upper here:

Calibrate Low End - Select this button to set the Low End calibration value, then select the following buttons to achieve the desired setting:

- 10 - The Low End value will increase by 10% each time this button is selected.
- 1 - The Low End value will increase by 1% each time this button is selected.
- 0.1 - The Low End value will increase by 0.1% each time this button is selected.
- 0.01 - The Low End value will increase by 0.01% each time this button is selected.

Calibrate High End - Select this button to set the High End calibration value, then select the following buttons to achieve the desired setting:

- -10 - The High End value will decrease by 10% each time this button is selected.
- -1 - The High End value will decrease by 1% each time this button is selected.
- -0.1 - The High End value will decrease by 0.1% each time this button is selected.
- -0.01 - The High End value will decrease by 0.01% each time this button is selected.

The analog output channel will return to its control task either when another output channel is selected for calibration or when the user goes to another screen.

CALIBRATION – PHD MONITOR

	Current Value	Offset	Low	High	Sensor Output	I/O Board	I/O Channel
Compressor Vib. - Suction	0.0 g ^r	0.0 g ^r			Vibration	None	17
Compressor Vib. - Discharge	0.0 g ^r	0.0 g ^r			Vibration	None	18
Motor Bearing Vib. - DE	0.0 g ^r	0.0 g ^r			Vibration	None	19
Motor Bearing Vib. - ODE	0.0 g ^r	0.0 g ^r			Vibration	None	20
Motor Bearing Temp. - DE	-459.8 °F	0.0 °F			RTD	None	19
Motor Bearing Temp. - ODE	-459.8 °F	0.0 °F			RTD	None	20
Motor Stator #1	-459.8 °F	0.0 °F			RTD	None	21
Motor Stator #2	-459.8 °F	0.0 °F			RTD	None	22
Motor Stator #3	-459.8 °F	0.0 °F			RTD	None	23

DESCRIPTION: This screen is used to view and set the pressure calibration values.

This screen should be used anytime a vibration sensor is found to be out of calibration. The recommended practice for adjusting the calibration reading is to first determine which sensor(s) need to be calibrated. Once this is determined, you must know the actual reading that should be showing. This can be accomplished by comparing the Current Value shown, with the actual value using a separate vibration measurement device (or temperature probe, depending on the type of sensor). Determine the difference between what the Current Value for the sensor is, and what the reading of the separate device shows. As an example, assume that the Motor Bearing Temp. on this screen reads 135°F, but a separate device shows a reading of 142°F. Select either the Current Value box and enter 142 there, or enter the difference between the Current Value and the actual reading (7) into the Offset box. The new reading will now be 135, and should match your separate reading.

VIBRATION CALIBRATION

Sensors - The following sensor values are displayed along with the unit of measure at the left side of the screen:

- Compressor Vib. - Suction
- Compressor Vib. - Discharge
- Motor Bearing Vib. - DE
- Motor Bearing Vib. - ODE
- Motor Bearing Temp. - DE
- Motor Bearing Temp. - ODE
- Motor Stator #1
- Motor Stator #2
- Motor Stator #3

[Current Value] - This box will initially show the actual value being read by a sensor. It is also a setpoint box that allows the user to set the current value that is being read by the sensor to a different value, in the case that the calibration is inaccurate, this new value will be added to the actual value to update the offset (see below).

[Offset] - A value entered here will allow the user to compensate for calibration issues with a sensor. This value is then added to the Current Value, to create a new Current Value (see above).

Low - This will show the low end range that the sensor is capable of reading.


High - This will show the high end range that the sensor is capable of reading.

Sensor Output - This will show the current type of sensor that is being used.

I/O Board - This will show the current I/O board that the sensor is assigned to.

I/O Channel - This will show the current I/O channel that the sensor is assigned to.

CALIBRATION – MISC

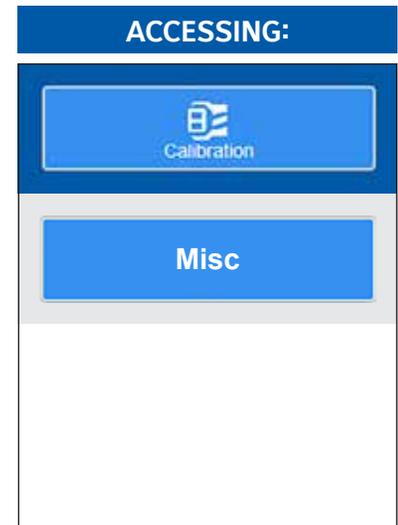

DESCRIPTION: This screen is used to view and set sensors that are not included on the other calibration screens.

This screen should be used anytime a misc. sensor is found to be out of calibration. The recommended practice for adjusting the calibration reading is to first determine which sensor(s) need to be calibrated. Once this is determined, you must know the actual reading that should be showing. This can be accomplished by comparing the Current Value shown, with the actual value using a separate measurement device, such as a DVM or temperature probe. Determine the difference between what the Current Value for the sensor is, and what the reading of the separate device shows. As an example, assume that the Remote Cap. Control Setpoint on this screen reads 5°F, but a separate device shows a reading of 7°F. Select either the Current Value box and enter 5 there, or enter the difference between the Current Value and the actual reading (2) into the Offset box. The new reading will now be 5, and should match your separate reading.

MISCELLANEOUS

Sensors - The following sensor values are displayed along with the unit of measure at the left side of the screen:

- Rem. Cap. Slide Position
- Rem. Cap. Control Setpoint
- Evaporator Liquid Level
- EZ Cool LIQC Feedback

[Current Value] - This box will initially show the actual value being read by a sensor. It is also a setpoint box that allows the user to set the current value that is being read by the sensor to a different value, in the case that the calibration is inaccurate, this new value will be added to the actual value to update the offset (see below).

[Offset] - A value entered here will allow the user to compensate for calibration issues with a sensor. This value is then added to the Current Value, to create a new Current Value (see above).

Low - This will show the low end range that the sensor is capable of reading.


High - This will show the high end range that the sensor is capable of reading.

Sensor Output - This will show the current type of sensor that is being used.

I/O Board - This will show the current I/O board that the sensor is assigned to.

I/O Channel - This will show the current I/O channel that the sensor is assigned to.

CONFIGURATION

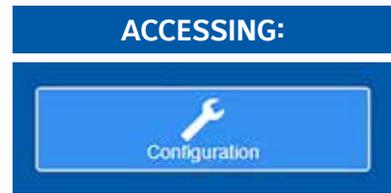


CONFIGURATION:

The Configuration page/menu is used to access main areas of configuration such as Pumps and Fans, Summer/Winter Sequence, Condenser Control Setpoints and overrides and Analog Auxiliaries, Communications, P/I Control, Digital and Analog I/O.

DESCRIPTION: This is the main Configuration screen. From here, all other configuration screens are accessible. Simply select the button with the title of the configuration that you wish to view, and that screen will appear.

CONFIGURATION - PACKAGE

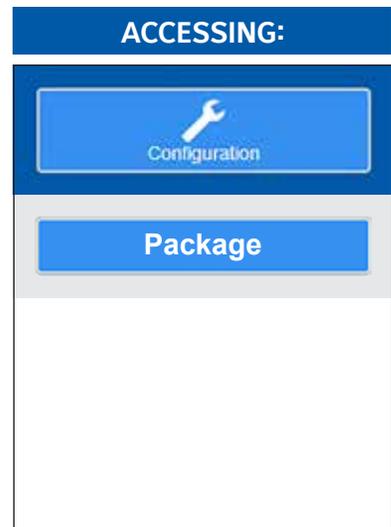

DESCRIPTION: Use this screen to set the basic operational characteristics of the compressor package. The following areas appear on this screen:

PACKAGE

[Package Type]

- RWF
- RWBII
- RXB
- RXF 12-50
- RXF 58-101
- RDB 4-Step
- RDB 3-Step
- York S7
- Other Manufacturer
- Other Manuf (Mycom)
- Other Manuf (Kobe)
- HPS

Configuration - Package continued on next page...

Refer to the following chart for Package Type equivalencies:

For Compressor Type	Use Compressor Type
RWF	RWF
RWBII	RWBII
RXB	RXB
RXF 12-50	RXF 12-50
RXF 58-101	RXF 58-101
RDB 4-Step	RDB 4-Step
RDB 3-Step	RDB 3-Step
York S7	York S7
Other Manufacturer	Other Manufacturer
Other Manuf (Mycom)	Other Manuf (Mycom)
Other Manuf. (Kobe)	Other Manuf. (Kobe)
HPS	HPS

[Drive Type]

- Screw Compressor With Constant Electric Drive
- Screw Compressor With VFD Drive
- Screw Compressor With Engine Drive
- Screw Compressor With Turbine Drive
- Screw Compressor With DBS
- Screw Compressor With Vyper™ (RAM)
- Screw Compressor With Vyper™ (4-20mA)

[Refrigerant]

- R11
- R113
- R114
- R1150
- R12
- R1270
- R13
- R134a
- R13b1
- R14
- R14b2
- R170
- R218
- R22
- R23
- R290
- R401a
- R402a
- R404a
- R410a
- R50
- R500
- R502
- R503
- R507
- R508
- R508b
- R600
- R600a
- R717
- R718
- R728
- R729
- R744
- R771
- User Defined

[Filter Differential Check] (Comparison)

- Disabled
- Filter-Oil
- Discharge-Oil
- Discharge-Filter
- Filter Inlet-Filter Outlet

[K Factor] -Used in the calculation of the VI (Slide Stop) position, and is based on the Refrigerant Type. Example: Refrigerant R717 sets a K Factor of 1.30. This value can vary slightly depending upon operating conditions, such as the Suction and Discharge pressures.

[Separator Velocity] - This is a calculated value that represents the percentage of the designed capacity of the separator. Do not change this value without consulting Frick. This value is used in a calculation to prevent the Slide Valve from loading, to prevent oil carry-over out of the separator and into the system due to a high velocity (flow) of the refrigerant gas through the separator. If this value is 0 (zero), it has not been properly configured.

[Compressor Ratio] - This value represents the Compressor Ratio of the compressor. Do not change this value without consulting Frick. This value is used in a calculation to prevent the Slide Valve from loading, to prevent oil carry-over out of the separator and into the system due to a high velocity (flow) of the refrigerant gas through the separator. If this value is 4.0, it has not been properly configured.

[Reset Run Hours] - Selecting this button will allow the Run Hours to be set to any value. This is best used for maintenance purposes.

[PAC Chiller]

- No
- Evap And Condenser Temps
- Evap Temps Only
- Evap Leaving Temp Only

[Low Oil Level Delay] - The time that must elapse before the Low Oil Level Shutdown can be initiated.

[Start Differential Pressure Below] - The compressor will be inhibited from starting if the difference between the Discharge Pressure minus the Suction Pressure is greater than this setpoint.

[Hot Gas Bypass (Capacity Slide %)] - This feature is optional, and the compressor must be configured to use this. When the Slide Valve is below this setpoint, the Hot Gas Bypass output (digital board 1, channel 16) will energize to allow hot gas (Discharge Pressure) to be re-circulated back into the compressor. This allows the compressor to continue to run when the actual load doesn't require the compressor to run.

[Permissive Start] - The input used for this feature is Module 20 of digital board 1. This feature has three possible states:

- **Disabled** - The feature is disabled
- **Starting** - This input needs to be energized only to start the compressor.
- **Always** - This input must be energized to start the compressor. If the compressor is running, and this input is de-energized, the compressor is stopped.

ECONOMIZER

[On When Capacity Slide Is Above] - If the compressor is running and if the Capacity Slide is above this setpoint, the Economizer output will turn on.

[Off When Capacity Slide is Below] - If the compressor is running and if the Capacity Slide is below this setpoint, the Economizer output will turn off.

If a VSD Drive Type is selected, these two setpoints will be shown:

[On When VSD Is Above] - If the compressor is running and if the VSD is above this setpoint AND the Capacity Slide is above its On setpoint, the Economizer output will turn on.

[Off When VSD is Below] - If the compressor is running and if the VSD is below this setpoint OR if the Capacity Slide is below its Off setpoint, the Economizer output will turn off.


[Pressure Input]

- **Disabled**
- **Fixed Pressure Setpoint** - If selected, then the Pressure Setpoint (see below) is used to calculate the Volume Ratio.
- **Economizer Analog Input** - If selected, then this Input value will be used in calculating the Volume Ratio.

[Pressure Setpoint] - This is the setpoint value that will be used when the Pressure Input is set to fixed, to calculate the Volume Ratio.

Port Value - If the Economizer is On and the Pressure Input selection is not Disabled, this setpoint is used in calculating the Volume Ratio. This port multiplier represents the internal pressure at this port divided by the suction pressure based on the compressor design. A value of 1.6 is used for RXF models, and a value of 1.4 is used for RWF models.

CONFIGURATION – PACKAGE (OIL PUMP / LUBRICATION)

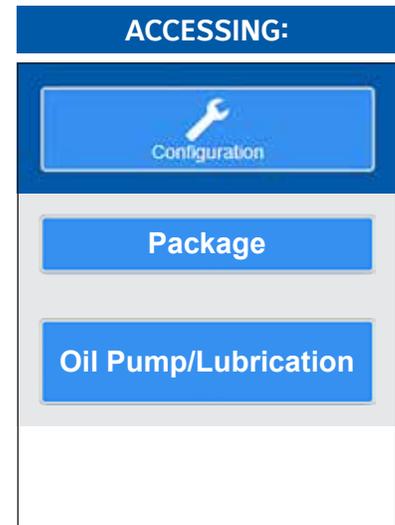

DESCRIPTION: This is the Oil Pump / Lubrication setup screen. Use this screen to set the basic operational characteristics of the oil and lubrication system.

OIL PUMP

[Pump Type] - Options for: No Pump, Full Time, Demand, Shaft with Auxiliary, and Shaft

[Dual Pump Control] - Options: Disabled, Enabled

[Oil Log]

- **Disabled** - Oil Log is disabled.
- **Enabled** - If for the Oil Log Delay setpoint period, the oil pump has been on and the compressor is Off or Starting without going into Running, an Oil Log shutdown will occur.

[Power Assist] - Sometimes called Gas Assist, this is always enabled. When the compressor stops (commanded or alarm), digital board 1, output 24 (power assist) comes on for the programmed delay time of 30 seconds (user selectable).

This output typically opens a solenoid valve to allow hot gas (discharge pressure) to the suction check valve to ensure the suction check valve gets closed when the compressors stops. Usually used on booster compressors.

[Oil Pump Unload Assist] - This is to assist in unloading the slide valve when a Full Time or Demand pump is selected. When this option is enabled, it allows the pump output to energize when starting the compressor, if the slide valve position is above the "Highest Capacity to Permit Starting" setpoint.

- **Disabled** - Oil Pump Unload Assist is disabled.
- **Enabled** - Oil Pump Unload Assist is enabled.

[Main Oil Injection]

- **Is Above (Setpoint)** - The Main Oil Injection output will energize when the Discharge Temperature exceeds this setpoint.
- **For (Delay)** - Once the Main Oil Injection output has been energized by the above setpoint, it will remain energized for this amount of time.

LUBRICATION

[Oil Pump Lube Time Before Starting] - The amount of time that the compressor will be delayed from starting to allow the Oil Pump to pre-lube the compressor components.

[Dual Pump Transition Time] - If enabled. The lead pump is the pump selected to be the first pump to run. If the lead pump has a pump auxiliary failure, an alarm message is issued and the other pump will be turned on. If the compressor has a Low Oil Pressure

Warning failure, the second pump will be turned on; then after a 30 seconds delay, the lead pump will be turned off. If while the compressor is running the second pump has an auxiliary failure or Low Oil Pressure is encountered, a shutdown message and action is issued.

CONTROL OIL

[Control Oil Pump] - Options: Disabled, Pre-lube/Running, & Running

[Control Oil Pump Mode] - Options: Manual, Automatic

[Dual Control Oil Pump] - Options: Disabled, Enabled

[Dual Control Oil Pump Sequence]

- Pump 1 Lead - Selecting this sets Pump 1 as Lead Pump.
- Pump 2 Lead - Selecting this sets Pump 2 as Lead Pump.

[Low Control Oil Pressure] - Options: Disabled, Enabled

[Low Control Oil Pressure Warning] - When enabled, a *Low Control Oil Pressure* warning will be generated if the *Control Oil Pressure* drops below this value.

NOTICE

- When manually toggling the lead pump, keep both pumps on for the Dual Control Oil Pump Transition Time (Default: 10 seconds) during the transition.
- If an Aux. Failure occurs on the primary pump, switch to the backup pump and immediately turn off the failed pump. The primary pump Aux. Failure is a Warning, but if the backup pump has an Aux. Failure it is a Compressor Shutdown.
- If a *Low Control Oil Pressure Warning* occurs, bring on the backup pump and keep both pumps running for the *Dual Control Oil Pump Transition Time for Low Oil Pressure* (Default: 30 seconds). The backup pump will continue to run, regardless if the compressor remains in the *Low Control Oil Pressure Warning* low or not.
- If a *Low Control Oil Pressure Warning* fails the primary pump, an Aux. Failure on the backup pump will cause a Compressor Shutdown. If an Aux. Failure occurs on the primary pump, the backup pump needs to continue running even if a *Low Oil Pressure Warning* occurs.
- If the backup pump is running due to an *Aux. Failure* or *Low Control Oil Pressure Warning* and the user clears the alarm, switch to the primary pump and immediately turn off the backup pump.

CONFIGURATION – PACKAGE (LIQUID INJECTION)

DESCRIPTION: This screen allows the user to enter and view the operating parameters related to EZ Cool LIOC PI control.

The following are the EZ Cool LIOC Setup screen selections available on this screen:

Liquid Injection Oil Cooling

- Disabled
- Enabled

Valve Type

- Analog Modulating - This selection is used to control a modulating valve that requires an analog output (4-10mA) signal. This is the standard valve type for Frick packages and includes valves like the Danfoss modulating valve for LIOC.
- Digital PWM - This selection is used to control a modulating valve that requires a digital PWM signal. This includes valves like the Yosaku LIOC valve.

The PWM signal is controlled from the LIOC PWM Digital Output. To use this selection, the LIOC PWM Digital Output must be configured in the Digital I/O section.

The PWM cycle time is 20 seconds. The Control Output corresponds to the PWM output On time. For example, if the Control Output value is calculated to be 75%, then the PWM output will cycle On for 15 seconds and then Off for 5 cycles. It will continue to repeat this cycle if the Control Output is greater than 0%.

SOLENOID CONTROL

An output is provided for an optional Liquid Injection solenoid valve. The function of this output is only available if the compressor has Liquid Injection oil cooling and it has been enabled. Liquid Injection controls the supply of liquid refrigerant to the compressor. Liquid Injection is off (the solenoid is closed) if the compressor is off.

[On When Above] - When the Discharge Temperature is above this setpoint, the Liquid Injection solenoid output will energize, until the Discharge Temperature drops below this setpoint.

[Off When Below] - When the Discharge Temperature is below this setpoint, the Liquid Injection solenoid output will de-energize, until the Discharge Temperature raises above this setpoint.

EZ COOL STATUS

Discharge Temperature - The actual Discharge temperature is shown here.

Control Output - The value of the Output signal as controlled by the PI. This is not a setpoint value.

Valve Position - The value shown here represents the position of the valve with relationship to the Control Output.

EZ COOL PI CONTROL

[Setpoint] - Enter the value that you wish to control to.

[Proportional Band] - This setpoint determines the size of a region either above or below the Control Setpoint. Within this region, the Proportional component of the PI Output value is the number between 0% and 100% that directly corresponds to the difference between the Control Input (Actual) and the Control Setpoint (Setpoint). Outside of this region, the Proportional component is either 100% or 0%. If the PI's Action is Forward, the Proportional Band extends above the Control Setpoint. If the PID's Action is Reverse, the Proportional Band extends below the Control Setpoint.

[Integration Time] - This setpoint controls the influence that the Integral component exerts on the PI Output value. The Integral component works to push the Control Input toward the Control Setpoint by tracking the difference between the Control Input and the Control Setpoint over time.

High Limit - The highest value that the output can be.

Low Limit - The lowest value that the output can be.


I/O Board - Select from one of the following:

- None
- Analog Board 1
- Analog Board 2

I/O Channel - Select the output channel that will be used.

Port Multiplier - This setpoint is used for the Liquid Injection Closed Warning safety (see this safety description in the Warnings/Shutdowns Messages section). The port multiplier represents the internal pressure at this port divided by the suction pressure based on the compressor design.

CONFIGURATION – PACKAGE (DX CHILLER / PUMPDOWN CONTROL)

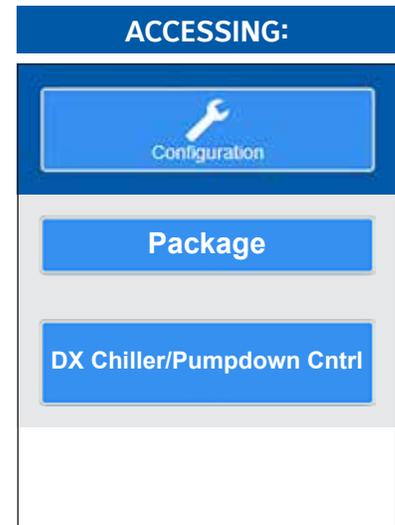

DESCRIPTION: Use this screen to set the operational characteristics of the Dx / Chiller system.

DX CIRCUIT CONTROL

DX Circuit A - The following are digital outputs:

- Disabled - DX Circuit A is off.
- DX Circuit On with compressor - DX Circuit A is on if the compressor is on, or it is off if the compressor is off.
- DX Circuit On by Capacity Position - When this option is selected, two other setpoints are shown:
 - **Off When Below.**
 - **On When Above.**

DX Circuit A is turned On when the Capacity Position is above the On When Above setpoint, and it is turned Off when the Capacity Position is below the Off When Below setpoint.

DX Circuit B - The following are digital outputs:

- Disabled - DX Circuit B is off.
- DX Circuit On with compressor - DX Circuit B is on if the compressor is on, or it is off if the compressor is off.
- DX Circuit On by Capacity Position - When this option is selected, two other setpoints are shown:
 - **Off When Below.**
 - **On When Above.**

DX Circuit B is turned On when the Capacity Position is above the On When Above setpoint, and it is turned Off when the Capacity Position is below the Off When Below setpoint.



PUMP DOWN CONTROL

With this option enabled, Pump Down provides for pumping down the refrigerant (removal of the refrigerant gas). For example, this can be used for removing the refrigerant from a shell and tube heat exchanger to prevent its standing water from freezing. When Pump Down is enabled and the compressor is stopped the DX circuits digital outputs are de-energized but the compressor remains running for the delay period. When the delay period times out, or the Suction Pressure falls below the On When Suction Above setpoint, the compressor is turned off. To force a compressor that is in Pump Down to stop, press the compressor stop screen command key again.

The following selections are provided:

- Disabled - The Pump Down feature is ignored.
- Enabled - The Pump Down feature will be utilized.
- [On When Suction Above] - After sending the compressor stop command, if the Suction Pressure reading is above this setpoint, Pump Down will be invoked. In Pump Down, the compressor will stay on to continue vaporizing the refrigerant.
- [On When Suction Above Delay] - The amount of time in minutes that the compressor will Pump Down before it is stopped.

CONFIGURATION – PACKAGE (OPTIONS - DISCHARGE BUTTERFLY VALVE CONTROL)

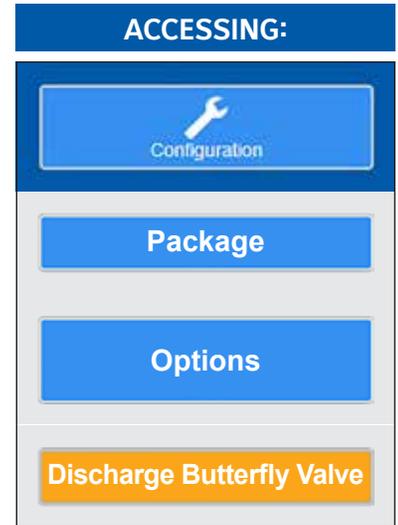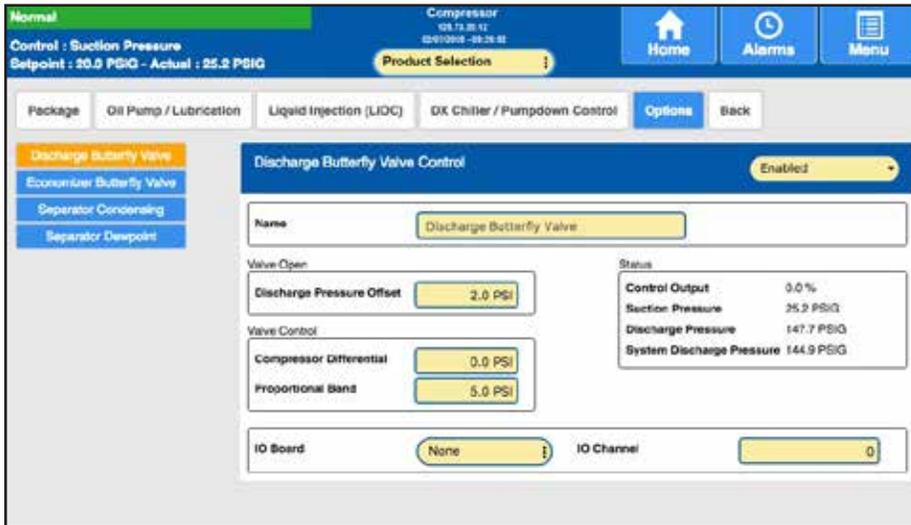

DESCRIPTION: Use this screen to set the operational characteristics of the Discharge Butterfly Valve.

Refer to the following notes:

- The valve can open when Compressor Start Output is energized and immediately closes when the output is de-energized.
- The Discharge Butterfly Valve Solenoid output will only be energized when the Discharge Pressure reaches the Condensing Pressure (System Discharge Pressure). If the Solenoid needs to open when the compressor starts, it can be controlled from the Compressor Run Output.
- The valve is controlled to maintain a minimum differential pressure that will provide oil flow and keep the oil pressure above the oil safeties. The Compressor Differential Pressure Setpoint can be used to set a higher differential pressure setting when necessary.

DISCHARGE BUTTERFLY VALVE CONTROL

[Discharge Butterfly Valve Control]

- Disabled
- Enabled

[Valve Open]

Discharge Pressure Offset

Valve Control

Compressor Differential

Proportional Band

Status

The values shown in this box are informational only:

Control Output - This shows the percentage value that the Control Output is currently at.

Suction Pressure - The actual Suction Pressure is shown here.

Discharge Pressure - The actual Discharge Pressure is shown here.

System Discharge Pressure- The actual System Discharge Pressure is shown here.

I/O Board - Select from one of the following:

- None
- Analog Board 1
- Analog Board 2

I/O Channel - Enter the output channel that will be used.

CONFIGURATION – PACKAGE (OPTIONS - ECONOMIZER BUTTERFLY VALVE CONTROL)

The screenshot shows the 'Economizer Butterfly Valve Control' configuration screen. At the top, it indicates the valve is 'Enabled'. The 'Name' field is set to 'Economizer Butterfly Valve'. Under 'Valve Control', the 'Economizer Port Pressure Control' is set to 'Disabled'. Other parameters include: Economizer Pressure Setpoint (40.0 PSIG), Open Rate (2.0%), Economizer Proportional Band (5.0 PSI), Economizer Integration Time (30 SEC), Economizer High Limit (100.0%), and Economizer Low Limit (0.0%). The 'Status' section shows Control Output at 0.0% and Economizer Pressure at 42.1 PSIG. At the bottom, the I/O Board is set to 'None' and the I/O Channel is '0'.

The 'ACCESSING:' menu is a vertical stack of four blue buttons. From top to bottom, they are: 'Configuration' (with a wrench icon), 'Package', 'Options', and 'Economizer Butterfly Valve' (highlighted in orange).

DESCRIPTION: Use this screen to set the operational characteristics of the Economizer Butterfly Valve.

Refer to the following notes:

- The valve will begin to open when the Slide Valve loads to the Economizer On When Above Setpoint (located on the Configuration > Package screen) and the Economizer Port Pressure (or Calculated Economizer Port Value) drops below the Economizer Pressure.
- The valve will open slowly at a rate set by the Economizer Butterfly Valve Open Rate and will close quickly based on the mechanics of the valve.
- The valve will modulate to control the Economizer Pressure to the Economizer Pressure Setpoint.

The following drop down menus are provided:

[Economizer Butterfly Valve Control] – A pull down menu is provided to select from the following:

- Disabled
- Enabled

[Economizer Port Pressure Control] – A pull down menu is provided to select from the following:

- Disabled – No Port Pressure control.
- Calculated Economizer Port Value
- Economizer Analog Port Input

The following setpoint boxes are provided:

[Economizer Pressure Setpoint]

[Open Rate]

[Proportional Band] – This setpoint determines the size of a region either above or below the Control Setpoint. Within this region, the Proportional component of the Economizer Butterfly Valve Output value is the number between 0% and 100% that directly corresponds to the difference between the Economizer Pressure (Actual) and the Economizer Pressure Setpoint. Outside of this region, the Proportional component is either 100% or 0%.

[Integration Time]

[High Limit]

[Low Limit]

[I/O Board] – A pull down menu is provided to select from the following:

- None
- Analog Board 1
- Analog Board 2

[I/O Channel] – A setpoint entry box is provided to select the analog board channel that you wish to use.

Status


The values shown in this box are informational only:

Control Output – This shows the percentage value that the Control Output is currently at.

Suction Pressure – The actual Suction Pressure is shown here.

Calculated Economizer Port Pressure –

CONFIGURATION – PACKAGE (OPTIONS - SEPARATOR CONDENSING)

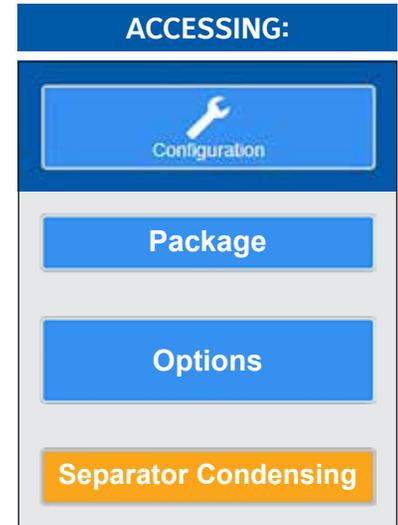

DESCRIPTION: Use this screen to set the operational characteristics of the Separator Condenser.

If the Compressor Discharge Temperature drops below the Saturated Discharge Temperature, refrigerant will begin to condense in the separator. When this occurs, liquid refrigerant may drop to the bottom of the separator.

The result of this is refrigerant being fed to the compressor instead of oil. The compressor bearings will not be properly lubricated and liquid slugging could occur through the main oil injection port, quickly damaging the compressor.

These setpoints are important when the compressor is at risk of operating close to conditions that would cause refrigerant to condense in the separator.

SEPARATOR CONDENSING

Separator Condensing

- Disabled
- Enabled

When enabled, the following logic will apply:

Running

- Warning Offset/Warning Delay - If the compressor is Running and the Discharge Temperature drops below the Saturated Discharge Temperature plus the Warning Offset and remains at this level for the Time Delay, a Separator Condensing Warning message will be generated.

Calculation: [Discharge Temp. < (Saturated Discharge Temp. + Warning Offset)]

- Shutdown Offset/Shutdown Delay - If the compressor is Running and the Discharge Temperature drops below the Saturated Discharge Temperature plus the Shutdown Offset and remains at this level for the Time Delay, a Separator Condensing Shutdown message will be generated.



Calculation: [Discharge Temp. < (Saturated Discharge Temp. + Shutdown Offset)]

Starting

- Start Inhibit Offset - If the compressor is Off and the Separator Temperature is below the Saturated Discharge Temperature plus the Start Inhibit Offset, the compressor will not be allowed to start and the message Start Inhibit Separator Condensing will be displayed on the Home screen.

Calculation: [Separator Temp. < (Saturated Discharge Temp. + Start Inhibit Offset)]

CONFIGURATION – PACKAGE (OPTIONS – SEPARATOR DEWPOINT)

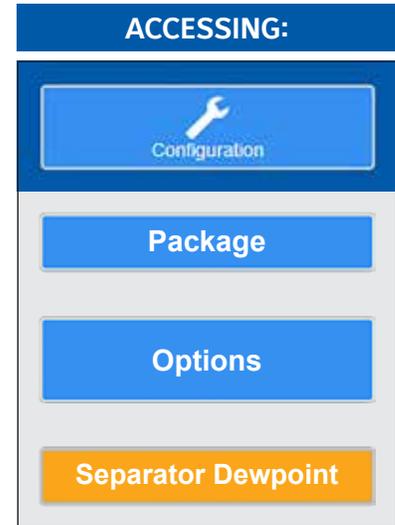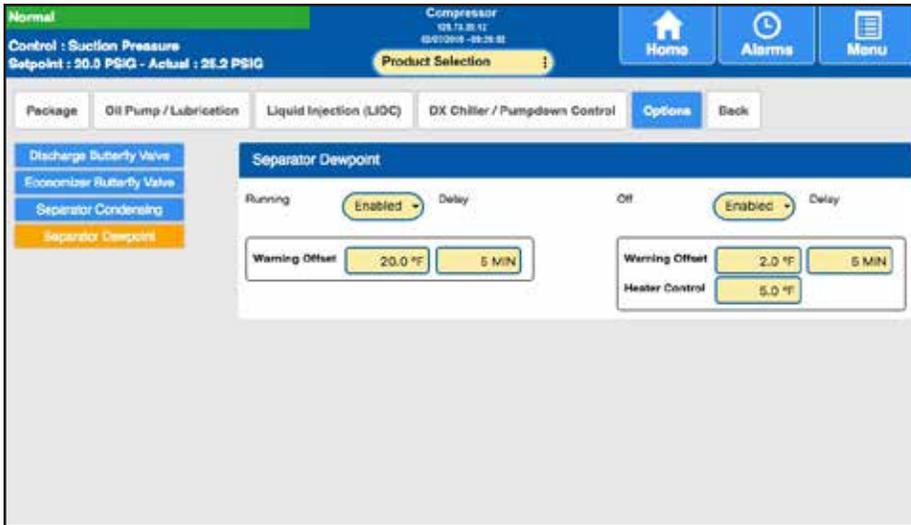

DESCRIPTION: Use this screen to set the operational characteristics of the Separator Dewpoint.

The *Separator Dewpoint* temperature safeties are designed to protect a screw compressor that is compressing a water saturated natural gas mixture. These safeties calculate the dew point of a natural gas mixture for an assumed natural gas saturated with water and compare the dewpoint to the actual *Discharge* or *Separator Temperature*. The dewpoint calculation finds the mole fraction of the water vapor using the partial pressure of the water vapor assuming an ideal gas state.

Separator Dewpoint - Running

- Disabled
- Enabled

If the *Separator Dewpoint Running* has been enabled, the following logic will apply:

[Warning - Offset] – If the compressor is *Running* and the *Discharge Temperature* drops below the *Calculated Dewpoint* plus the *Offset* and remains at this level for the *Time Delay*, a warning message is generated. The warning message is *Condensing Water In Separator Warning (Running)*.

- **Calculation:** [Discharge Temp. < (Calc. Dewpoint + Warning)]

Separator Dewpoint - Off


- Disabled
- Enabled

If the *Separator Dewpoint - Off* has been enabled, the following logic will apply:

[Warning - Offset] – If the compressor is *Off* and the *Separator Temperature* drops below the *Calculated Dewpoint* plus the *Offset* and remains at this level for the *Time Delay*, a warning message will be generated. The warning message is *Condensing Water In Separator Warning (Off)*.

- **Calculation:** [Separator Temp. < (Calc. Dewpoint + Warning)]

CONFIGURATION – COMPRESSOR

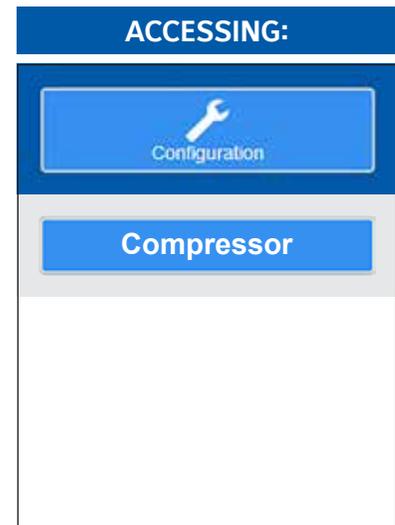

DESCRIPTION: Use this screen to set the operational characteristics of the compressor.

Configuration - Compressor continued on next page...

COMPRESSOR INFO

[Compressor Name] - An alpha-numeric name will be shown here. Select this button to change the name.

[Compressor Model] - Selecting this button will cause a pop-up list of compressor models to appear. Select the model for this compressor.

[Compressor S/N] - This will show the serial number for the compressor. Only qualified service personnel should ever change this.

CAPACITY SLIDE

[Maximum Capacity Slide Position] - When in Automatic Mode, this value specifies the maximum percentage that the Slide Valve will be permitted to load to. There are two predefined ranges that are applied to this setpoint:

If the Maximum Capacity Position were to be set to 90%, the Slide Valve would be permitted to load to 86% (this 86% value is arrived at by subtracting 4% to the Maximum Capacity Position setpoint). Once reaching 86%, the Load signal would be turned off, allowing the Slide Valve to continue increase if necessary.

If the position reached 88% (2% predefined value) the Unload signal would be proportionally pulsed in an attempt to lower the value back down below the 86%. If, even with the Unload signal being pulsed, the Slide valve position continues to increase, it will be permitted to do so until it reaches 90%, at which time the Unload signal will be turned fully on, and will remain on until the Slide Valve position decreases below the 90% value where the Unload signal will again be proportionally pulsed.

If set to 100%, this portion of the logic will be disabled.

[Minimum Capacity Slide Position] - When in Automatic Mode, this value specifies the minimum percentage that the Slide Valve will be permitted to unload to. There are two predefined ranges that are applied to this setpoint:

If the Minimum Capacity Position were to be set to 30%, the Slide Valve would be permitted to unload to 34% (this 34% value is arrived at by adding 4% to the Minimum Capacity Position setpoint). Once reaching 34%, the Unload signal would be turned off, allowing the Slide Valve to continue decreasing if necessary.

If the position reached 32% (2% predefined value) the Load signal would be proportionally pulsed in an attempt to raise the value back up above the 34%. If, even with the Load signal being pulsed, the Slide valve position continues to drop, it will be permitted to do so until it reaches 30%, at which time the Load signal will be turned fully on, and will remain on until the Slide Valve position increase above the 30% value, where the Load signal will again be proportionally pulsed.

If set to 0%, this portion of the logic will be disabled.

[Highest Capacity Slide Position to Permit Starting] - The Slide Valve position must be equal to or less than this setpoint to allow the compressor to start.

[Starting Period Before Permitting Capacity Slide Increase] - This setpoint indicates the time period after the compressor goes to the Running State that the Slide Valve will not be allowed to load.

[Stopping Period For Capacity Slide Unload] - When the compressor is commanded to stop, the Slide Valve will unload

for this period, or until the Slide Valve is at or below the Highest Capacity to Permit Starting setpoint.

CAPACITY SLIDE UNLOAD ASSIST

[Rate of Decrease] - This control will break the possible hydraulic lock between the slide stop and slide valve that may occur, particularly with large diameter rotors (283 & 355mm compressors). If the Vi (volume ratio) is 4.8 or lower and the slide valve is 100%, then the slide stop will be given an increase command simultaneous to the slide valve unload command. Once the slide valve has moved by a value in percent that is equal to the Capacity Unload Assist setpoint, a decrease command will be given to the slide stop while the slide valve continues to receive a unload command. If the Vi or volume ratio is greater than 4.8 and the slide valve is 100% the slide stop will be given a decrease signal simultaneous with a slide valve unload signal. Once the slide valve is seen to have moved by a value in percent that is equal to the Capacity Unload Assist setpoint, the slide stop will be allowed to move back to the proper operating position based on compression ratio.

LIQUID SLUGGING

[Liquid Slugging Warning] - This warning is triggered from a sudden decrease in Discharge Temperature that is greater than the Liquid Slug Warning setpoint occurring in a five (5) second period of time. That is, if the Discharge Temperature is 130 degrees F, and the Liquid Slugging Warning setpoint is 10 degrees F, then a sudden drop in Discharge Temperature from 130 to 120 degrees F within a five second period will generate a warning condition.

[Liquid Slugging Shutdown] - This shutdown is triggered from a sudden decrease in Discharge Temperature that is greater than the Liquid Slugging Shutdown setpoint occurring in a five (5) second period of time. That is, if the Discharge Temperature is 130 degrees F, and the Liquid Slug Shutdown setpoint is 20 degrees F, then a sudden drop in Discharge Temperature from 130 to 110 degrees F within a five second period will generate a shutdown condition.

PULL DOWN - With this option enabled, the Suction Pressure can be slowly lowered in steps. Slowly walking the pressure down prevents rapid drops in system pressure that may cause boiling of refrigerant in the system. The following selections are provided:

[Enable]

- Disabled - The Pull Down feature is ignored.
- Enabled - The Pull Down feature will be utilized.

[Capacity Slide Stop] - The percentage of travel that the Slide Valve is permitted to load upon Compressor starting, and thereafter determined by the Amount of Time setpoint. For example, if this setpoint is 5%, and the Amount of Time setpoint is 1 Minute, then the Slide Valve will be permitted to load 5% of its stroke every minute, until such time as the compressor has reached capacity. It would take 20 minutes for the Slide Valve to fully load to 100% at this rate. Once capacity has been achieved, this function is ignored, until such time as the compressor is restarted.

[Wait Time] - The amount of time between when the Slide Valve is permitted to move. See Capacity Slide Stop description.

BALANCE PISTON

[On]

[Off]

CONFIGURATION – DRIVE (MOTOR)

DESCRIPTION: Use this screen to set the specific Drive safeties information for a constant speed electric drive motor. These safeties are important for the safe operation of the compressor and motor.

The information that appears on this screen will also be repeated for most other types of motor drives. The following pull-down menus and setpoint boxes are shown here. This information should be recorded from the motor nameplate:

NAME PLATE

- **[Motor FLA]** – Enter the value from the motor nameplate.
- **[Line Voltage]** – Enter the value from the motor nameplate.
- **[Efficiency]** – Reference the motor nameplate.
- **[Service Factor]** – Not required if using RAM DBS.
- **[Power Factor]** – Consult motor manufacturer for this value. PF = % of real power (W or kW) to apparent power (kVA). Value will not impact unit performance, and is used for energy monitoring only.
- **[Horse Power]** – Enter the value from the motor nameplate.
- **[Recycle Delay]** – Each time the compressor is started this value will be loaded into the Recycle Delay timer. This time must elapse prior to allowing the compressor to restart. The timer will time out while the compressor is running or stopped since the Recycle Delay is a start-to-start protection. The Recycle Delay time is intended to prevent damage to the motor from successive restarts.

NOTICE

Consult Motor Manufacturer for the recommended duration of the Recycle Delay.

- **[Clear Recycle Delay]** – This selection will clear the remaining delay time, allowing the motor to be re-started immediately.

⚠ WARNING

Selecting Clear Recycle Delay may cause damage to the compressor motor.

CT Factor – The Current Transformer Factor is printed on the current transformer in the compressor motor starter.
Note: Not required if using RAM DBS.

To verify proper CT sizing, use the following equation:

$$CTF = FLA \text{ (Full Load Amps)} \times \text{Service Factor} \times 1.1 = \text{Recommended CT (Round up to next highest 100 Amps)}$$

EXAMPLE: FLA = 182 Amps & SF = 1.15
 $CTF = (182 \times 1.15 \times 1.1) = 230.23 >$
 Round up to 300 [use 300:5 CT]

POWER OUTAGE RESTART

Restart Delay – Will stagger the starting of compressors after power is restored to prevent multiple compressors from starting at the same time.

- Disabled
- Enabled
- Time

Restart Lockout – Prevents compressor from starting after a power outage that lasts longer than the setpoint.

- Disabled
- Enabled
- Time

MOTOR SAFETIES

High Motor Amps (Considering a 1.15 SF):

- **[Load Inhibit]** – The compressor slide valve will be prevented from loading until the Motor Amps is less than this setpoint.
TYPICAL SETTING: Motor Amps Stop Load = FLA x 100%
- **[Force Unload]** – When the Motor Amps is greater than or equal to this setpoint, the compressor Slide Valve will be forced to unload.
TYPICAL SETTING: Motor Amps Force UnLoad = FLA x 105%
- **[Warning]** – If the Motor Amps is greater than or equal to this setpoint, for the warning time delay, a warning occurs.

- **[Warning Delay]** – The minimum time in seconds that the Motor Amps is greater than or equal to the High Motor Amps Warning setpoint before notification of the warning.
- **[Shutdown]** – If the Motor Amps is greater than or equal to this setpoint, for the shutdown time delay, the compressor will shut down.
 - **[Shutdown Delay]** – The minimum time in seconds that the Motor Amps is greater than or equal to the High Motor Amps Shutdown setpoint before the compressor will shut down.

Low Motor Amps:

- **[Low Motor Amps Shutdown]** – This setpoint is used to determine if the coupling has broken. If the Motor Amps is less than or equal to this setpoint, for the shutdown time delay, the compressor will shut down.
- **[Low Motor Amps Shutdown Delay]** – The minimum time in seconds that the Motor Amps is less than or equal to the Low Motor Amps Shutdown setpoint before the compressor will shut down.

- **[Confirmed Running Motor Amps]** – The measured Motor Amps must be greater than or equal to this setpoint before the compressor will transition from Starting to Running.
- **[Starting Motor Amps Ignore Period]** – After the compressor is commanded to start, this setpoint indicates the period during which the High Motor Amps Load Inhibit and Force Unload checks are not performed.

The following selection will allow the technician to manually energize, or bump, the compressor motor for the purpose of determining motor rotation.


The following setpoint box has been provided:

- **[Motor Bump Time]** – Set this value to the length of time that you wish to have the compressor motor energized, or “bumped”. The range is 0.0 to 15.0 seconds.

The following user selectable buttons are provided:

- **[Bump Motor]** – When this button is selected, the compressor motor will be energized, or “bumped” for the period of time as set in the Motor Bump Time setpoint box.


CONFIGURATION – DRIVE (SSW STARTER)

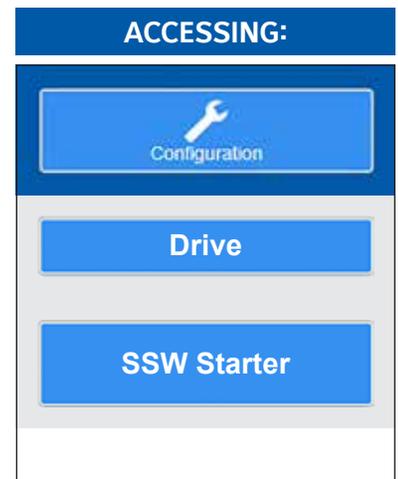

DESCRIPTION: Use this screen to set the specific Drive safeties information for an SSW starter. These safeties are important for the safe operation of the compressor and motor.

- **Start Configuration** – Select the type of start between Voltage Ramp or Current Limit. Voltage Ramp is the standard mode of starting where the voltage applied to the motor is ramped over an acceleration period to bring the motor up to speed. Current Limit is used when the maximum current available to start is limited by the service or provider to limit the inrush at startup.
- **Initial Voltage** – Establishes the initial voltage as a percentage of the line voltage that is applied to the motor at start. The voltage is then ramped over the Accel Ramp Time parameter to get to full line voltage applied to the motor.
- **Current Limit** – Replaces the Initial Voltage parameter when Current Limit is selected as the Start Configuration. This limits the current that can be applied to the motor during starting. It is a percentage of the motors full load current.
- **Accel Ramp Time** – The time that the motor will ramp to get to full speed prior to pulling in the bypass contactors. Depending on conditions, the motor may get to full speed before this time expires.
- **Read Motor Amps From** – If selected as SSW, the motor amps is read through the communications with the starter. If selected as CT, the motor amps is an analog signal from the CT (Current Transformer) in the starter.

CONFIGURATION – DRIVE (VSD)

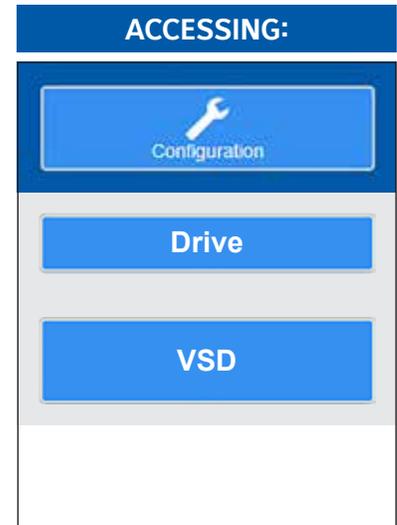

DESCRIPTION: Use this screen to set the specific Drive safeties information for a VSD (Variable Speed Drive) motor starter. These safeties are important for the safe operation of the compressor and motor.

BASICS OF VFD OPERATION

Relying on user input as well as system pressures and temperatures, the Quantum™ HD directs the Variable Speed Drive to start or stop the compressor and change the compressor's speed to regulate capacity. The setpoints that primarily control the operation of the VSD are found on the Quantum HD's Capacity Control Setpoints and Motor Setpoints pages.

To start the compressor, the Quantum™ HD sends a signal to the VSD to turn on the motor. When the VSD receives the start command, it turns on the motor and ramps up to the speed set by the VSD Minimum Drive Output setpoint. At the same time if the slide valve is below the Variable Speed Minimum Slide Valve Position, it immediately loads to the Variable Speed Minimum Capacity Valve Position.

As more capacity is required, the Quantum™ HD loads Capacity Slide. The Capacity Control Settings (on the Motor Setpoints page) can be configured to cause the motor speed to increase at the same time, but in most VSD applications the Capacity Control Drive Speed setpoint is set to match the Minimum Drive Output setpoint. In this configuration the motor speed will remain at its minimum speed until the slide valve loads above the Capacity Control Slide Valve setpoint. If the slide valve cannot load due to a slide valve load inhibit condition or because the compressor cannot build differential pressure, the motor speed will increase to meet the capacity requirement.

When the Capacity Slide reaches the Capacity Slide to Speed Transition setpoint, the motor speed can then increase. At this point the Capacity Slide and motor speed can continue to increase independently of one another until the capacity requirement is met or they reach their maximum values. If the compressor is in Auto mode, the motor speed is controlled by the VSD Proportional Band and VSD Integration Time setpoints.

If less capacity is required, the Quantum™ HD will first decrease the motor speed. The motor speed can drop as low as the Speed to Capacity Transition setpoint. When the motor speed reaches

this point, depending on the Quantum™ HD's configuration, the Capacity Valve may unload or the Quantum™ HD may stop the compressor. If the Capacity Valve is permitted to unload, it will not unload below the Variable Speed Minimum Capacity Slide Position while the compressor is running.

DRIVE CONTROL

[Maximum Drive Output] - This setpoint represents the maximum signal to the drive from the Quantum™ HD, where 100% would represent 3600 rpm on a 3600 rpm – 60 hz motor. Selectable from 1-100% of the 4-20 mA signal. Minimum speed is conditional based on oil, refrigerant, etc. Be certain that the Minimum Drive Output is properly identified.

[Minimum Drive Output] - This setpoint represents the minimum signal to the drive from the Quantum™ HD, where 20% would represent 720 rpm on a 3600 rpm – 60 hz motor. Selectable from 1-100% of the 4-20 mA signal.

Capacity Slide To Speed Transition - The first setpoint in the Capacity Control section [95%] is the slide valve position at which the speed will be allowed to increase to maintain the capacity control setpoint. It also represents the slide valve position of which the speed will increase proportionally to the value of the second setpoint [50%] from the Minimum Output setpoint. If the second setpoint, also known as the Speed to Capacity Slide Proportion setpoint was set at [50%] the speed would increase proportionally from the Minimum Drive Output setpoint [20%] to [50%] as the slide valve loads from 0% to 95%. In this case, that would be an increase of approximately 1% speed to every 3% slide valve.

Speed To Capacity Slide Proportion - The speed at which the Slide Valve will load.

VFD Minimum Capacity Slide Position - (100% Maximum Drive Output - Minimum Drive Output)/2. For example:

Maximum Drive Output is 100%, Minimum Drive Output is 20%, then the Minimum Slide Valve Output would be 40%:

$$(100-20)/2 = 40$$

NOTE: The Absolute Minimum RPM is 720.

Recycle Delay Control - Set this to disabled if you do not want to utilize the Recycle Delay feature. Enable it to use it.

- Disabled
- Enabled

REMOTE SPEED CONTROL


Provided For backward compatibility to older control systems if necessary. Preferred method of control is by the Quantum HD.

- [Rate of Increase] - The rate of speed increase over the duration of the Delay setpoint when either a serial load command is received or a digital load signal is received.
- [Rate of Decrease] - The rate of speed decrease over the duration of the Delay setpoint when either a serial unload command is received or a digital unload signal is received. This also sets the rate at which the panel will cause a Force Unload for high or low pressure and separator velocity. For Force Unloading the Rate Of Decrease is two times the value of the setpoint.

SKIP FREQUENCY BANDS



Skip Frequency Bands - These setpoints provide the ability to lockout 5 frequency bands where abnormal noise may occur due to the resonance of various components throughout the speed range. The slide valve needs to be at 100% when the speed range is run through to detect these bands. The limit is 5% from bottom to the top of each band lockout.

During drive ramp up, these bands will be skipped.

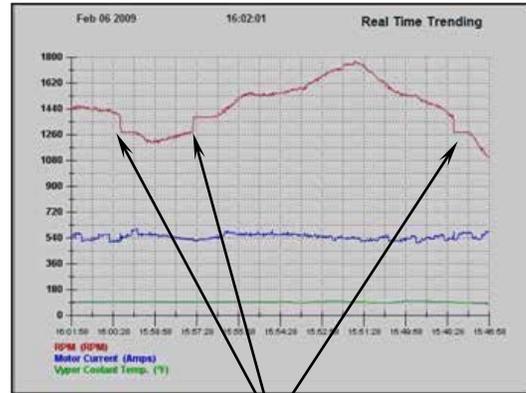

Defined frequency SKIP areas

CONFIGURATION – DRIVE (VYPER - CONTROL)

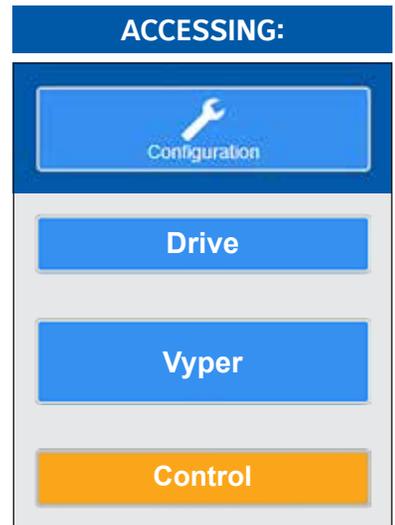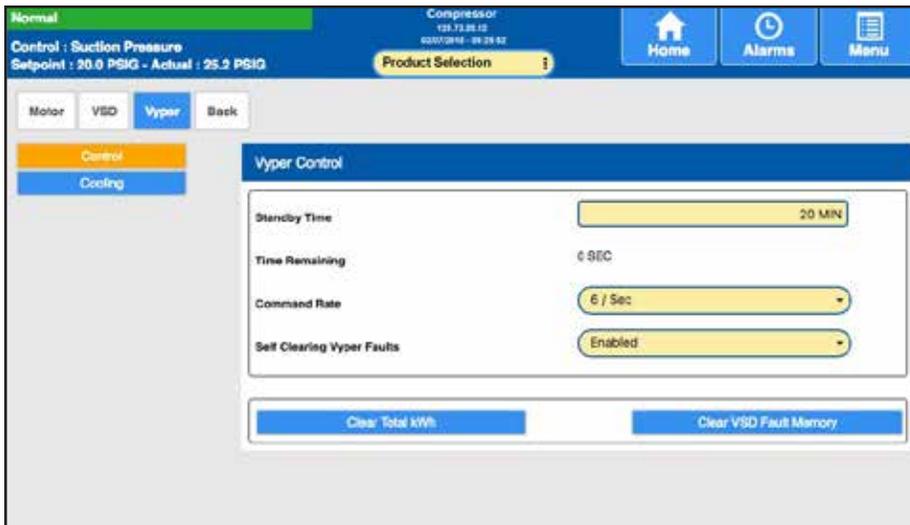

DESCRIPTION: Use this screen to set the specific Drive safeties information for a Vyper motor starter. These safeties are important for the safe operation of the compressor and motor.

VYPER CONTROL

Standby Time - The amount of time after the compressor is stopped that the Vyper will keep the DC Bus charged to quickly react to Start commands.

Time Remaining - The time remaining for standby time once the standby time expires, allowing the DC Bus to discharge.

Command Rate - The frequency of communications per second.



Self Clearing Vyper Faults - Many Vyper faults are self-clearing. If the Self-Clearing Faults has been enabled, the Vyper can clear faults and be re-started if needed.

- Disabled
- Enabled

Clear Total kWh - Clears the total KiloWatt hours accrued by the Vyper.

Clear VSD Fault Memory - Clears the VSD fault memory.

CONFIGURATION – DRIVE (VYPER – COOLING)

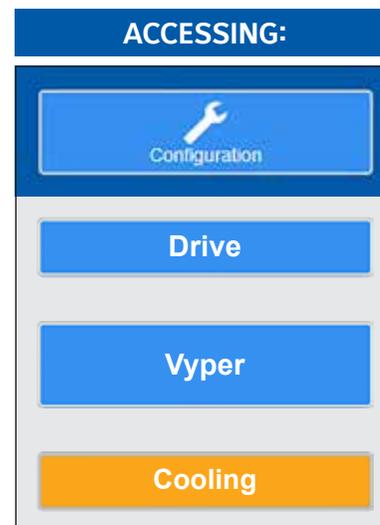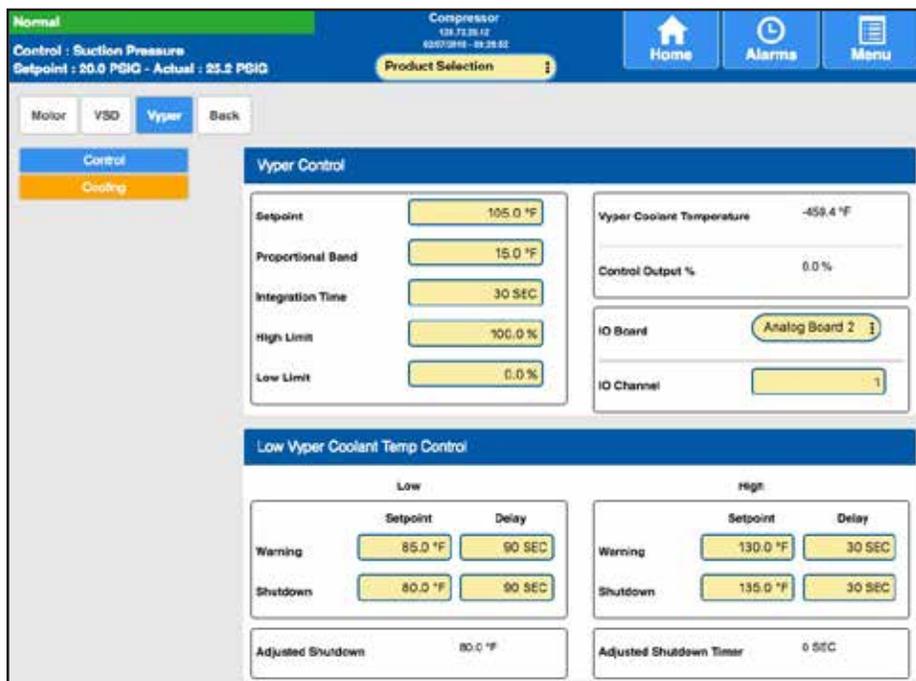

DESCRIPTION: Use this screen to set the specific Drive safeties information for a Vyper motor starter. These safeties are important for the safe operation of the compressor and motor.

VYPER COOLING

Setpoint - Enter the value that you wish to control to.

Proportional Band - This setpoint determines the size of a region either above or below the Setpoint. Within this region, the Proportional component of the Output value is the number between 0% and 100% that directly corresponds to the difference between the Vyper Coolant Temperature (Actual) and the Setpoint. Outside of this region, the Proportional component is either 100% or 0%.

Integration Time - This setpoint controls the influence that the Integral component exerts on the Output value. The Integral component works to push the Vyper Coolant Temperature toward the Setpoint by tracking the difference between the temperature and the Setpoint over time.

High Limit - The highest value that the output can be.

Low Limit - The lowest value that the output can be.

Vyper Coolant Temperature - The actual reading of the Vyper Coolant Temperature.

Control Output % - The actual value that is being output to control the temperature.

I/O Board - Three selections are provided:

- None - No board selected.
- Digital Board 1 - The Output to be controlled is located on Digital Board 1.
- Digital Board 2 - The Output to be controlled is located on Digital Board 2.

I/O Channel - Enter the channel of the selected Digital Board to control (1 - 24).

LOW VYPER COOLANT TEMP CONTROL

Low Warning Setpoint - If the Vyper Coolant temperature is less than or equal to this setpoint for the amount of time as set for the Low Warning Delay, then a Warning is issued.

Low Warning Delay - The time period as set here will begin to time down if the Vyper Coolant temperature is less than or equal to the Low Warning Setpoint, and remains below or equal. When this delay times out, a Warning will be issued.

Low Shutdown Setpoint - If the Vyper Coolant temperature is less than or equal to this setpoint for the amount of time as set for the Low Shutdown Delay, then a Warning is issued.

Low Shutdown Delay - The time period as set here will begin to time down if the Vyper Coolant temperature is less than or equal to the Low Shutdown Setpoint, and remains below or equal. When this delay times out, a Shutdown will be issued.

High Warning Setpoint - If the Vyper Coolant temperature is greater than or equal to this setpoint for the amount of time as set for the High Warning Delay, then a Warning is issued.

High Warning Delay - The time period as set here will begin to time down if the Vyper Coolant temperature is greater than or equal to the High Warning Setpoint, and remains greater or equal. When this delay times out, a Warning will be issued.


High Shutdown Setpoint - If the Vyper Coolant temperature is greater than or equal to this setpoint for the amount of time as set for the High Shutdown Delay, then a Shutdown is issued.

High Shutdown Delay - The time period as set here will begin to time down if the Vyper Coolant temperature is greater than or equal to the High Shutdown Setpoint, and remains greater or equal. When this delay times out, a Shutdown will be issued.

Adjusted Shutdown - On Start-up, the Low Vyper Coolant Alarm and Shutdown are set to the Current Vyper Coolant Temperature plus 5 degrees F.

Adjusted Shutdown Timer - Once the Adjusted Shutdown timer (30 minutes) expires, the Low Vyper Coolant Warning and Shutdown settings return to the pre-start setpoints.

CONFIGURATION – DRIVE (DBS STARTER)

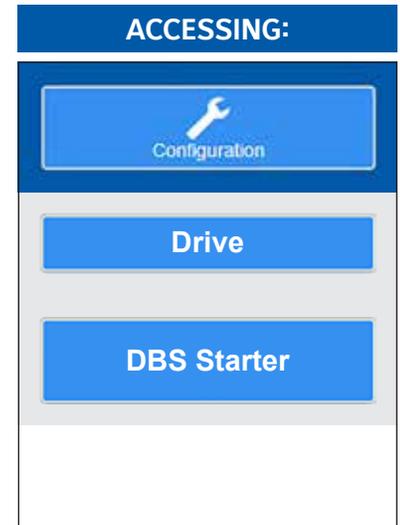

DESCRIPTION: Use this screen to set the specific Drive safeties information for a DBS motor starter. The purpose of a DBS motor starter is to accelerate the motor in a smooth stepless motion, therefore it reduces supply voltage dip during motor start, and mechanical shock on the compressor. These safeties are important for the safe operation of the compressor and motor.

DBS STARTER

The following setpoint boxes are provided. These setpoints are updated via communications to the DBS controller. When a setpoint has been changed at the Quantum™ HD, it is sent to and updates the DBS:

- Locked Rotor Current
- Stall Time
- Jam Current Level
- Jam Run Delay
- Service Factor
- Current Unbalance Alarm Level
- Current Unbalance Warning Delay
- RTD Temperature Warning Level
- RTD Temperature Trip Delay

A pop-up menu is provided:

Read Motor Amps From – Choose one of the following selections to determine where to read the Motor Amps from:


- DBS – Read the Motor Amps directly from the DBS panel to the Quantum™ HD through RS-4845 communications.
- CT – Read the Motor Amps through an optionally connected and configured CT (Current Transformer). This CT, if provided, will be located on channel 16 of analog board 1.

DBS Comms - When communications from the Quantum™ HD to the DBS starter is functioning normally, the software version of the DBS panel will be shown here. A value of zero (0) indicates that there is no communications.

At the bottom of this screen is a button labeled as **[Load Factory Defaults]**. Selecting this button will cause the above listed setpoint values to be re-written with the original factory setpoints. These setpoints are sent from the DBS panel via communications into the Quantum™ HD.

NOTE: Contact Schneider Electric at 800-220-8697 with any further questions concerning the setup and operation of the RAM DBS.

CONFIGURATION – DRIVE (ENGINE / TURBINE)

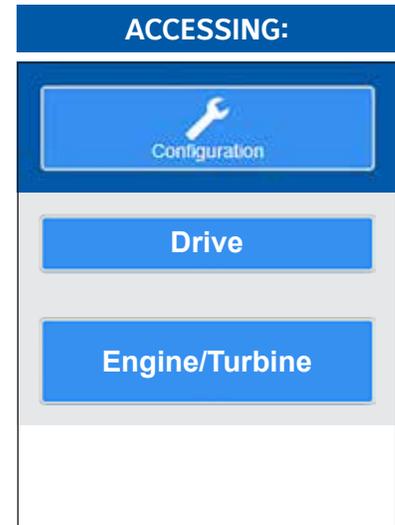

DESCRIPTION: Use this screen to set the specific Drive safeties information for an Engine/Turbine motor starter. These safeties are important for the safe operation of the compressor and motor.

ENGINE/TURBINE

Low RPM

Load Inhibit - The compressor slide valve will be prevented from loading until the RPM's are less than this setpoint.

Force Unload - When the RPM's are greater than or equal to this setpoint, the compressor Slide Valve will be forced to unload.

Warning - If the RPM's are less than or equal to this setpoint, for the warning time delay, a warning occurs.

Warning Delay - The minimum time in seconds that the RPM's are less than or equal to the Low RPM Warning setpoint before notification of the warning.

Shutdown - If the RPM's are less than or equal to this setpoint, for the shutdown time delay, the compressor will shut down.

Shutdown Delay - The minimum time in seconds that the RPM's are less than or equal to the Low RPM Shutdown setpoint before the compressor will shut down.

High RPM

Warning - If the RPM's are greater than or equal to this setpoint, for the warning time delay, a warning occurs

Warning Delay - The minimum time in seconds that the RPM's are greater than or equal to the Low RPM Warning setpoint before notification of the warning.

Shutdown - If the RPM's are greater than or equal to this setpoint, for the shutdown time delay, the compressor will shut down.

Shutdown Delay - The minimum time in seconds that the RPM's are greater than or equal to the Low RPM Shutdown setpoint before the compressor will shut down.



Confirmed Running - The measured RPM's must be greater than or equal to this setpoint before the compressor will transition from Starting to Running.

Starting Maximum Delay - After the compressor is commanded to start, this setpoint indicates the period during which the High RPM's Load Inhibit and Force Unload checks are not performed.

Idle Speed

Cool Down Period Before Stopping

CONFIGURATION – CAPACITY CONTROL (CAPACITY MODES)

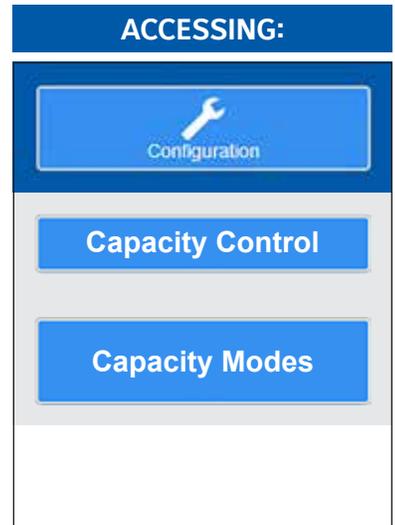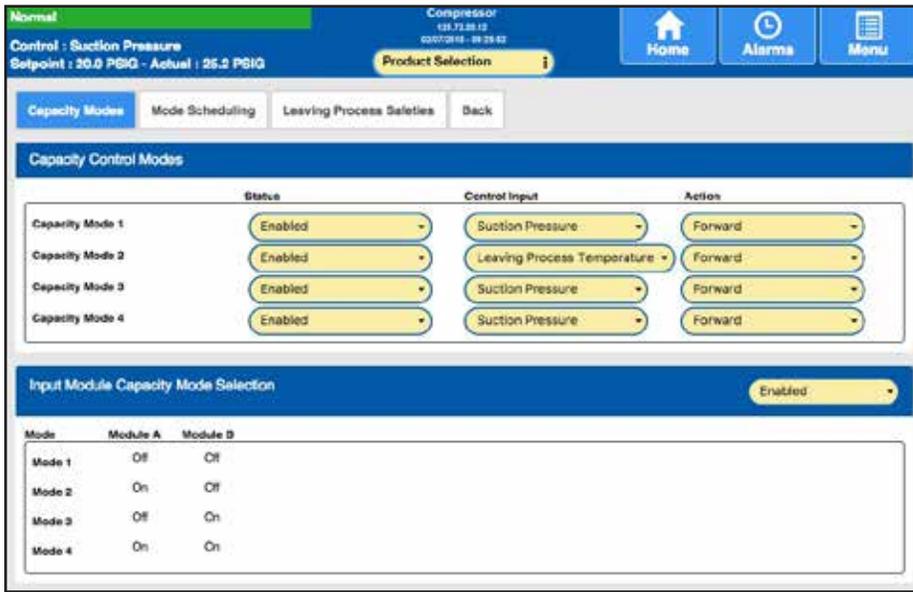

DESCRIPTION: Use this screen to set the Capacity Control Modes.

CAPACITY CONTROL MODES

[Status] - A pull down menu is provided to select from the following:

- Disabled
- Enabled

[Control Point] - A pull down menu is provided to select from the following:

- Suction Pressure
- Discharge Pressure
- Economizer Pressure
- System Discharge Pressure
- Suction Temperature
- Discharge Temperature
- Process/Brine Temperature Leaving
- Process/Brine Temperature Entering
- Auxiliary 1 thru 10

[Action]


- Forward – As the Capacity Control value drops below the capacity control setpoint, these setpoints will protect the compressor by decreasing the capacity, or if necessary shutting down the compressor.
- Reverse - As the Capacity Control value rises above the capacity control setpoint, these setpoints will protect the compressor by decreasing the capacity, or if necessary shutting down the compressor.

INPUT MODULE CAPACITY MODE SELECTION

This provides for selecting the Capacity Control via the two input modules rather than the keypad or communications port. The mode that will be selected can be derived from the following matrix:

Mode	Module A	Module B
Mode 1	Off	Off
Mode 2	On	Off
Mode 3	Off	On
Mode 4	On	On

CONFIGURATION – CAPACITY CONTROL (MODE SCHEDULING)

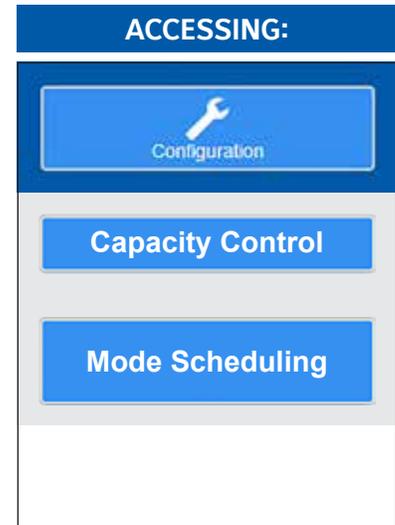

DESCRIPTION: Scheduling allows the user to program up to four different operating schedules for each day of the week. This can be a great way to save energy. At night or on weekends and holidays, or even over lunch periods when room doors are kept closed or production is minimized, a higher temperature can be set to reduce energy consumption.

CAPACITY MODE SCHEDULING

This screen shows a time schedule. Up to four different modes can be entered for each day of the week.

Notice that there are four columns of Hour/Minute entries, each followed by a Mode (1 - 4). Use the left most column (on the row for the day of the week that you wish to schedule) to enter the time of day that you would like the compressor to switch from its normal operating mode, into the scheduled mode. When that time of day arrives, whatever mode the compressor



was running in, will be switched over to the scheduled (Mode 1 -4) mode. This mode will then be the active running mode, and will continue to be the active mode until the time in the following column is reached. If the time in the next column is 00:00, it will be skipped.

The Schedule must be activated to switch the presently active Mode to the Scheduling mode at the assigned time. An entry of 00:00 will void the time entry field. If setback is required at midnight (00:00) use 00:01.

The following are descriptions of the setpoints:

- Time Column** - The time of day that you want to switch to the Scheduled regulation setpoints of the active capacity control.
- Mode Column** - Set this to the Mode (1 - 4) that you want to run at the assigned time.



CONFIGURATION – CAPACITY CONTROL (LEAVING PROCESS SAFETIES)

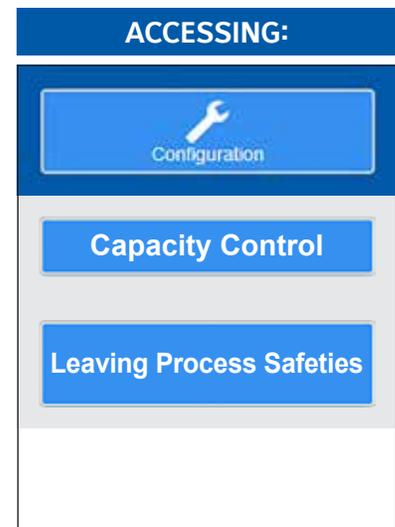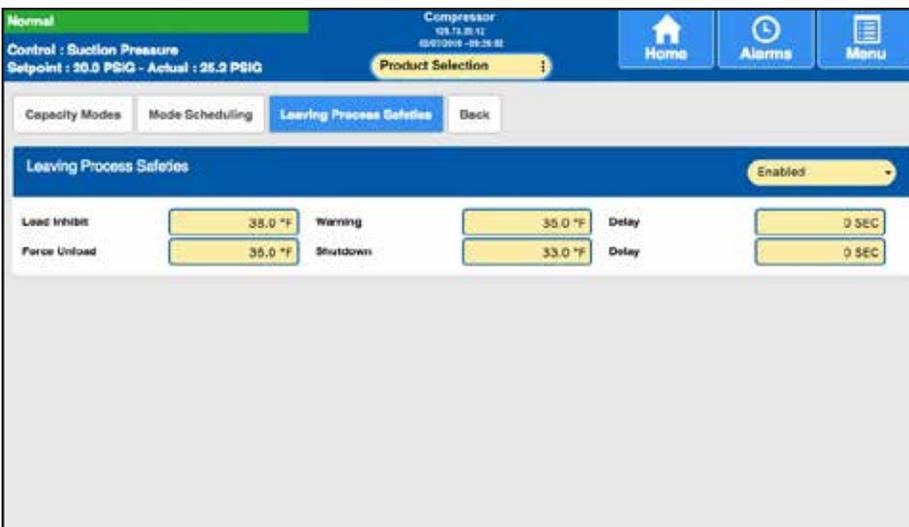

DESCRIPTION: Use this screen to set the Leaving Process Safeties.

Continued on bottom of next page.

CONFIGURATION – DISCHARGE / SUCTION / OIL (DISCHARGE)

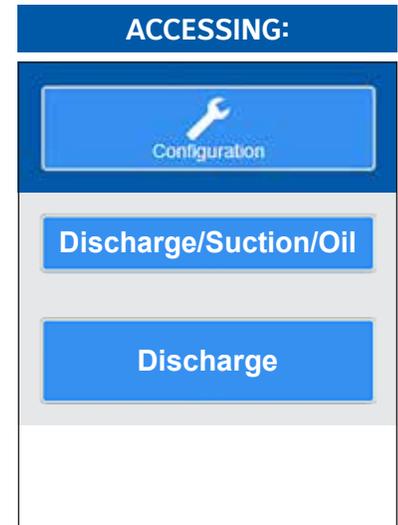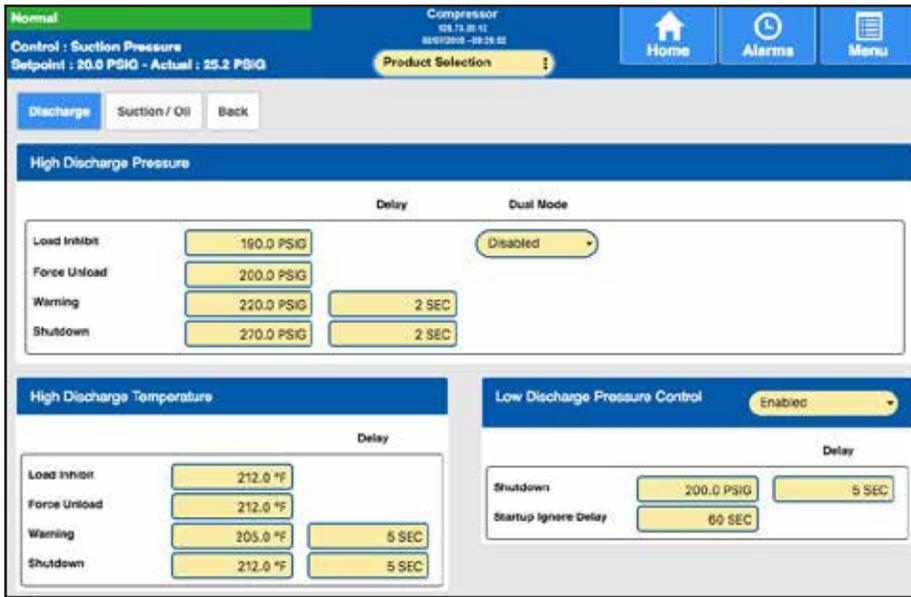

DESCRIPTION: Use this screen to set the Discharge pressure and temperature Safeties.

HIGH DISCHARGE PRESSURE

The following setpoint boxes are provided:

- [Load Inhibit] – The compressor Slide Valve will be prevented from loading until the Discharge Pressure is less than this setpoint.
- [Force Unload] – When the Discharge Pressure is greater than or equal to this setpoint, the compressor Slide Valve will be forced to Unload.
- [Warning and delay] – If the Discharge Pressure is greater than or equal to this setpoint, for the warning time delay, a warning occurs.
- [Shutdown and delay] – If the Discharge Pressure is greater than or equal to this setpoint, for the shutdown time delay, the compressor will be shut down.

HIGH DISCHARGE TEMPERATURE

The following setpoint boxes are provided:

- [Load Inhibit] – The compressor Slide Valve will be prevented from loading until the Discharge Temperature is less than this setpoint.
- [Force Unload] – When the Discharge Temperature is greater than or equal to this setpoint, the compressor Slide Valve will be forced to Unload.
- [Warning and delay] – If the Discharge Temperature is greater than or equal to this setpoint, for the alarm time delay, a warning occurs.
- [Shutdown and delay] – If the Discharge Temperature is greater than or equal to this setpoint, for the shutdown time delay, the compressor will shut down.

LOW DISCHARGE PRESSURE CONTROL

The following setpoint boxes are provided:

- [Shutdown and Delay] – If the Discharge Pressure is less than or equal to the Low Discharge Pressure Shutdown setpoint for its time delay, the compressor will shutdown.
- [Startup Ignore Delay] – Ignores safety logic after Startup for the Delay setting.

CONFIGURATION – CAPACITY CONTROL (LEAVING PROCESS SAFETIES) *Continued from bottom of previous page.*

LEAVING PROCESS SAFETIES

- Disabled
- Enabled

The following setpoint boxes are provided:



Load Inhibit

- Warning – If the Leaving Process Temperature greater than or equal to this setpoint, for the warning time delay, a warning occurs.
- Delay – This is the delay period for the Load Inhibit Warning.

Force Unload

- Warning – If the Leaving Process Temperature is greater than or equal to this setpoint, for the alarm time delay, a warning occurs.
- Delay – This is the delay period for the Force Unload Warning.

CONFIGURATION – DISCHARGE / SUCTION / OIL (SUCTION / OIL)

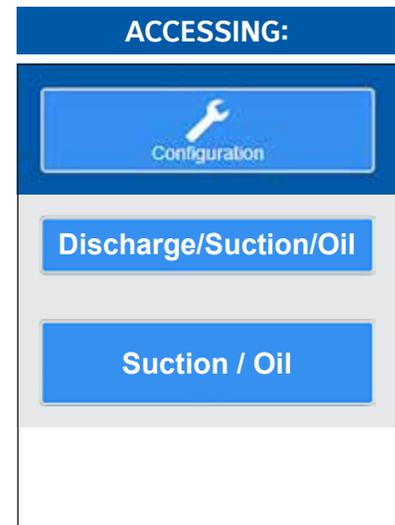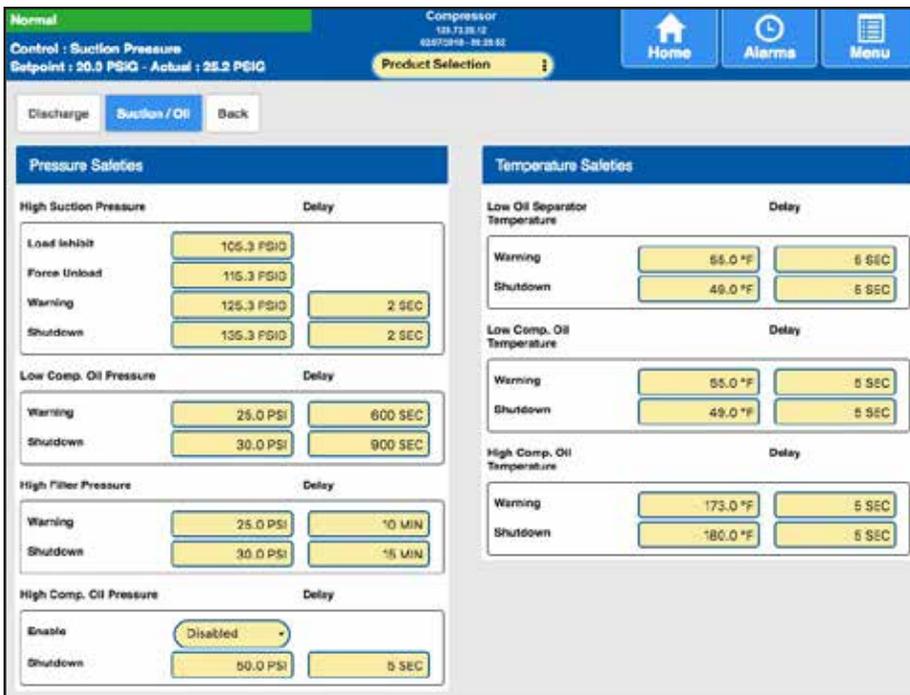

DESCRIPTION: Use this screen to set the pressure and temperature Safeties.

PRESSURE SAFETIES

High Suction Pressure

The following setpoint boxes are provided:

- [Load Inhibit] - The compressor Slide Valve will be prevented from loading until the Suction Pressure is less than this setpoint.
- [Force Unload] - When the Suction Pressure is greater than or equal to this setpoint, the compressor Slide Valve will be forced to Unload.
- [Warning and delay] - If the Suction Pressure is greater than or equal to this setpoint for the warning delay, a warning occurs.
- [Shutdown and delay] - If the Suction Pressure is greater than or equal to this setpoint for the shutdown delay, the compressor will be shut down.

High Filter Pressure

The following setpoint boxes are provided:

- [Warning] - If the Filter Pressure is greater than or equal to this setpoint for the warning delay, a warning occurs.
- [Warning Delay] - The minimum time in seconds that the Filter Pressure is greater than or equal to the High Filter Pressure Warning setpoint before the warning occurs.
- [Shutdown] - If the Filter Pressure is greater than or equal to this setpoint for the shutdown delay, the compressor will shut down.
- [Shutdown Delay] - The minimum time in seconds that the Filter Pressure is greater than or equal to the High Filter Pressure Shutdown setpoint before the compressor will shut down.

High Compressor Oil Pressure

- Disabled
- Enabled

The following setpoint boxes are provided:

- [Shutdown] - If the High Compressor Oil Pressure is enabled and the Oil Pressure is greater than or equal to this setpoint for the shutdown delay, the compressor will shut down.
- [Shutdown Delay] - The minimum time in seconds that the Oil Pressure is greater than or equal to the High Compressor Oil Pressure Shutdown setpoint before the compressor will shut down.

TEMPERATURE SAFETIES

Low Oil Separator Temperature

The following setpoint boxes are provided:

- [Warning] - If the Oil Separator Temperature is less than or equal to this setpoint for the warning delay, a warning occurs.
- [Warning Delay] - The minimum time in seconds that the Oil Separator Temperature is less than or equal to the Low Oil Separator Temperature Warning setpoint before notification of the warning.
- [Shutdown] - If the Oil Separator Temperature is less than or equal to this setpoint for the shutdown time delay, the compressor will shut down.
- [Shutdown Delay] - The minimum time in seconds that the Oil Separator Temperature is less than or equal to the Low Oil Separator Shutdown setpoint before the compressor will shut down.

Low Comp. Oil Temperature

The following setpoint boxes are provided:

- [Warning] - If the Oil Temperature is less than or equal to this setpoint for the warning delay, a warning occurs.
- [Warning Delay] - The minimum time in seconds that the Oil Temperature is less than or equal to the Low Oil Warning setpoint before notification of the warning.

- [Shutdown] - If the Oil Temperature is less than or equal to this setpoint for the shutdown time delay, the compressor will shut down.
- [Shutdown Delay] - The minimum time in seconds that the Oil Temperature is less than or equal to the Low Oil Shutdown setpoint before the compressor will shut down.

Low Oil Pressure

The following setpoint boxes are provided:


- [Warning] - If the Oil Pressure is less than or equal to this setpoint for the warning delay, a warning occurs.
- [Warning Delay] - The minimum time in seconds that the Oil Pressure is less than or equal to the Low Oil Pressure Warning setpoint before notification of the warning.
- [Shutdown] - If the Oil Pressure is less than or equal to this setpoint for the shutdown delay, the compressor will shut down.
- [Shutdown Delay] - The minimum time in seconds that the Oil Pressure is less than or equal to the Low Oil Pressure Shutdown setpoint before the compressor will shut down.

High Oil Temperature

The following setpoint boxes are provided:

- [Warning] - If the Oil Temperature is greater than or equal to this setpoint for the warning delay, a warning occurs.
- [Warning Delay] - The minimum time in seconds that the Oil Temperature is greater than or equal to the High Oil Temperature Warning setpoint before notification of the warning.
- [Shutdown] - If the Oil Temperature is greater than or equal to this setpoint for the shutdown delay, the compressor will shut down.
- [Shutdown Delay] - The minimum time in seconds that the Oil Temperature is greater than or equal to the High Oil Temperature Shutdown setpoint before the compressor will shut down.

CONFIGURATION – DISCHARGE / SUCTION / OIL (LIMITS)

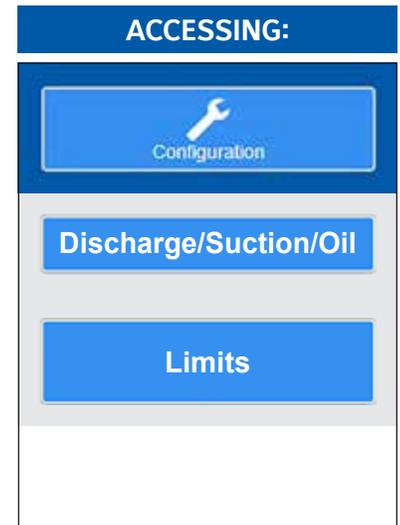

DESCRIPTION: Use this screen to set the pressure and temperature limits.


DISCHARGE, SUCTION AND OIL

The following setpoint boxes are provided:

Maximum Discharge /Oil Temperature - Enter the value here to set the maximum Discharge, Suction and Oil temperature limits.

Maximum Discharge /Suction Pressure - Enter the value here to set the maximum Discharge and Suction Pressure limits.

CONFIGURATION – DIGITAL AUXILIARIES (DIGITAL AUX INPUTS)

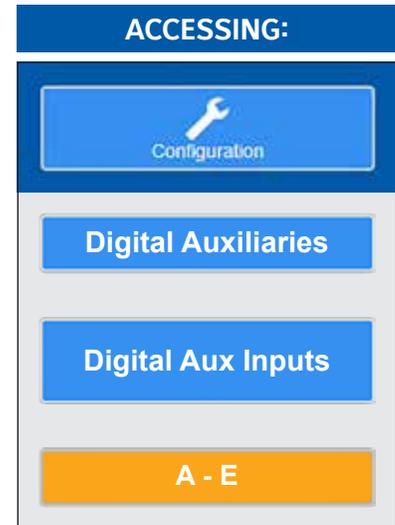

DESCRIPTION: Use these screens (Digital Aux Inputs: A-E, F-J, K-O, P-T) to view and set the Auxiliary Digital Input values. It is also used to custom name each of the Auxiliary Digital channels. The screen information provided below applies to all Digital Aux. Input screens.

Use this screen to setup an Auxiliary Digital Input to be used to generate a warning or a shutdown whenever the associated input is not energized (off). As an example:

If Auxiliary Input 1 is set to Shutdown When Running, and the Delay is set to 10 seconds, then whenever the device that is physically attached to I/O Channel 17 (Digital Board 1) becomes de-energized (turns off) AND the unit is Running, then the delay timer will start to count down. When the Delay times out, a shutdown message is issued (Auxiliary Input 1 Shutdown), and the unit will stop running.

DIGITAL AUX. INPUTS A-E

Name - The user may enter a custom name for each Input here.

Control

- Disabled - The device will not be monitored for warnings or shutdowns.
- Shutdown When Starting/Running - The device will be monitored for shutdown occurrences only while the compressor is transitioning from the starting state to the running state.

- Shutdown When Running - The device will be monitored for shutdown occurrences only after the compressor enters the running state.
- Shutdown Always - The device will be monitored for shutdown occurrences all of the time.
- Warning When Starting/Running - The device will be monitored for warning occurrences only while the compressor is transitioning from the starting state to the running state.
- Warning When Running - The device will be monitored for warning occurrences only after the compressor enters the running state.
- Warning Always - The device will be monitored for warning occurrences all of the time.


Delay - This value specifies the duration that the digital signal must remain off before a warning or shutdown is issued.

I/O Board - Three selections are provided:

- None - No board selected.
- Digital Board 1 - The Output to be controlled is located on Digital Board 1.
- Digital Board 2 - The Output to be controlled is located on Digital Board 2.


I/O Channel - Enter the channel of the selected Digital Board to control (1 - 24).

CONFIGURATION – DIGITAL AUXILIARIES (DIGITAL AUX OUTPUTS)

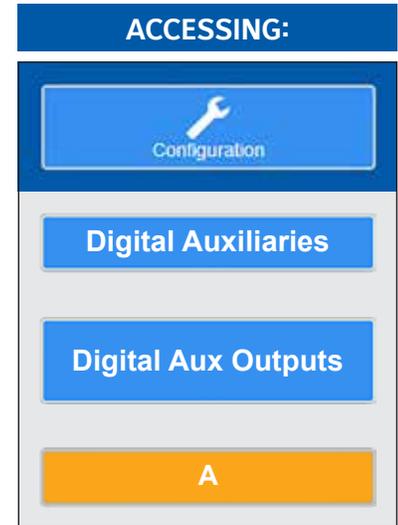

DESCRIPTION: Use these screens (Digital Aux. Outputs A - J) to setup and control an Auxiliary Digital Output using the signal from an Analog Input. The following descriptions apply to all Digital Aux. Output pages.

The graphic below illustrates one scenario in which an analog Temperature input is used to drive a digital output. When the temperature exceeds the On When value of 75°, the output will energize. It will remain in this state until the analog input falls below the Off When value of 73°. This state will persist until the input again exceeds the On When value. The resulting temperature control would resemble the following sine wave:

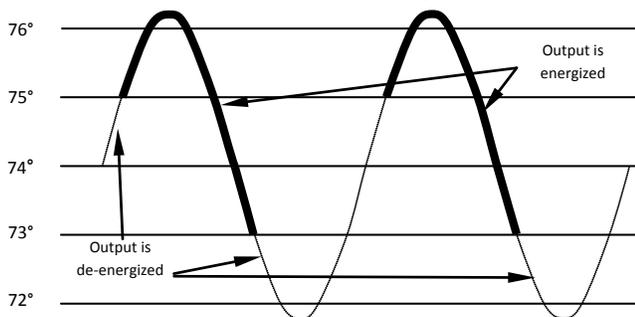

DIGITAL AUX. OUTPUT A - (Off or On status shown)

Analog Input

- Capacity Slide Position
- Volume Slide Position
- Suction Pressure
- Discharge Pressure
- Compressor Oil Pressure
- Main Oil Injection Pressure
- Economizer Pressure
- Filter Pressure
- Intermediate Pressure
- Balance Piston Pressure
- System Discharge Pressure
- Suction Temperature
- Discharge Temperature
- Compressor Oil Temperature
- Oil Separator Temperature

- Process/Brine Temperature Leaving
- Process/Brine Temperature Entering
- Remote Control Setpoint
- Motor Current
- RPM
- User defined analog inputs #1 - #20
- User defined analog inputs #12 - #20
- Manifold Pressure
- Remote Capacity Position
- Compressor Vibration – Suction
- Compressor Vibration – Discharge
- Motor Vibration – Shaft Side
- Motor Vibration – Opposite Shaft Side
- Motor Temperature – Shaft Side
- Motor Temperature – Opposite Shaft Side
- Motor Stator #1 - #3
- Vyper Coolant Temperature

Control

- Disabled - The output will be disabled.
- Running - The output is controlled while the compressor is running.
- Always - The output is controlled always.



I/O Board - Three selections are provided:

- None - No board selected.
- Digital Board 1 - The Output to be controlled is located on Digital Board 1.
- Digital Board 2 - The Output to be controlled is located on Digital Board 2.

On/Off When - When operating in the (>) mode, the digital output will be de-energized when the analog signal falls below the Off When value, and will remain off until the input rises above the On When value. Similarly, when operating in the (<) mode, the digital output will be de-energized when the input signal exceeds the Off When value and re-energized when the analog signal falls below On When value.

I/O Channel - Enter the channel of the selected Digital Board to control (1 - 24).

CONFIGURATION – DIGITAL AUXILIARIES (TIMED – TIME OF DAY)

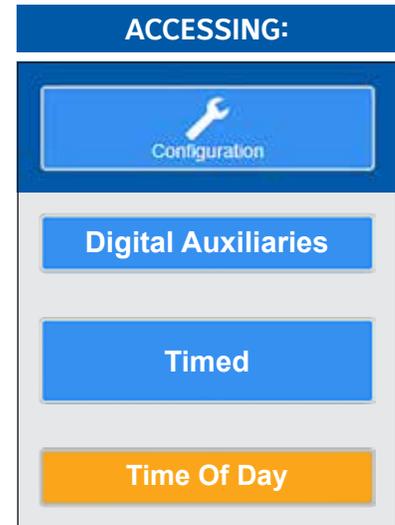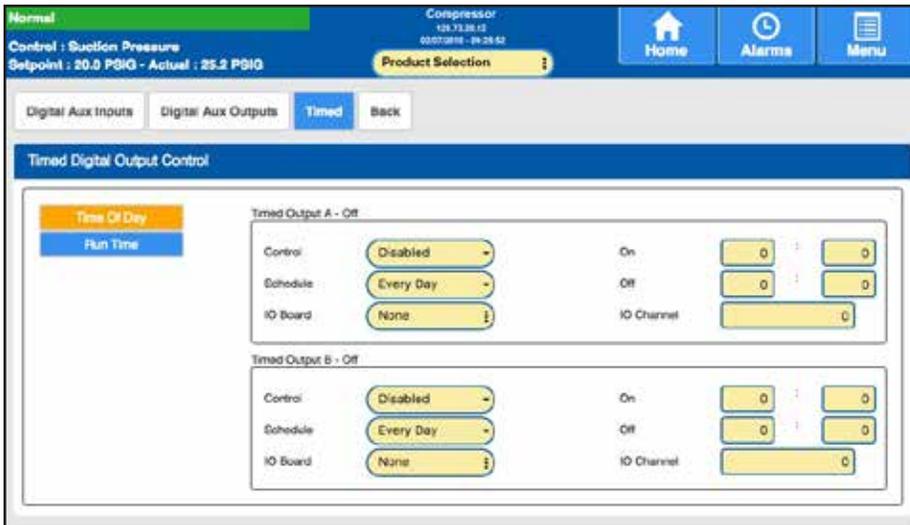

DESCRIPTION: This screen may be used to custom assign up to two available digital outputs (A & B) to a timed schedule:

TIMED DIGITAL OUTPUT CONTROL - Time Of Day

Timed Output A - (Off or On status shown)

NOTE: This section is identical for Timed Output B.

Control - Three choices are provided:

- Disabled - Output will never energize (under timed control).
- Running - Output will only be controlled while the Compressor is Running.
- Always - The Output will be controlled all of the time.

Schedule - Two selections are provided:

- Every Day - The Output will be controlled seven days a week.
- Week Days - The Output will be controlled Monday through Friday only.

I/O Board - Three selections are provided:

- None - No board selected.
- Digital Board 1 - The Output to be controlled is located on Digital Board 1.
- Digital Board 2 - The Output to be controlled is located on Digital Board 2.


The following setpoint boxes and drop down menus are available for Outputs A and B:

On - Enter into these setpoint boxes the actual time of day that you want the Output to energize.

Off - Enter into these setpoint boxes the actual time of day that you want the Output to de-energize.

I/O Channel - Enter the channel of the selected Digital Board to control (1 - 24).

CONFIGURATION – DIGITAL AUXILIARIES (TIMED – RUN TIME)

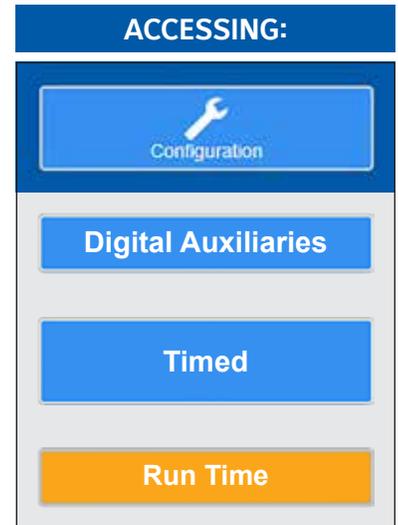

DESCRIPTION: This screen may be used to assign a digital output to run based on the Compressor Run time.

TIMED DIGITAL OUTPUT CONTROL - Run Time

Timed Output C - (Off or On status shown)

Enable

- Disable - Output C will not be enabled.
- Enable - Output C will turn on after the Output On times have been met.

I/O Board - Three selections are provided:



- None - No board selected.
- Digital Board 1 - The Output to be controlled is located on Digital Board 1.
- Digital Board 2 - The Output to be controlled is located on Digital Board 2.

Output On Every - The number of hours after the Compressor has been running, before the Output will energize.

Output On Time - The length of time that the Output will be energized once the Run Hour Interval has been satisfied.

I/O Channel - Enter the channel of the selected Digital Board to control (1 - 24).

CONFIGURATION – ANALOG AUXILIARIES

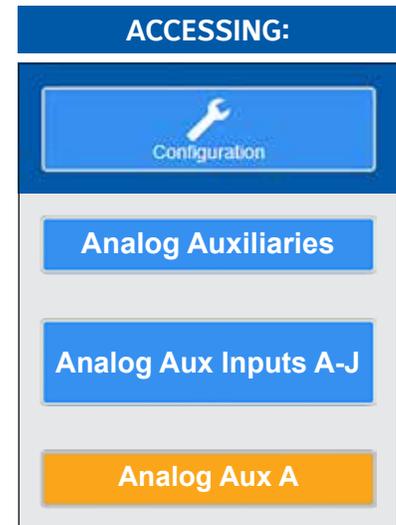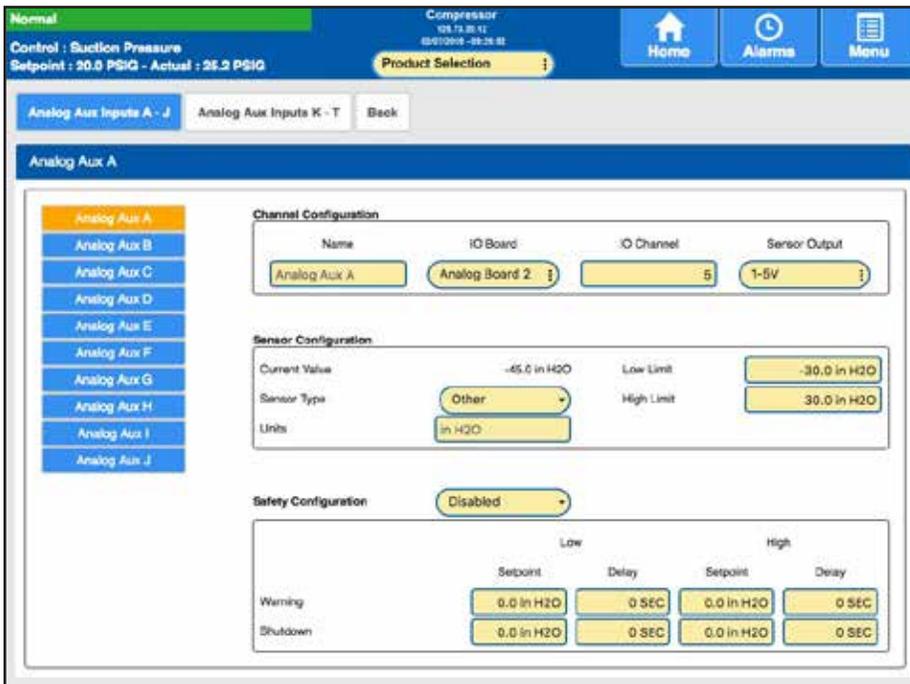

DESCRIPTION: These screens are used to allow the user to set the operating safeties of Auxiliary Analog inputs A through J. The descriptions that follow also apply to the Auxiliary Analog Input K - T screens also:

CHANNEL CONFIGURATION

The following pop-up menus and setpoint boxes are provided:

Name - Select this button to enter a custom name.

[I/O Board] - The following selections are provided:

- None
- Analog Bd 1
- Analog Bd 2

[I/O Channel] - A setpoint entry box is provided to select the analog board output channel that you wish to use.

[Sensor Output] - The following selections are provided:

- 0-5V
- 1-5V
- 4-20mA
- ICTD
- 0-20mA
- 0-10V
- 2-10V

SENSOR CONFIGURATION

Current Value - This is the actual value being read from the sensor at this channel. This is strictly a displayed value, and cannot be changed here.

Sensor Type - Select this button to choose the type of function this sensor is to provide, from the pop-up menu:

- None
- Pressure
- Temperature
- Other (see Units, below)

Units - If the Sensor Type is set to Other (above), then the applicable Units for the type of sensor may be entered here. For example, if the Sensor type is for measuring humidity, select Other for the sensor type, and enter a percent symbol (%) for Units.

Low Limit- This will show the low end range that the sensor is capable of reading.

High Limit - This will show the high end range that the sensor is capable of reading.

SETTINGS CONFIGURATION

Settings Configuration - A pop-up box is provided to select between the following:

- Disabled - The auxiliary channel will not be monitored for warnings or shutdowns.
- When Running - The auxiliary channel will be monitored for warning and shutdown occurrences only when the compressor is in the run state.
- Always - The auxiliary channel will be monitored for warning and shutdown occurrences at all times (Running or not).

The following setpoints are provided for each Auxiliary Analog channel:

[Low Warning Setpoint] - This setpoint specifies the Low Warning alarm threshold. In the event that the associated auxiliary analog input falls below this value for a period of time exceeding the Low Warning Delay, an Auxiliary Low Warning will be issued.

[Low Warning Delay] - This setpoint specifies the period of time that the associated auxiliary analog input must remain below the Low Warning Setpoint before an Auxiliary Low Warning will be issued.

[Low Shutdown Setpoint] - This setpoint specifies the Low Shutdown threshold. In the event that the associated auxiliary analog input falls below this value for a period of time exceeding the Low Shutdown Delay, an Auxiliary Low Shutdown will be issued, and the compressor will stop.

[Low Shutdown Delay] - This setpoint specifies the period of time that the associated auxiliary analog input must remain below the Low Shutdown Setpoint before an Auxiliary Shutdown will be issued.

[High Warning Setpoint] – This setpoint specifies the High Warning threshold. In the event that the associated auxiliary analog input exceeds this value for a period of time exceeding the High Warning Delay, an Auxiliary High Warning will be issued.

[High Warning Delay] – This setpoint specifies the period of time that the associated auxiliary analog input must remain above the High Warning Setpoint before an Auxiliary High Warning will be issued.


[High Shutdown Setpoint] – This setpoint specifies the High Shutdown alarm threshold. In the event that the associated

auxiliary analog input exceeds this value for a period of time exceeding the High Shutdown Delay, an Auxiliary High Shutdown will be issued, and the compressor will stop.

[High Shutdown Delay] – This setpoint specifies the period of time that the associated auxiliary analog input must remain above the High Shutdown Setpoint before an Auxiliary Shutdown will be issued.

NOTE: If you wish to bypass the warnings and utilize only the shutdown feature, then set all warning values outside of the shutdown values.

CONFIGURATION – COMMUNICATIONS (ETHERNET)

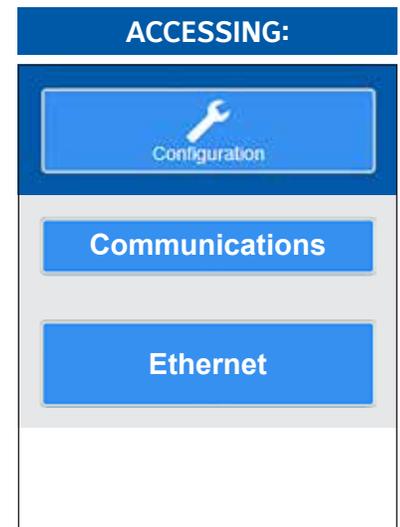

DESCRIPTION: This screen is used to enable or disable basic connectivity settings.

NOTE: A valid internet account and connection must be available for this feature to function.

ETHERNET

The following fields are provided:


[ModBus TCP]

- Disabled
- Enabled

[Ethernet/IP]

- Disabled
- Enabled

CONFIGURATION – COMMUNICATIONS (SERIAL)

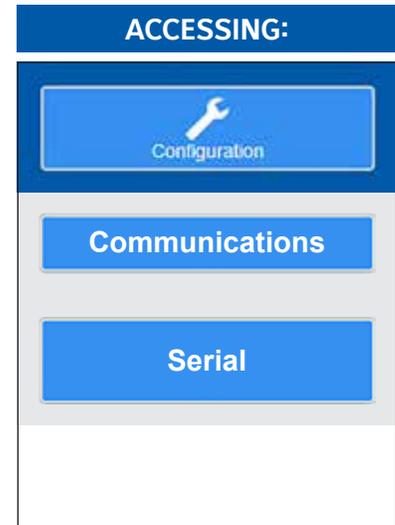

DESCRIPTION: This screen is used to set the Serial communications parameters for Comm1, Comm2 and Comm 3.

NOTICE

Comm1 and Comm2 may be either RS422 or RS485, Comm3 must be RS-485 only.

The following setpoints are provided (these settings are identical for Comm1, Comm2 and Comm3):

COMM1 (2 AND 3)

Status - Shows the current communications status of the port. The possible messages are:

- Off - No communications are currently taking place. NOTE: A delay of 15 seconds or more of inactive communications (time between valid responses) will cause this message to display.
- Active - Valid communications are actively occurring.
- Failed - An invalid command was received by the port. This could be due to a bad checksum value, a wiring issue, or hardware problem at either the transmitting (host) or receiving (Quantum™ HD) end.

[Baud Rate] - The baud rate defines the speed at which external communications can occur. The higher the baud rate, the faster the communications. A pop-up menu is provided to select from the following:

- 1200
- 19200
- 2400
- 38400
- 4800
- 57600
- 9600
- 115200

[Data Bits] - The number of bits in a transmitted data package. A pop-up menu is provided:

- 7
- 8

[Stop Bits] - A bit(s) which signals the end of a unit of transmission on a serial line. A pop-up menu is provided from the following:

- 1
- 2

[Parity] - Parity checking refers to the use of parity bits to check that data has been transmitted accurately. The parity bit is added to every data unit (typically seven or eight data bits) that is transmitted. The parity bit for each unit is set so that all bytes have either an odd number or an even number of set bits. Parity checking is the most basic form of error detection in communications. A pop-up menu is provided:

- None
- Even
- Odd



[Protocol] - A protocol is the special set of rules that each end of a communications connection use when they communicate. A pull down menu is provided to select from the following Frick recognized protocols:

- None
- Frick
- ModBus ASCII
- ModBus RTU
- AB DF1 Full Duplex
- AB DF1 Half Duplex
- DBS Motor Starter
- Vyper™

An additional button is provided to allow the user to set the Panel Id for this unit:

[Panel ID] - A number that is used by an external communications application, to converse to individual compressors. On interconnected systems, this number must be unique. Valid values are 0 - 99.

CONFIGURATION – COMMUNICATIONS (MAP FILE)

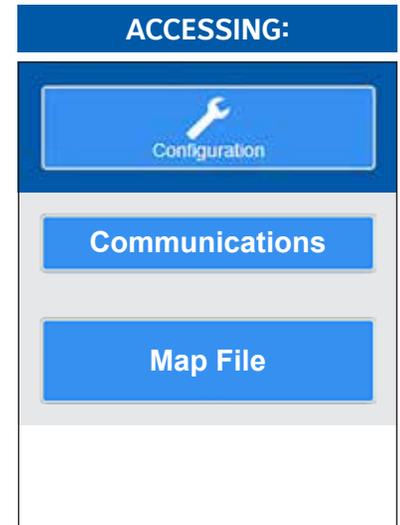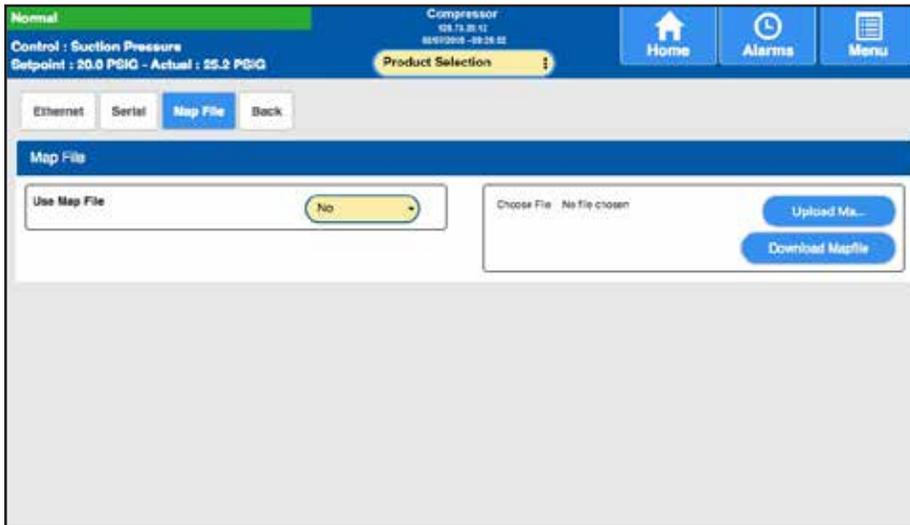

DESCRIPTION: This screen allows the user to upload a previously created serial communications application that was originally done for the Quantum™ LX, and to convert the addresses so that they can be used for the Quantum™ HD. Additional information can be found in the Communications Setup manual (090.040-CS).

MAP FILE

The following selections are provided:

[Map File] - Because the addressing scheme between the Quantum™ LX version 7.0x and earlier software and the Quantum™ HD version 10.0x and later software is not the same, this utility was created. The map file is a conversion utility that can be used to allow a communications application that was previously written for the Quantum™ LX version 7.0x and earlier to function properly with the HD by redirecting the old HD addresses to the new HD addresses. A pull down menu is provided:

- No - Do not use map file, the user is either not going to be using external communications, or they will be writing the communication application based upon the HD addresses.
- Yes - The user has an application that was previously written for the Quantum™ LX version 7.0x or earlier, and they want to utilize the same code for the HD.

Two keys are located on the right side of the screen.

The following describes their function:

[Upload MapFile.txt to USB Device] – After the user has modified the MapFile.txt file to suit their needs, pressing this key will cause the file to be uploaded from the USB memory back into the Quantum™ HD.


[Download MapFile.txt from Quantum™ HD] – With a USB memory stick installed on the HD, pressing this key will cause the MapFile.txt file to be downloaded from the Quantum™ HD into the USB memory.

NOTICE

USB drive devices that are Windows FAT32, NTFS or FAT format or Linux ext2 format have been verified to function properly.

Although numerous brands and storage sizes of USB drives have been tested for compatibility with the Quantum HD Unity system, there is a possibility that not all USB thumb drives will work.

CONFIGURATION – NOTIFICATIONS (GROUPS)

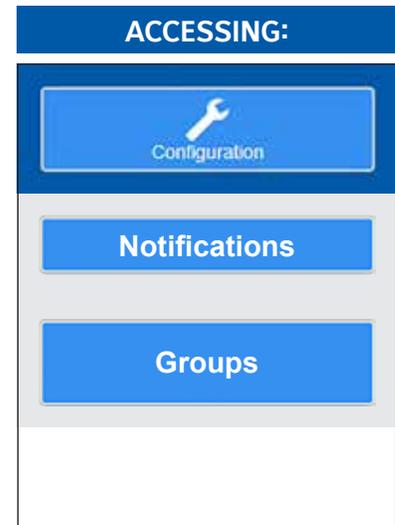

DESCRIPTION: This screen allows the user to select user level groups to receive email notifications of system Shutdowns, Warnings or Events.

Each time one of these Shutdowns/Warning/Events occurs, all groups that have been selected under that heading will be sent an email describing what has occurred.

The following areas of notification appear on this screen:

Shutdowns, Warnings & Events

The Quantum™ HD program comes defaulted with all user level groups eligible to receive notifications from all three areas, as shown on the screen above.

The three user groups are:



Basic, Operator & Service

Each of these user groups are defined and setup on the *Sys Config - Security* screen.

To remove a group from any of the notifications areas, simply select the button labeled as **[Remove This Group]** adjacent to the group you wish to remove. A group may be added (that doesn't already appear) by selecting the **[Add Group]** button, and pick the group from the list that appears.

Note: Additional setup information is available in the *Sys Config - Email* section of this document.

CONFIGURATION – NOTIFICATIONS (SETTINGS)

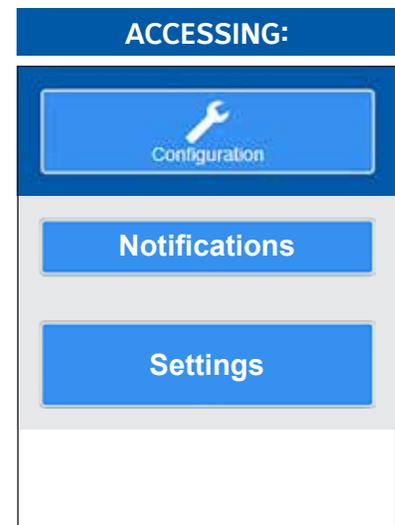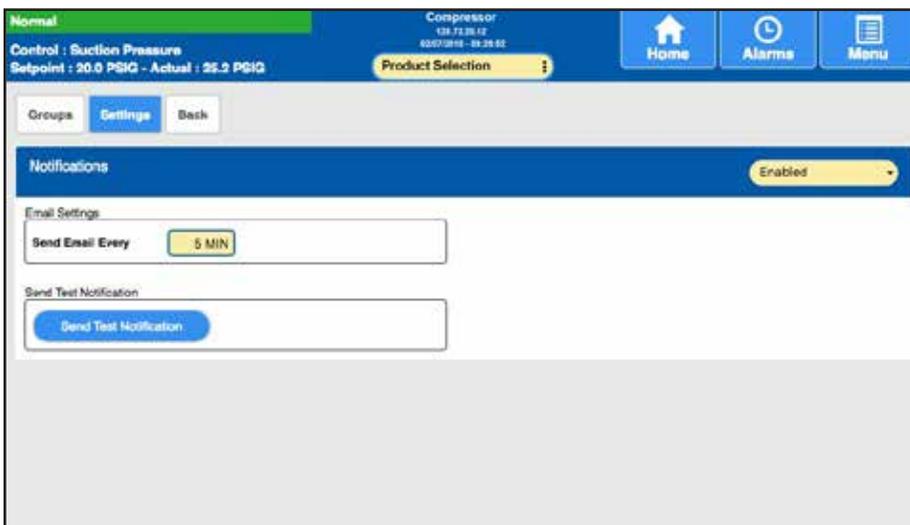

DESCRIPTION: Use this screen to enable or disable email notifications, and setup/test the email notifications frequency.

Notifications can be Enabled or Disabled. The email groups should already be defined before enabling this feature.


Send Email Every has a default of 5 MIN and can be adjusted as needed. This value sets how often the system should look to see if there is an Alarm or Event.

Send Test Notification ensures your email is properly setup.

NOTE: Before the Email Notification feature can be utilized, you must first create User profiles and setup their preferences on the *Security* screen. Refer to *Sys Config - Security*.

Also, email account settings will need setup. **Refer to the Sys Config - Email** section of this document for additional detail.

CONFIGURATION – SEQUENCING (ORDER)

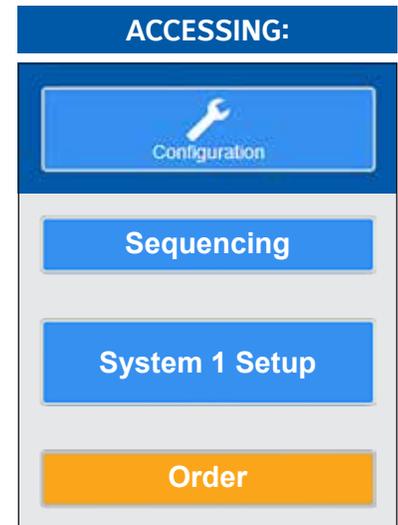

DESCRIPTION: This screen will be available if Sequencing is enabled in Compressor configuration. The System 1 screen is shown, however System 2 and System 3 setup screens are also available. These two additional screens show the same layout, although they may get setup using different capacity modes. Use these screens to setup all of the necessary operating parameters for performing compressor sequencing. The information input on these screens will be shown on the Sequencing Status screen.

SEQUENCE ORDER

In the upper right of the blue **Sequence Order** status bar, is an Enable / Disable button. Use this button to set the current condition of System 1 (2 or 3):

- Disabled - The compressors that are listed on this screen will not run as part of the sequencing scheme (System 1 will be ignored).
- Enabled - The compressors that are listed on this screen will run when called for as part of the sequencing scheme (System 1 will be included).

The following pop-up menus and setpoint boxes are shown here:

Setpoint - This setpoint field displays the value that you wish all compressors within this System to maintain.

Control Point - This is the actual value for the capacity control (as measured from the Master compressor). The master compressor is the unit with the lowest IP Address. It is to this value that the compressors will attempt to maintain. This is strictly a displayed value, and cannot be changed here.

High Stage System Link - The High Stage System Link setpoint is provided to tie a system of Booster compressors to a system of High Stage compressors.

There are eight rows of setpoint boxes shown on this screen corresponding to up to eight different compressors. Combined, these will make up the system. The user may program as few or as many of these rows as their situation requires:

Sequencing ID - Enter the last octet of the IP Address here. This will identify each of the possible eight compressors to the Master. A row with a 0 (zero) as the sequencing ID will be ig-

nored. The lowest IP address will identify which compressor is to be the Master. For example, assume that there are two compressors in the sequence order with the following IP addresses:

116.168.0.141 and 116.168.0.142,

The panel with IP address 116.168.0.141 will be master. If the Master is for some reason turned off, the next lowest numbered compressor will become the Master, and so on.

Start # - The allowable numbers here are 0 – 8. This number determines which compressor to start or stop next, based upon capacity need. Entering a 0 (zero) in this field will exclude the compressor from starting consideration.

Compressor Mode -

- Manual
- Automatic
- Remote Comm
- Remote IO
- Remote Seq.


Capacity Mode -

- Manual
- Automatic
- Remote Comm
- Remote 4-20
- Remote IO
- Remote Seq.

Minimum Capacity - This is the capacity that a compressor will load to when it is started. It will remain at or above this capacity until it is commanded to stop.

NOTE: The Compressor Mode and Capacity Mode listed above should both be set to Remote Seq. for complete execution of the sequencing system by the master to occur.

CONFIGURATION – SEQUENCING (CONTROL)

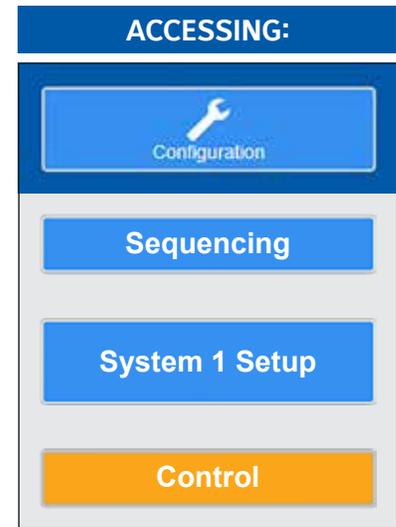

DESCRIPTION: This screen will be available if Sequencing is enabled in Compressor configuration. The screen shown represents System 1. There are additionally a System 2 and a System 3 setup screen, which are not discussed further here, as all three screens show the same layout, although they may get setup using different capacity modes. Use these screens to setup all of the necessary operating parameters for performing compressor sequencing. The information from these three screens will be shown on the Sequencing Status screen.

SEQUENCE CONTROL

In the upper right of the blue **Sequence Control** status bar, is an Enable / Disable button. Use this button to set the current condition of System 1 (2 or 3):

- Disabled - The compressors that are listed on this screen will not run as part of the sequencing scheme (System 1 will be ignored).
- Enabled - The compressors that are listed on this screen will run when called for as part of the sequencing scheme (System 1 will be included).

The following setpoints and pop-up menus are provided:

Average Capacity Slide Position to Start Next Compressor - If more than one compressor is running and the Average Capacity is greater than this setting, the next compressor in line can be started, if needed.

Full Load Capacity Slide Position - This setpoint represents the Capacity Slide Valve Position at which this machine will be considered at full load capacity.

Full Load Drive Speed Position - This is the speed value at which the compressor will be considered at full capacity by speed.


Minimum Capacity Dead Band - This is the dead band above and below the Minimum Capacity % setpoints that the controller will load or unload. If the Minimum Capacity % is 40% and the dead band is 1%, the controller will unload above 41% and load below 39% Capacity Slide.

Start Failure Reset Delay - This is the time that needs to pass after a sequencing start fails before the compressor is available to be back in the sequence operation.

Capacity Slide Failure Safety

- Disabled
- Enabled

CONFIGURATION – CONDENSER

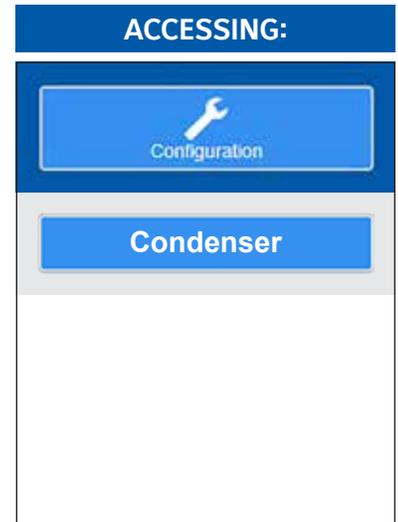

DESCRIPTION: If Condenser is enabled, this screen allows the end user to enter and view the basic operating parameters related to condenser digital operation.

Wet Bulb Strategy

The Quantum™ HD Compressor control panel provides a Wet Bulb control strategy which has the ability to run a condenser based on current atmospheric conditions by sensing the outdoor air temperature and humidity. This technique, which is sometimes referred to as floating head pressure, provides the ability to run a refrigeration system at the lowest attainable head pressure. Traditional condenser control uses a fixed head pressure that does not change with weather conditions or system load. However studies have found that allowing the condenser/head pressure to float will result in energy savings. These savings result from the compressor not working as hard. While the condenser may use more energy to achieve a lower head pressure, the reduction in energy consumption by the compressor is significantly greater, providing an overall savings.

The Wet Bulb control utilizes a humidity sensor along with a standard (dry bulb) temperature sensor. These values are combined to calculate a Wet Bulb temperature. The Wet Bulb Approach temperature is then added to the calculated Wet Bulb temperature. The Approach temperature sets how close the condenser will run to the Web Bulb temperature and will be determined by the condenser and system design. Finally, the Control temperature (which is the sum of the Wet Bulb Temperature and the Approach Temperature) is converted to the saturated vapor pressure which in turn becomes the condenser control pressure. A minimum condensing pressure setpoint specifies the lowest permissible condenser control pressure, and is often dictated by expansion valves or hot gas requirements.

The following setpoints and pop-up menus are provided:

CONDENSER

- Condenser
 - Disabled
 - Enabled

[Condenser Control Setpoint] – This is the value that the Condenser will be controlled to.

System Discharge Pressure – The current System Discharge Pressure is shown here.

VFD Output – This value represents the amount of VFD output to the condenser fan(s).

Output A - D – The four digital output modules are enabled by putting a number (1-4) into the Step Order setpoint boxes. These determine the order that the modules are turned on or off. If a Module has a 0 (zero) as its Step Order setpoint, it is disabled from the control process.

Speed Control

- Disabled
- Enabled

FAN SPEED CONTROL

Proportional Band – The range over which the PI control will be managing the Variable Speed Fan (provided Integration Time is not set to zero, in which case it will be strictly proportional).

Integration Time – This setpoint controls the influence that the Integral component exerts on the PI Output value. The Integral component works to push the Control Input toward the Control Setpoint by tracking the difference between the Control Input and the Control Setpoint over time.

High Limit – The percentage of the 4-20mA signal which should be considered full On (usually 100%).

Low Limit – The percentage of the 4-20mA signal which should be considered full Off (usually 0%).

STEP CONTROL

[Step Up Deadband] and **[Step Up Delay]** – When the System Discharge Pressure stays above the combined values of the Condenser Control Setpoint plus the Step Up Deadband for the amount of time as set in the Step Up Delay, the next module in the Step Order will turn on.

[Step Down Deadband] and **[Step Down Delay]** – When the System Discharge Pressure stays below the difference of the values for Condenser Control Setpoint minus the Step Down Deadband for the amount of time as set in the Step Up Delay, the next module in the Step Order will turn off.

[High Pressure Override] and [High Pressure Override Delay] - When the System Discharge Pressure goes and stays at or above the High Pressure Override value for the amount of time as set in the High Pressure Override Delay, all modules will turn on.

WET BULB CONTROL

Wet Bulb Approach - This is a value to be entered by the facilities refrigeration engineer, which will be added to the Wet Bulb Temperature to determine the Control Temperature.

Minimum Condensing Pressure - This value specifies the lowest condenser control pressure that is permitted while the wet bulb control strategy is in use.

Refrigerant - Select the type of refrigerant that is being used in the compressor.

- R22
- R134a
- R717
- R744

Outside Air Temperature - The value shown here is the actual Outside Air Temperature.


Outside Relative Humidity - The value shown here is the actual Outside Relative Humidity.

Wet Bulb Temperature - The value shown here is the calculation of ambient air temperature and relative humidity to arrive at a Wet Bulb value. This value is used in calculating the Control Setpoint when Wet Bulb is enabled.

Saturated Control Temperature - The value shown here is the Saturated Control Temperature.

CONFIGURATION

PHD Vibration / Temperature - Compressor Bearing Vibration

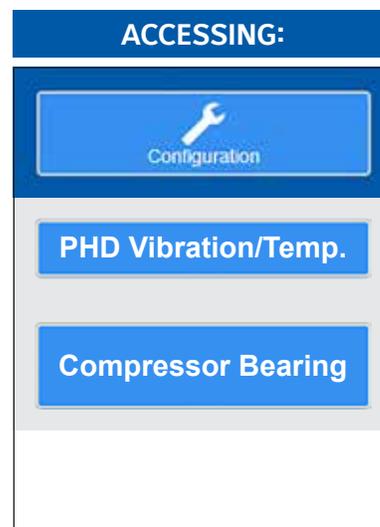

DESCRIPTION: Use this screen to configure the Compressor Bearing Vibration. The following setpoint and selection boxes are provided:

COMPRESSOR BEARING VIBRATION

Compressor Bearing Vibration

- Disabled
- Enabled

[High Warning] - If the Compressor Bearing vibration exceeds this setpoint for the amount of time as set for the High Warning Delay, then a Warning is issued.

[High Warning Delay] - The time period as set here will begin to time down if the Compressor Bearing vibration exceeds that of the High Warning, and remains above. When this delay times out, a Warning will be issued.

[High Shutdown] - If the Compressor Bearing vibration exceeds this setpoint for the amount of time as set for the High Shutdown Delay, then a Shutdown will occur, and the compressor is stopped.

[High Shutdown Delay] - The time period as set here will begin to time down if the Compressor Bearing vibration exceeds that of the High Shutdown, and remains above. When this delay times out, a Shutdown will occur, and the compressor is stopped.

[Sensor Output] - The following selections are provided:

- 0-5V
- 1-5V
- 4-20mA (If 4-20mA is selected, the Low Limit and High Li 0-20mA)
- 0-10V
- 2-10V


[I/O Board] - The following selections are provided:

- None
- Analog Bd 1
- Analog Bd 2

[I/O Channel] - A setpoint entry box is provided to select the analog board output channel that you wish to use.

CONFIGURATION

PHD Vibration / Temperature - Motor Bearing (Temperature / Vibration)

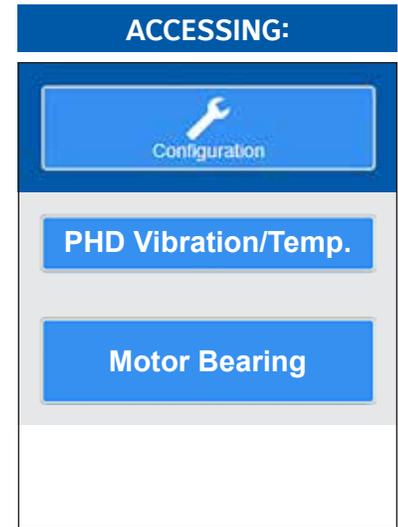

DESCRIPTION: Use this screen to configure the Motor Bearing for either temperature or vibration. The following setpoint and selection boxes are provided:

MOTOR BEARING TEMPERATURE

Motor Bearing Temperature

- Disabled
- Enabled

[High Warning] - If the Motor Bearing temperature exceeds this setpoint for the amount of time as set for the High Warning Delay, then a Warning is issued.

[High Warning Delay] - The time period as set here will begin to time down if the Motor Bearing temperature exceeds that of the High Warning, and remains above. When this delay times out, a Warning will be issued.

[High Shutdown] - If the Motor Bearing temperature exceeds this setpoint for the amount of time as set for the High Shutdown Delay, then a Shutdown will occur, and the compressor is stopped.

[High Shutdown Delay] - The time period as set here will begin to time down if the Motor Bearing temperature exceeds that of the High Shutdown, and remains above. When this delay times out, a Shutdown will occur, and the compressor is stopped.

[Low Limit] - If the Motor Bearing temperature falls below this setpoint, a Warning is issued.

[High Limit] - If the Motor Bearing temperature rises above this setpoint, a Warning is issued.

[Sensor Output] - The following selections are provided:

- 0-5V
- 1-5V
- 4-20mA
- ICTD
- RTD
- 0-20mA
- 0-10V
- 2-10V

[I/O Board] - The following selections are provided:

- None
- Analog Bd 1
- Analog Bd 2

[I/O Channel] - A setpoint entry box is provided to select the analog board output channel that you wish to use.

MOTOR BEARING VIBRATION

Motor Bearing Vibration

- Disabled
- Enabled

[High Warning] - If the amount of vibration exceeds this setpoint for the amount of time as set for the High Warning Delay, then a Warning is issued.

[High Warning Delay] - The time period as set here will begin to time down if the amount of vibration exceeds that of the High Warning, and remains above. When this delay times out, a Warning will be issued.

[High Shutdown] - If the amount of vibration exceeds this setpoint for the amount of time as set for the High Shutdown Delay, then a Shutdown will occur, and the compressor is stopped.

[High Shutdown Delay] - The time period as set here will begin to time down if the amount of vibration exceeds that of the High Shutdown, and remains above. When this delay times out, a Shutdown will occur, and the compressor is stopped.

[Sensor Output] - The following selections are provided:

- 0-5V
- 1-5V
- 4-20mA
- ICTD
- RTD
- 0-20mA
- 0-10V
- 2-10V

[I/O Board] - The following selections are provided:

- None
- Analog Bd 1
- Analog Bd 2

[I/O Channel] - A setpoint entry box is provided to select the analog board output channel that you wish to use.

CONFIGURATION

PHD Vibration / Temperature - Motor Stator Temperature

	Stator #1	Stator #2	Stator #3
High Warning	302.0 °F	302.0 °F	302.0 °F
High Warning Delay	5 SEC	5 SEC	5 SEC
High Shutdown	311.0 °F	311.0 °F	311.0 °F
High Shutdown Delay	5 SEC	5 SEC	5 SEC
Low Limit			
High Limit			
Sensor Output	RTD	RTD	RTD
I/O Board	Analog Board 1	Analog Board 1	Analog Board 1
I/O Channel	21	22	23

DESCRIPTION: Use this screen to configure the Motor Stator temperature(s). The following setpoint and selection boxes are provided:

MOTOR STATOR TEMPERATURE

Motor Stator Temperature

- Disabled
- Enabled

[High Warning] - If the Motor Stator temperature exceeds this setpoint for the amount of time as set for the High Warning Delay, then a Warning is issued.

[High Warning Delay] - The time period as set here will begin to time down if the Motor Stator temperature exceeds that of the High Warning, and remains above. When this delay times out, a Warning will be issued.

[High Shutdown] - If the Motor Stator temperature exceeds this setpoint for the amount of time as set for the High Shutdown Delay, then a Shutdown will occur, and the compressor is stopped.

[High Shutdown Delay] - The time period as set here will begin to time down if the Motor Stator temperature exceeds that of the High Shutdown, and remains above. When this delay times out, a Shutdown will occur, and the compressor is stopped.

[Low Limit] - If the Motor Stator temperature falls below this setpoint, a Warning is issued.

[High Limit] - If the Motor Stator temperature rises above this setpoint, a Warning is issued.

[Sensor Output] - The following selections are provided:


- 0-5V
- 1-5V
- 4-20mA
- ICTD
- RTD
- 0-20mA
- 0-10V
- 2-10V

[I/O Board] - The following selections are provided:

- None
- Analog Bd 1
- Analog Bd 2

[I/O Channel] - A setpoint entry box is provided to select the analog board output channel that you wish to use.

CONFIGURATION – PROPORTIONAL / INTEGRAL CONTROL SETUP

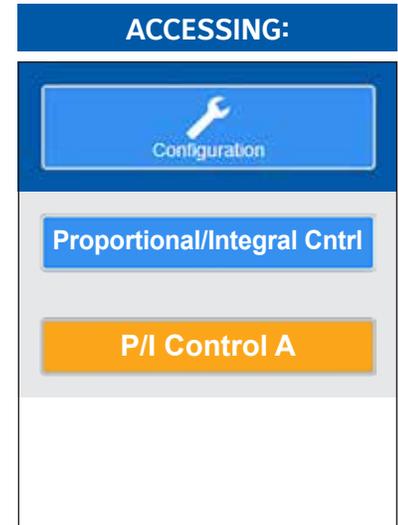

DESCRIPTION: Use this screen to configure the PI Control channels. There are eight total screens associated with PI Configuration (PI A - H), and all screens consists of the same layout:

CHANNEL CONFIGURATION

[Name] - A user defined name can be entered here.

[Control Input] - A pop-up box is provided to select from the following:

- Capacity Slide Position
- Volume Slide Position
- Suction Pressure
- Discharge Pressure
- Compressor Oil Pressure
- Main Oil Injection Pressure
- Economizer Pressure
- Filter Pressure
- Intermediate Pressure
- Balance Piston Pressure
- System Discharge Pressure
- Suction Temperature
- Discharge Temperature
- Compressor Oil Temperature
- Oil Separator Temperature
- Process/Brine Temperature Leaving
- Process/Brine Temperature Entering
- Remote Control Setpoint
- Motor Current
- RPM
- Auxiliary Analog #1 - #20
- Manifold Pressure
- Remote Capacity Position
- Compressor Vibration – Suction
- Compressor Vibration – Discharge
- Motor Vibration – Shaft Side
- Motor Vibration – Opposite Shaft Side
- Motor Temperature – Shaft Side
- Motor Temperature – Opposite Shaft Side
- Motor Stator #1 - #3
- Vyper Coolant Temperature

[Control] - A pull down menu is provided to select from the following:

- Disabled - No PID control.
- Running - PID Control only controls when the compressor is running.
- Active - PID control always active.

PI CONFIGURATION

[Action] - A pop-up box is provided to select from the following:

- Forward - Will increase the output at values greater than the Control Setpoint.
- Reverse - Will increase the output at values less than the Control Setpoint.

[Setpoint] - A setpoint box is provided to the value that you wish to control to.

[Proportional Band] - This setpoint determines the size of a region either above or below the Control Setpoint. Within this region, the Proportional component of the PID Output value is the number between 0% and 100% that directly corresponds to the difference between the Control Input (Actual) and the Control Setpoint (Setpoint). Outside of this region, the Proportional component is either 100% or 0%. If the PI Action is Forward, the Proportional Band extends above the Control Setpoint. If the PI Action is Reverse, the Proportional Band extends below the Control Setpoint.

[Integration Time] - This setpoint controls the influence that the Integral component exerts on the PI Output value. The Integral component works to push the Control Input toward the Control Setpoint by tracking the difference between the Control Input and the Control Setpoint over time.

[High Limit] - The highest value that the output can be.

[Low Limit] - The lowest value that the output can be.

[Off Value] - If the PI Control is set to When Running, this value sets the value of the PI output when the compressor is off.



Setting up a PI Channel

NOTE: The basic steps in setting up a device for PI control is:

Setup Input channel

- First, decide which physical input channel you will be using. Note: If you wish to use an Auxiliary Analog channel, it will require being completely setup as its own channel before attempting the remainder of this procedure.

Setup PI parameters

- From the Home screen, access the Menu. Select [Configuration] > Proportional /Integral Control.
- On the Proportional / Integral Control screen, select the Analog channel that has already been set up, in this case, channel 1.
- It is on this Proportional / Integral Control screen that the remainder of the PI parameters are entered. For a detailed description of these parameters, refer to the Overview to Tuning a PI Controller.

Note: Each device that is utilized for PI control must also be properly calibrated.

Overview to Tuning a PI Controller

The purpose of this section is to give some basic guidelines for tuning Proportional, Integral, and Differential gains of a PI controller. To tune a PI controller, it would be advantageous to hook the system up to some test equipment to allow you to record the appropriate variables. At the very least, the appropriate data will have to be monitored and recorded by hand from the system screen for subsequent evaluation and possible spreadsheet graphing.

Proportional Band

The Proportional Band setpoint translates the Proportional Gain into the units of the Control Input channel. When the control Input is at the Control Setpoint, the Proportional component of the PI Output will be 0%. As the Control Input moves through the Proportional Band, and away from the Control Setpoint, the Proportional component will increase. If the Control Input is in the middle of the Proportional Band, the Proportional component value is 50%, and when the Control Input reaches the outside of the Proportional Band, the Proportional value will be 100%. The value of the Proportional component is calculated as the difference between the Control Input and the Control Setpoint, divided by the Proportional Band and then multiplied by 100.

Example:

Control Input: Discharge Temperature
 Control Setpoint: 100°F
 Dead Band: 0°F
 Proportional Band: 10°F
 Action: Forward

Control Input	Proportional Output
100°F	0%
102.5°F	25%
105°F	50%
108°F	80%
110°F	100%
112°F	100%

The value selected for the Proportional Band will be determined by the stability of the system, the accuracy required, and the average output value, among other things. One way to pick a starting value is to find a range of allowable Control Input values and then to select a Proportional Band so that the Proportional value will reach 100% before the Control Input moves outside of the allowable range.

After the initial value is entered for the Proportional Band, watch the system to see how it reacts. If the PI output shows too much oscillation, increasing the Proportional Band will cause the control to react slower, which will dampen this oscillation. If the PI reacts too slowly, then decreasing the Proportional Band will make the control react faster.

Proportional Only Control - There will be certain applications in which only proportional control is required for good performance. When this is the case, the Integration Time can simply be set to zero, and the Proportional Band set to a desired value.

Some advantages of only using Proportional control are that it is generally more stable than Proportional and Integral control, and its function is easier to understand. A disadvantage of only using Proportional control is that the Control Input usually will settle into a spot somewhere in the Proportional Band, and will not move to the Control Setpoint. For instance, from the example shown above, if the Proportional Output averages 80%, then the Control Input will remain at 108° F and will not go to 100° F. This may be acceptable in some applications. In certain other cases the setpoint can be offset to move the Control Input to the point it needs to be.

Integration Time - The Integral calculation in PI control uses past performance to calculate a value for the PI output. It does this by incrementally, over time, adding a small value to the PI output to move the Control Input toward the Control Setpoint. Eventually, the Integral component of the PI output will equal the average PI output value as Control Input gets to the Control Setpoint, and the Proportional component goes to 0%. When combined with the Integral calculation, the Proportional component can be negative and its range becomes -100% to +100%. If the Control Input moves above or below the Control Setpoint, the Proportional control will prevent it from moving too far, and the Integral control will move it back to the setpoint.

Once the Proportional Band is set, start with a large Integration Time (180 seconds). Here again, you want to find the range of Integration Time that gives you reasonably fast performance, without too much overshoot, and without too much oscillation. If the Control Input repeatedly overshoots the Control Setpoint, or oscillates too much, increasing the Integration Time will slow the control. If the Control Input moves too slowly toward the Control Setpoint, decreasing the Integration Time will cause the control to react faster.

CONFIGURATION – SUPERHEAT

DESCRIPTION: The Superheat screens are used to view and set the operational characteristics of the Superheat option. Each of the three screens consist of the same layout:

CHANNEL CONFIGURATION

[Name] – A user defined name can be entered here.

[Pressure Input] – A pop-up box is provided to select from the following input selections:

- Suction Pressure
- Discharge Pressure
- Compressor Oil Pressure
- Main Oil Injection Pressure
- Economizer Pressure
- Filter Pressure
- Intermediate Pressure
- Balance Piston Pressure
- System Discharge Pressure
- Auxiliary Analog #1 - #20
- Manifold Pressure

[Control] – A pop-up box is provided to select from the following:

- Disabled – No Superheat control.
- Running – Superheat Control only controls when the compressor is running.
- Always – Superheat control always active.

[Temperature Input] – A pop-up box is provided to select from the following input selections:

- Suction Temperature
- Discharge Temperature
- Compressor Oil Temperature
- Oil Separator Temperature
- Process/Brine Temperature Entering
- Process/Brine Temperature Leaving
- Auxiliary Analog 1 - 10
- EZ Cool Feedback %
- Auxiliary Analog 12 - 20

PI CONFIGURATION

[Action] – A pop-up box is provided to select from the following:

- Forward – Will increase the output at values greater than the Control Setpoint.
- Reverse – Will increase the output at values less than the Control Setpoint.

[Setpoint] – A setpoint box is provided to the value that you wish to control to.

[Proportional Band] – This setpoint determines the size of a region either above or below the Control Setpoint. Within this region, the Proportional component of the Superheat Output value is the number between 0% and 100% that directly corresponds to the difference between the Control Input (Actual) and the Control Setpoint (Setpoint). Outside of this region, the Proportional component is either 100% or 0%. If the Superheat's Action is Forward, the Proportional Band extends above the Control Setpoint. If the Superheat's Action is Reverse, the Proportional Band extends below the Control Setpoint.

[Integration Time] – This setpoint controls the influence that the integral component exerts on the output value. The integral component works to push the calculated superheat value toward the setpoint by tracking the difference between the superheat value and the setpoint over time.

[High Limit] – The highest value that the output can be.

[Low Limit] – The lowest value that the output can be.

[Off Value] – If the Superheat's Control is When Running, this value sets the value of the Superheat output when the compressor is off.

Refrigerant – This will show the type of refrigerant, as set on the Configuration > Package screen.

STATUS

Output Value – The value of the Output signal as controlled by the Superheat. This is not a setpoint value.

Superheat – This is the calculated Superheat temperature based on the Temperature and Pressure described above. This is not a setpoint value.

Pressure – This is the value of the Control Pressure input signal. This is not a setpoint value.

Temperature – This is the value of the Control Temperature input signal. This is not a setpoint value.


I/O SETUP

[I/O Board] – A pop-up box is provided to select from the following:

- None
- Analog Board 1
- Analog Board 2

[I/O Channel] – A setpoint entry box is provided to select the analog board output channel that you wish to use.

CONFIGURATION – RETRANSMITTING OUTPUTS

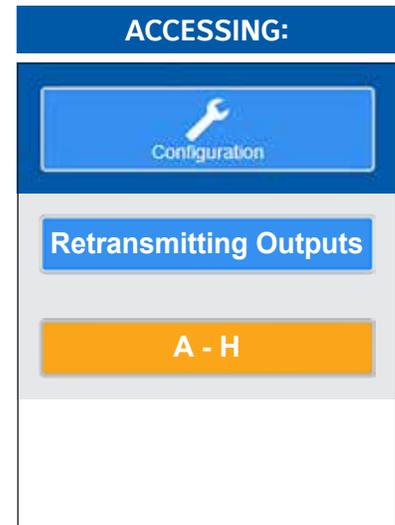

DESCRIPTION: The Retransmit Output screens (A-H and I-P) are used to view and set the analog input assignments, when it is desirable to use the retransmit feature. Both screens consists of the same layout, with the exception of the Input Channel name:

Input Channel (to Retransmit) - Use this pull down menu for each channel to select the analog signal that you would like to retransmit:

- Capacity Slide Position
- Volume Slide Position
- Suction Pressure
- Discharge Pressure
- Compressor Oil Pressure
- Main Oil Injection Pressure
- Economizer Pressure
- Filter Pressure
- Intermediate Pressure
- Balance Piston Pressure
- System Discharge Pressure
- Suction Temperature
- Discharge Temperature
- Compressor Oil Temperature
- Oil Separator Temperature
- Process/Brine Temperature Leaving
- Process/Brine Temperature Entering

- Remote Control Setpoint
- Motor Current
- RPM
- Auxiliary Analog #1 - #20
- Manifold Pressure
- Remote Capacity Position
- Compressor Vibration – Suction
- Compressor Vibration – Discharge
- Motor Vibration – Shaft Side
- Motor Vibration – Opposite Shaft Side
- Motor Temperature – Shaft Side
- Motor Temperature – Opposite Shaft Side
- Motor Stator #1 - #3
- Vyper Coolant Temperature

Input Value - This will show the analog value that is being received for a particular channel.


Output Value - This will show the analog value that is being sent from a particular channel.

IO Board - Use this pull down menu to select the source of the retransmit signal:

- None
- Analog Board 1
- Analog Board 2

I/O Channel - This will show the Output channel (with regard to the I/O Board selection) that the retransmit function will be assigned to.

CONFIGURATION – DIGITAL I/O

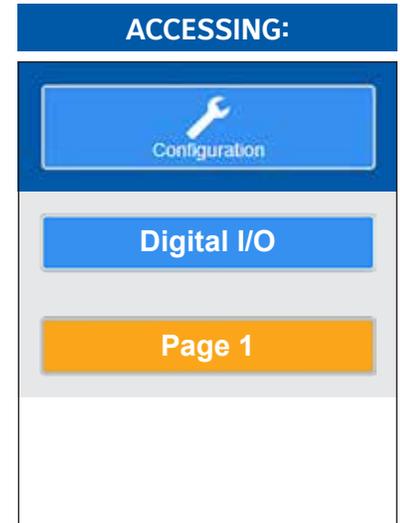

DESCRIPTION: The Digital I/O screens are used to view and set the Digital Input and Output assignments, and should be used anytime a Digital I/O point needs to be configured. Each screen consists of the same layout, with the exception of the I/O point name:

I/O Point - See the list below for each page.

I/O Board - A pop-up menu provides for the following selection for the I/O board:

- None
- Digital Board 1
- Digital Board 2

I/O Channel - This will show the Digital I/O channel (with regard to the I/O Board selection) that the I/O point will be assigned to.

Status - This is an informational box which shows the On/Off status for the I/O point.

The following list shows the I/O point assignments for each page:

PAGE 1

- Compressor Start Run
- Compressor Confirmed Running
- Oil Pump 1 Start Run
- Oil Pump 1 Confirmed Running
- Capacity Slide Load
- Capacity Slide Unload
- Volume Slide Increase
- Volume Slide Decrease
- Liquid Injection Oil Cooling
- High VI Liquid Injection Oil Cooling
- Economizer
- Balance Piston

PAGE 2

- Oil Level OK
- High Liquid Level From System
- Shunt Trip Output
- Hot Gas Bypass
- Remote Start Run Stop
- Permissive Start
- Oil Heater
- Alarm
- Shutdown
- Power Assist
- Ready To Run
- Remote Enabled

PAGE 3


- Recycle Delay Force Unload
- Remote Load Capacity Slide
- Remote Unload Capacity Slide
- Oil Pump 2 Start
- Oil Pump 2 Running
- Capacity Mode Select Module A
- Capacity Mode Select Module B
- DX Circuit A
- DX Circuit B

PAGE 4

- Condenser Control Step 1
- Condenser Control Step 2
- Condenser Control Step 3
- Condenser Control Step 4
- Chiller Pump Start Run
- Panel Heater
- Main Oil Injection
- Liquid Level Increase
- Liquid Level Decrease
- PLC Interlock
- Discharge Butterfly Valve

CONFIGURATION – ANALOG I/O

Page 1	Name	Low	High	Sensor Output	IO Board	IO Channel
Page 2	Suction Temperature			ICTD	Analog Board 1	1
Page 3	Discharge Temperature			ICTD	Analog Board 1	2
	Oil Temperature			ICTD	Analog Board 1	3
	Separator Temperature			ICTD	Analog Board 1	4
	Leaving Process Temperature			ICTD	Analog Board 1	5
	Oil Pressure	30.0 Hg	485.3 PSIG	1-5V	Analog Board 1	6
	Filter Inlet Pressure	30.0 Hg	485.3 PSIG	1-5V	Analog Board 1	7
	Discharge Pressure	30.0 Hg	485.3 PSIG	1-5V	Analog Board 1	8
	Suction Pressure	30.0 Hg	185.0 PSIG	1-5V	Analog Board 1	9
	Entering Process Temperature			ICTD	Analog Board 1	10
	System Discharge Pressure	30.0 Hg	485.3 PSIG	1-5V	Analog Board 1	11
	Drive Speed	0 RPM	3600 RPM	4-20mA	None	12

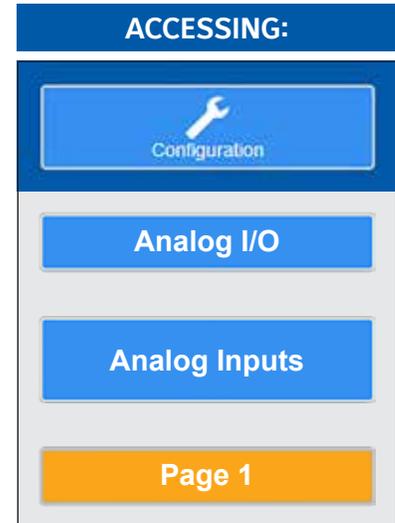

DESCRIPTION: The Analog I/O screens are used to view and set the Analog Input and Output sensor ranges, sensor type and board/channel assignments, and should be used anytime an Analog I/O point needs to be configured. Each screen (Page 1, 2, 3) consists of the same column headers. Only the I/O point name changes:

ANALOG 1 (2, 3)

I/O Point - See the list below for each page.

Low - Enter the low end range that the sensor is capable of reading here.

High - Enter the high end range that the sensor is capable of reading here.

Sensor Output - A pop-up menu provides for the following selection for sensor types:

- 0-5V
- 1-5V
- 4-20mA
- ICTD
- 0-20mA
- 0-10V
- 2-10V

I/O Board - A pop-up menu provides for the following selection for the I/O board:

- None
- Analog Bd 1
- Analog Bd 2

I/O Channel - Enter the I/O Channel (with regard to the I/O Board selection) that the I/O point will be assigned to.

The following list shows the I/O point assignments for each page:

ANALOG I/O PAGE 1

- Suction Temperature
- Discharge Temperature
- Oil Temperature
- Separator Temperature
- Leaving Process Temperature
- Oil Pressure
- Filter Inlet Pressure
- Discharge Pressure
- Suction Pressure
- Entering Process Temperature
- System Discharge Pressure
- Drive Speed


ANALOG I/O PAGE 2

- Economizer Pressure
- Capacity Slide
- Volume Slide
- Motor Amps
- EZ Cool LIOC Feedback
- Remote Slide Valve Position
- Remote Control Setpoint
- Engine Manifold Pressure
- Balance Piston Pressure
- Main Oil Injection
- KW Monitoring
- Relative Humidity
- Economizer Port Pressure

ANALOG I/O PAGE 3

- Outside Ambient Air Temperature
- Vyper Coolant Temperature
- Condenser Liquid Level
- Control Oil Pressure
- Filter Outlet Pressure

CONFIGURATION – ANALOG I/O

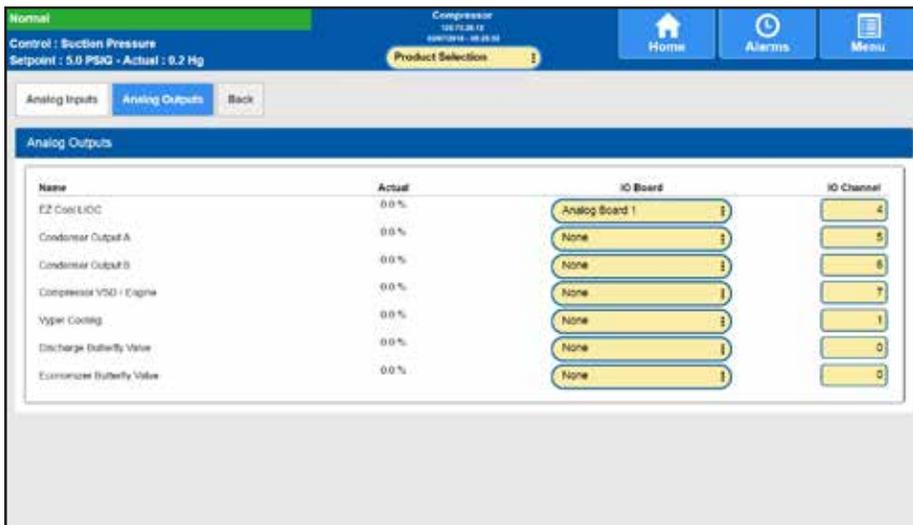

DESCRIPTION: The Analog Outputs screen is used to view and set the Analog Output I/O board and I/O channel assignments:

ANALOG OUTPUTS

Actual - Displays current status as a percentage.

I/O Board - A pop-up menu provides for the following selection for the I/O board:

- None
- Analog Bd 1
- Analog Bd 2



I/O Channel - Enter the I/O Channel (with regard to the I/O Board selection) that the I/O point will be assigned to.

The following list shows the Analog Output point assignments:

ANALOG OUTPUT

- EZ Cool LIOC
- Condenser Output A
- Condenser Output B
- Compressor VSD / Engine
- Vyper Cooling
- Discharge Butterfly Valve
- Economizer Butterfly Valve

CONFIGURATION – PLC I/O CONTROL

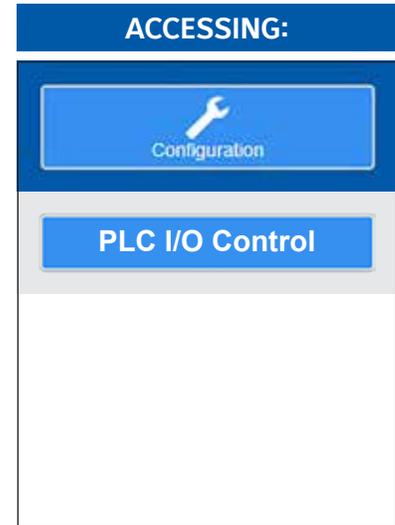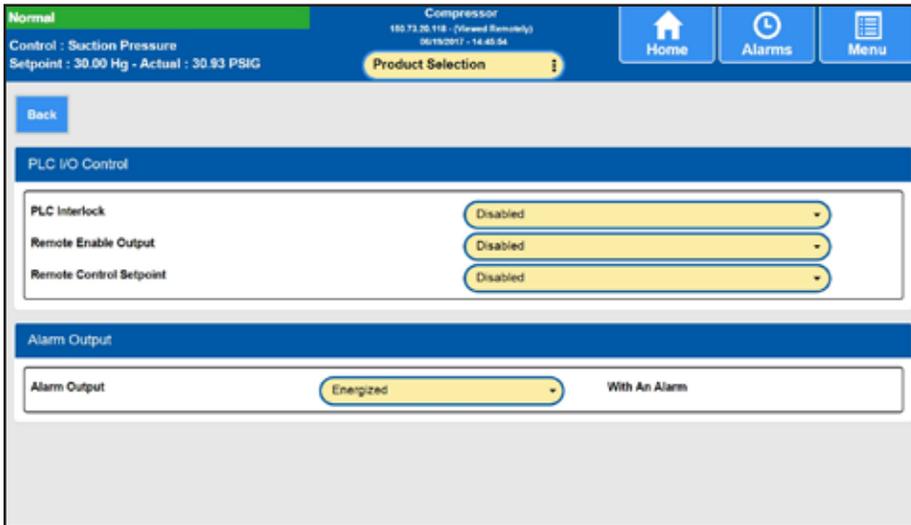

DESCRIPTION: Use this screen to setup the PLC I/O Control and alarm features that can optionally be used.

The following selections appear here:

PLC I/O CONTROL

PLC Interlock – When enabled, this will determine Slide Valve control. If an input module has been installed into position #1 of Digital Board 2, it will be used to determine PLC Control. If the input signal is lost, the mode is switched to Automatic. The input must be energized before going into Remote.

Remote Enable Output – The output for channel 2, digital board 2 (Remote Enable) will be energized when the Compressor Mode has been set for Remote operation, and one of the following parameters have been selected:

- Disabled – This feature is disabled.
- Compressor Mode: Remote I/O
- Compressor and Capacity Modes: Remote I/O
- Compressor Mode: Remote I/O and Capacity Mode: Remote 4-20

Remote Control Setpoint – This provides for using the Remote Control Setpoint analog input (channel 12) for Capacity Control of compressors. A pull down box is provided that changes between the following selections:

- **Disabled** – This feature is disabled.
- **Enabled** – This feature is enabled.



ALARM OUTPUT

Alarm Output – This selection allows the Alarm Output to be setup as “Energized” or “De-energized” with an Alarm. The default setting is “Energized” with an Alarm.

A pull down box is provided that changes between the following selections:

- **Energized** with an Alarm – The output will normally be Off but will turn On when a Warning or Shutdown occurs.
- **De-energized** with an Alarm – The output will normally be On but will turn Off when a Warning or Shutdown occurs (fail safe).

SERVICE – MAINTENANCE (FACTORY)

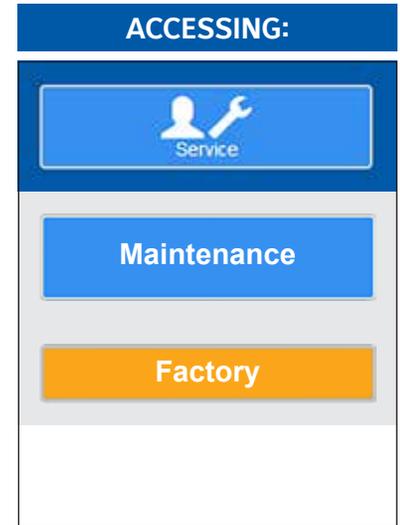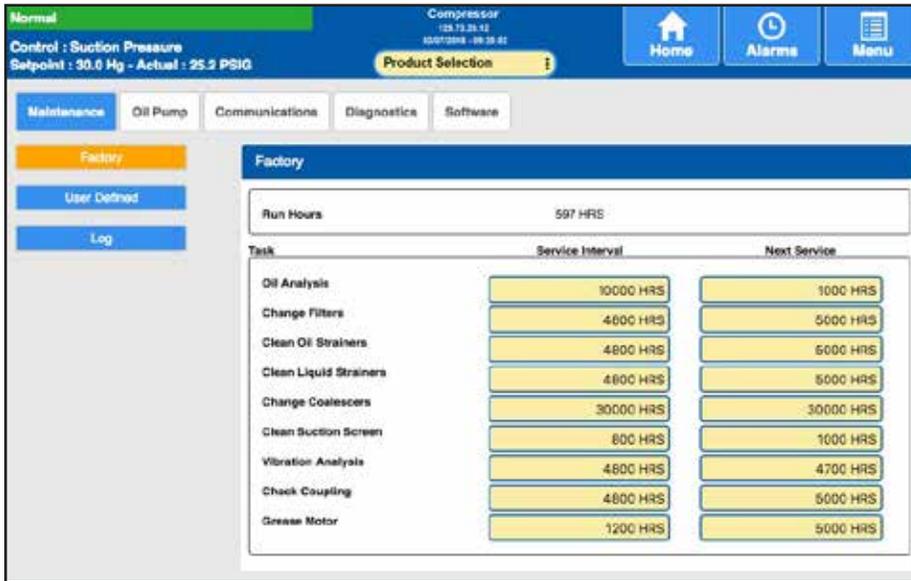

DESCRIPTION: Using this screen, the user can view up to nine (9) pre-programmed maintenance schedules. This screen is based upon the Maintenance Schedule that is provided in the IOM manual for the specific compressor package.

FACTORY

The above screen shows a row labeled as Oil Analysis in the Task column. The next column (Service Every) on the same row has a value of 10000 Hrs. The last column (Next Service) of this row has a value of 1000 Hrs. When the compressor is running, this time value is being clocked. After 1000 hours of compressor run time, a message will be generated and placed on the Event screen. This particular message will read Maintenance -- Oil Analysis. This is to notify the operator that it is time to have the Oil checked. At this point, the operator should notify the proper maintenance personnel that the appropriate maintenance be performed. The user should access the Event Screen on a regular basis (perhaps once per week) to review the information provided there.

Once the message has been entered in the Event Log, the values for the row will be automatically updated, with new values as predetermined by an internal programmed maintenance schedule, based upon the type of compressor. The values for the Next Service column are based upon the Compressor Run Time hours (shown at the top of this screen).

Modifying numerical values



When using the touchscreen, simply touch the box that you wish to change, and enter the new value into the setpoint box, then press **[Enter]**.

When using the physical keypad, simply use the **[Tab]** key to scroll down the lists, or the **[Left Arrow]** key to scroll up the lists. When the box that you wish to change is highlighted, you may enter the new value using the numerical keys, then press the **[Enter]** key to accept the value.

The following additional information is provided on this screen:

Run Hours - The value shown here is the total number of hours that the compressor motor has actually been in the running state. This value can be reset (or changed to any value from 0 to 1,000,000 Hours) from the Panel screen.

SERVICE – MAINTENANCE (USER DEFINED)

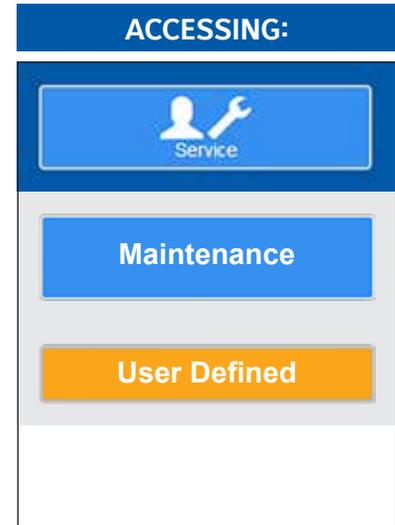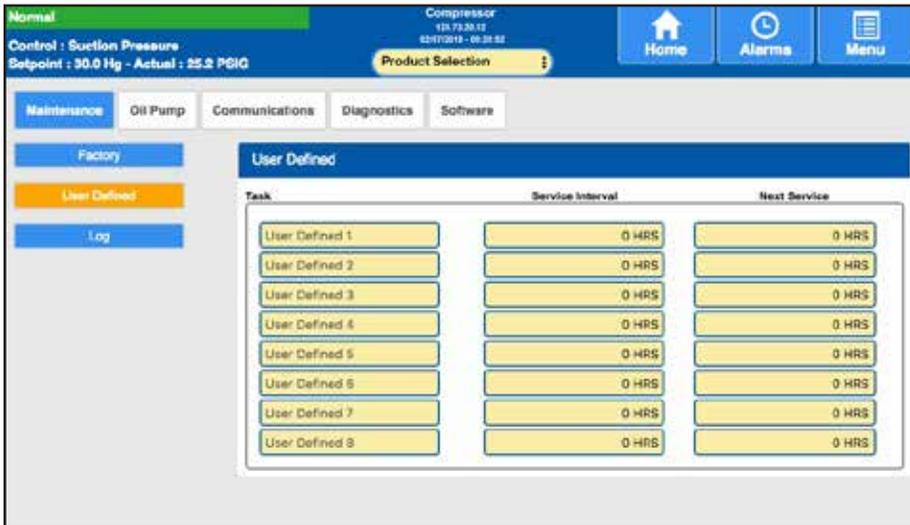

DESCRIPTION: Using this screen, the user can view up to eight (8) user definable maintenance schedules. Each of the user defined schedules may be custom named. This screen is based upon the Maintenance Schedule that is provided in the IOM manual for the specific compressor package.

The function of this screen is exactly the same as already described on the previous page (Maintenance - Factory), with the exception that the user can custom name events here.

USER DEFINED

Modifying numerical values

When using the touchscreen, simply touch the box that you wish to change, and enter the new value into the setpoint box, then press **[Enter]**.


When using the physical keypad, simply use the **[Tab]** key to scroll down the lists, or the **[Left Arrow]** key to scroll up the lists. When the box that you wish to change is highlighted, you may enter the new value using the numerical keys, then press the **[Enter]** key to accept the value.

Modifying Text (User Defined) Boxes

When using the touchscreen, simply touch the box that you wish to change, and enter the new name using the pop-up keyboard, then press **[Enter]**.

To modify any of the text boxes on this screen, simply use the **[Tab]** key to scroll down the lists, or the **[Left Arrow]** key to scroll up the lists. Once the box that you wish to change is highlighted, use the **[Up Arrow]** key. A new screen (Alpha) showing a numerical keypad will appear. Refer to the Alpha screen description for information on entering text messages. Press the **[Enter]** key to accept the text. The user may type in a custom name up to 20 characters long.

SERVICE – OIL PUMP

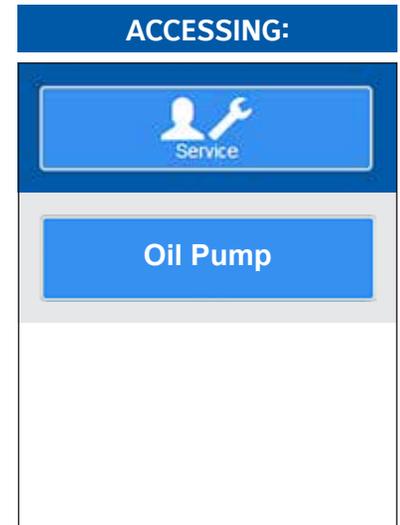

DESCRIPTION: Using this screen, the user can set the operation of the Oil Pump, if installed.



OIL PUMP

Oil Pump - A Pump On/Off indicator (blue text) is provided here to alert the user as to the actual status of the Oil Pump (if applicable). A drop down menu is also provided, and there are two states that can be selected for oil pump operation, they are:

Manual - The user has control over the running of the pump. To run the pump, simply observe the blue text indicator to ensure that the pump is not already running, and if not, then press the **[On/Off]** toggle button. The blue text indicator will change from Off to On. To stop the pump, press the toggle button again, and the pump indicator will change to Off.

Automatic - If the pump is set to Automatic mode, the Quantum™ HD software program is controlling the pump operation. In this mode, if the toggle key is pressed, the mode will be changed from Automatic to Manual Mode, and the current state of the pump (digital output 3) will toggle also.

SERVICE – COMMUNICATIONS

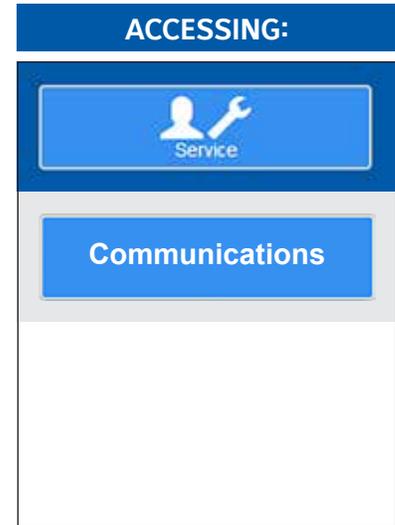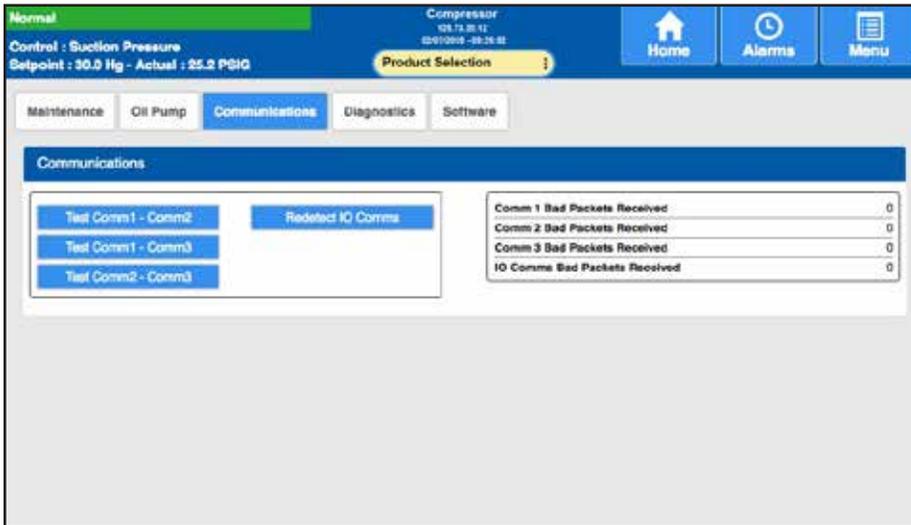

DESCRIPTION: This screen allows the technician to perform system checks on serial communications. Please refer to Section 2 of Frick publications 090.040-CS (Communications Setup) for additional information.

The following buttons are provided:



- Test Comm1 - Comm2 - This test will check the hardware of both of these ports.
- Test Comm2 - Comm3 - This test will check the hardware of both of these ports.
- Test Comm 3 - Comm1 - This test will check the hardware of both of these ports.
- Redetect I/O Comms - This selection provides a method to detect all connected Analog and Digital boards. For additional information about this screen, refer to 090.040-CS (Communications Manual).

The following are some of the things that can occur that would cause an I/O board to stop communicating with the Quantum™, and would require that you Redetect I/O Comms:

- A board has been removed, and power was turned on with the board removed. You would need to replace the board, re-power, and then select [Redetect I/O Comms].
- A board has failed in such a way that it cannot properly communicate with the Quantum™ HD.
- A failure with the communications cable which is plugged into the end of each board

If any of these things occur, a communications error shutdown will be issued until this key is selected. You should always view the *About* screen to see what has been detected.

SERVICE – DIAGNOSTICS

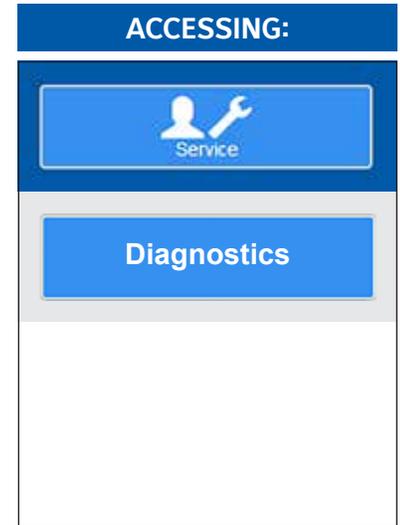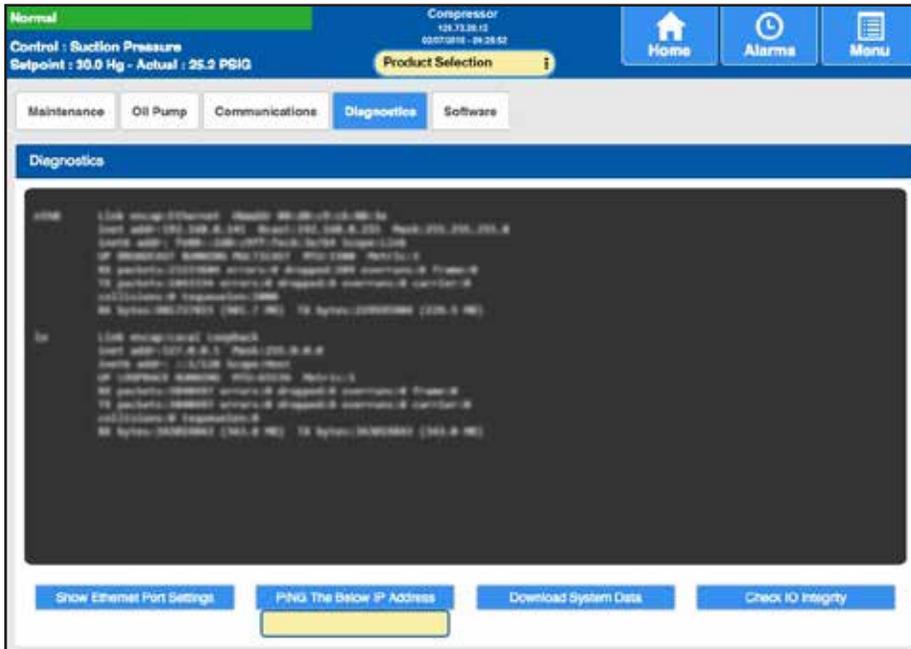

DESCRIPTION: This screen allows the technician to perform system checks on Ethernet communications. Refer to the Communications Manual (090.040-CS) for specific information about this test.



- Show Ethernet Port Settings - Pressing this button will cause the Ethernet Port Settings to be shown.
- Ping the Below IP Address - There is a setpoint box located below this button. Select this box to call up a numeric keypad. Enter the IP address that you wish to PING, then press the [PING The Below Address] button. The results of the PING will be shown.
- Download System Data - Selecting this button will allow numerous system information and data to be downloaded to a USB thumbdrive device (2GB minimum recommended).

When this button has been selected, a message box will appear on the screen asking if a USB drive has been installed. Once the USB device has been plugged in and the prompt has been answered, a message will appear notifying the operator that a System Save is running. It is at this point that the necessary data is collected and saved to the USB device. Once the files have been saved, the message box will disappear, and the normal screen will be shown.

Remove the USB device, and plug it into an available USB port on a computer. Using Windows Explorer, locate the device and open it. You will notice a file named *system-data.zip*. Clicking on the *system-data.zip* file will show the following files saved under it:

- Historical_trending.zip (file) - This zip file when opened, will contain at least one .csv file, and possibly more. Approximately every two weeks a trending file is automatically created and named with a time/date stamp type of name, such as 2013-12-20 07:21:00.csv. This file name will indicate the date and time that the file was created. Opening each shown .csv file will cause the contents of the file to be shown in a formatted Excel spreadsheet with the values of each analog channel at the time the data was collected. After about two weeks, another file will be created with a new time/date stamped name. Older files are maintained.
- System-data.xls (file) - Opening this file will cause a formatted Excel spreadsheet to be shown. Multiple tabs exist within the spreadsheet, and are labeled as follows:
 - Events
 - Alarms
 - User Actions
 - Real Time Trending
 - DF command (linux)
 - Running Processes

SERVICE – SOFTWARE

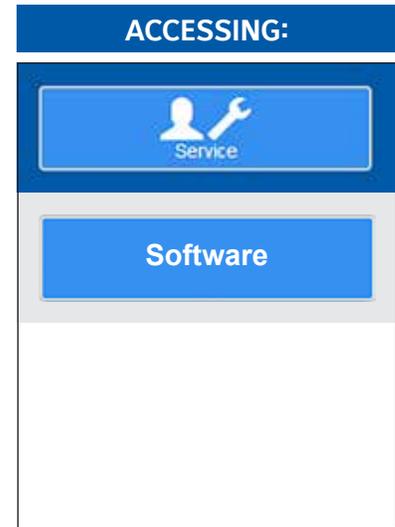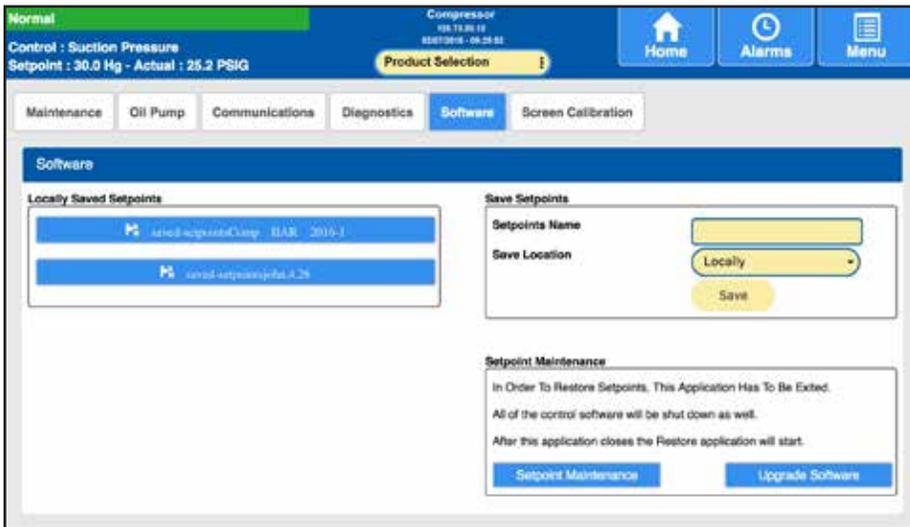

DESCRIPTION: The Software Maintenance screen has been provided as a way for the user to upload new operating software to their system, save setpoints or restore setpoints.

SOFTWARE SERVICE

Locally Saved Setpoints

Any previously saved setpoint data files will be shown here, by the file name that the user assigned to the file. The date and time stamp will be shown next to the file name.

To delete one or more files, simply click on the file name bar, and you will be prompted with a warning message that the file will be deleted.

Save Setpoints

Setpoint Name - Selecting this box will call up the keyboard overlay. Use the on-screen keyboard to enter a custom name for the setpoint file that you wish to create. When finished, press the **[Enter]** key on the keyboard. The on-screen keyboard will be removed, and you will see your custom named file in the Setpoint Name box. You will next need to select the location to save the setpoint data file to, by selecting *Save Location*.

Save Location - Selecting this button will cause the following options to be shown:

- **Locally** - Selecting this option will save the compressor setup locally to the panel.
- **USB Thumb Drive** - Select if Uploading from or Downloading to a USB thumb drive. Install the drive to one of the two USB ports of the Q6 or Q5 processor board.

NOTE: Devices that are formatted using any of the following formats have been verified to function properly:

Windows:

- FAT32
- NTFS
- FAT

Linux:

- Linux ext2

Although numerous brands and storage sizes of USB thumb drive devices have been tested for compatibility with the Quantum™ HD system, there is a possibility that not all USB thumb drives will work.

Restore Setpoints

Restore Setpoints - Selecting this button will allow for a previously saved setpoints file, to restore (overwrite) the setpoint file that is currently contained within the Quantum™ HD.

Upgrade Software - Selecting this button will cause the an upgrade software version to in stalled to the Quantum™ HD.

NOTICE

Due to various changes in software versions, certain setpoints may not save and restore correctly. In these cases, the setpoint value will need recorded and entered manually.

Setpoints that do not restore properly:

- Email Notification (Quantum HD & Unity)
- Liquid Injection Setup (Quantum HD & Unity)
- Network settings (Unity)
- Compressor Name
- 2nd Digital and Analog Board Status
- Existing Quantum LX to Quantum LX list

SECTION 4

WARNINGS/SHUTDOWNS MESSAGES

Following is the alphabetical listing of all possible conditions:

Analog Board 1 Communications Shutdown - It has been detected that the program is no longer able to communicate to Analog Board 1.

Analog Board 2 Communications Shutdown - It has been detected that the program is no longer able to communicate to Analog Board 2.

Auxiliary Input 1-20 Shutdown - The Auxiliary #1-20 input module has been setup to indicate a shutdown if it becomes de-energized.

Auxiliary Input 1-20 Warning - The Auxiliary #1-20 input module has been setup to indicate a warning if it becomes de-energized.

Balance Piston 1 Shutdown - Balance piston control has been enabled. This shutdown will occur if the difference between Discharge Pressure and Suction Pressure is less than 60 PSI and the Balance Piston output module (digital output module 12) is de-energized, then the Balance Piston pressure must be 1.1 times Suction Pressure plus or minus 15 PSI.

Balance Piston 2 Shutdown - Balance piston control has been enabled. This shutdown will occur if the difference between Discharge Pressure and Suction Pressure is greater than or equal to 60 PSI and the Balance Piston output module (digital output module 12) is de-energized, then the Balance Piston pressure must be 50 PSI below Discharge Pressure plus or minus 15 PSI.

Balance Piston 3 Shutdown - Balance piston control has been enabled. This shutdown will occur if the Balance Piston output module (digital output module 12) is energized, then Balance Piston pressure must be within 20 PSI of Oil Pressure.

Coalescer Filter Differential Shutdown - (For RCSI only) A Shutdown will occur when the differential of Discharge Pressure to System Discharge Pressure is greater than the setpoint for its Delay period.

Coalescer Filter Differential Warning - (For RCSI only) This Warning will be issued when the differential of Discharge Pressure to System Discharge Pressure is greater than the setpoint for its Delay period.

Compressor Auxiliary Shutdown - This shutdown message is issued if while the compressor is running and the Compressor Auxiliary input module, which receives feedback from the motor starter, becomes de-energized.

Compressor Capacity Unload Warning - While stopping the compressor or if the compressor is off, this indicates that the Slide Valve position has not unloaded below the Highest Slide Valve Position to allow starting the compressor setpoint.

Compressor Starting Failure-Aux. - This shutdown message is displayed if after 30 seconds from the time the start compressor command is sent the Compressor Auxiliary input module is not energized.

Condensing Water in Separator Warning (Off) - When the compressor is off, if the Separator Temperature was less than the sum of the calculated Dewpoint Temperature and the Off Safety Factor for the Delay period.

Condensing Water in Separator Warning (Running) - When the compressor is running, if the Discharge Temperature was less than the sum of the calculated Dewpoint Temperature and the On Safety Factor for the Delay period.

DBS Communication Failure Warning - It has been detected that the program is no longer able to communicate to a RAM DBS Motor Starter. To verify the loss in communications, access Menu > Setpoints > Motor, and check the DBS Software Version. This version should read the actual version of the software, but a communications loss will return a value of 0.00.

DBS Communication Failure Shutdown - It has been detected that the program is no longer able to communicate to a RAM DBS Motor Starter. To verify the loss in communications, access Menu > Setpoints > Motor, and check the DBS Software Version. This version should read the actual version of the software, but a communications loss will return a value of 0.00.

DBS - Current Unbalance - Either the current between two phases has exceeded the setpoint value longer than the time delay setpoint, or there is a voltage unbalance between phases, or the SCR operation is abnormal.

DBS - HEATSINK Over-temperature - Either the temperature of the heat sink has exceeded the maximum safe operating temperature of 85 deg. C. or heat sink cable connection P2 is loose.

DBS - Jam - The current exceeded the Jam Trip level set point longer than the time delay set point while in the RUN state.

DBS - Phase Loss - This will occur if there is a loss of at least one phase of supply voltage or the loss of at least one phase of current feedback.

DBS - Phase Reversal - Either there is an incorrect phase order at the DBS chassis input terminals, or the control power was applied before the three phase power.

DBS - RTD Overtemperature - The RTD temperature sensor is out of range.

DBS - RTD Temperature - The RTD temperature sensor is out of range.

DBS - Short Circuit - The current exceeded 800% of FLA set point while the motor was starting.

DBS - Shorted SCR - This failure may occur if there is a defective SCR or a defective bypass contactor. It may also occur if the motor is disconnected. Also, inspect the main contacts of the bypass contactor.

DBS - Thermal Overload - Either the calculated thermal capacity of the motor exceeded 100% of limit, or the motor is "short-cycling".

Digital Board 1 Communications Shutdown - It has been detected that the program is no longer able to communicate to Digital Board 1.

Digital Board 1 Reset - If a reset of Digital Board 1 occurs, a shutdown will occur to prevent the motor from restarting.

Digital Board 2 Communications Shutdown - It has been detected that the program is no longer able to communicate to Digital Board 2.

Digital Board 2 Reset - If a reset of Digital Board 2 occurs, a warning will be issued.

False Running Fail -- Confirmed Running Inp - This shutdown message is issued if while the compressor is off the compressor auxiliary is energized. While this condition is present, the Oil Pump (if available) is on, and Liquid Injection (if available) is allowed on and the Slide Valve is unloaded to 0% to safeguard the compressor.

False Running Fail -- Motor Amps - This shutdown message is issued if while the compressor is off, the Motor Current reading is above the Low Motor Amps Shutdown setpoint. While this condition is present, the Oil Pump (if available) is on, and Liquid Injection (if available) is allowed on and the Slide Valve is unloaded to 0% to safeguard the compressor.

Harmonic Filter DC Bus Voltage Imbalance - The 1/2 DC link voltage magnitude will remain within ± 50 VDC of the total DC link voltage divided by two during the precharge interval for both 60 and 50 Hz 519 filters. If not, the Quantum™ HD panel will display this message.

Harmonic Filter DC Current Transformer 1 - During initialization, the output voltage of DC Current Transformer 1 which sense the filter's input current will be monitored and compared against a level of ± 147 mv (± 6010 A to D counts). If the offset error falls outside this range, the unit will trip and the Quantum™ HD panel will display this message.

Harmonic Filter DC Current Transformer 2 - During initialization, the output voltage of DC Current Transformer 2 which sense the filter's input current will be monitored and compared against a level of ± 147 mv (± 6010 A to D counts). If the offset error falls outside this range, the unit will trip and the Quantum™ HD panel will display this message.

Harmonic Filter High Baseplate Temp Fault - The unit contains one heatsink assembly for the 305 Hp. The Filter's power module base plate temperature will feed the Harmonic Filter Logic board. This temperature is compared in software to a limit of 79°C and if this limit is exceeded, the unit will trip and the Quantum™ HD panel will display this message.

Harmonic Filter High DC Bus Voltage Fault - The harmonic filter's DC link voltage is continuously monitored and if the level exceeds a range of 822 to 900 VDC, a Filter Bus Over-Voltage shutdown is initiated.

Harmonic Filter High Phase A Current Fault - The unit's three phases of instantaneous output current are compared to a prescribed limit, which is contained in the hardware. If the Phase A signal exceeds the prescribed limit, the filter will be inhibited from operating by inhibiting the Current Regulator Run signal for five to six input line voltage cycles. If the Phase A signal exceeds the prescribed threshold three times in 60 line cycles, the unit will trip and the Quantum™ HD panel will display this message.

Harmonic Filter High Phase B Current Fault - The unit's three phases of instantaneous output current are compared to a prescribed limit, which is contained in the hardware. If the Phase B signal exceeds the prescribed limit, the filter will be inhibited from operating by inhibiting the Current Regulator Run signal for five to six input line voltage cycles. If the Phase B signal exceeds the prescribed threshold three times in 60 line cycles, the unit will trip and the Quantum™ HD panel will display this message.

Harmonic Filter High Phase C Current Fault - The unit's three phases of instantaneous output current are compared to a prescribed limit, which is contained in the hardware. If the Phase C signal exceeds the prescribed limit, the filter will be inhibited from operating by inhibiting the Current Regulator Run signal for five to six input line voltage cycles. If the Phase C signal exceeds the prescribed threshold three times in 60 line cycles, the unit will trip and the Quantum™ HD panel will display this message.

Harmonic Filter High Total Demand Distortion - This shutdown indicates that the filter is not operating correctly or the

input current to the Vyper™ / filter system is not sinusoidal. This fault occurs when any of the three phases of Total Demand Distortion is greater than 25.0 %, for forty-five continuous seconds while the Vyper™ is running.

Harmonic Filter Input Frequency Out of Range - The Harmonic Filter monitors the line frequency on its inputs. If this frequency is out of range, it will cease filtering, and set a bit in the communications packet. This warning is shown whenever this bit is set.

Harmonic Filter Logic Board Power Supply - This shutdown indicates that one of the low voltage power supplies on the Filter Logic board have dropped below their permissible operating voltage range.

Harmonic Filter Logic Board Or Comms Fault - This fault occurs if the No Fault signal from the Vyper™ is low, indicating a fault is present at the Vyper™ or the Harmonic Filter, but the communications data contains no Harmonic Filter fault data for twenty seconds. The Frick Interface Board will send Initialize data requests while this fault is active.

Harmonic Filter Low DC Bus Voltage - The DC link voltage magnitude should remain within -80 VDC of the bus voltage setpoint determined from the peak input voltage. If the DC link voltage magnitude falls outside this range for 100 msec the unit will trip and the Quantum™ HD panel will display this message.

Harmonic Filter Phase Locked Loop Fault - This shutdown indicates that a circuit called a "phase locked loop" on the Filter Logic board has lost synchronization with the incoming power line for a period of time.

Harmonic Filter Precharge - High DC Bus Volt - The DC link voltage will reach at least 500 VDC within 20 seconds after the precharge signal has been asserted on the 60 Hz VSD and at least 414 VDC within 20 seconds on the 50 Hz VSD. If not, the Quantum™ HD panel will display this message.

Harmonic Filter Precharge - Low DC Bus Volt - This fault has two different timing events. First, the DC Bus voltage must be equal to or greater than 50 VDC for 60 Hz (41 VDC for 50 HZ) 4 seconds after precharge has begun. Second, the DC Bus voltage must be equal to or greater than 500 VDC for 60 Hz (414 VDC for 50 HZ) 20 seconds after precharge has begun. The unit is shut down and this message is generated if any of these conditions are not met.

Harmonic Filter Run Signal Fault - When a digital run command is received at the filter logic board from the Vyper™ Logic board, a 1/10 second timer is begun. A redundant run command must also occur on the serial data link from the Vyper™ Logic board before the timer expires. If not, the Vyper™ will be shut down and this Fault message will be displayed.

Harmonic Filter Serial Communication - When requesting Status data, the response data from the Harmonic Filter includes a bit that indicates whether communications were lost from the Vyper™ to the Harmonic Filter. If this bit is high for twenty consecutive seconds, this warning is indicated. This warning is also indicated whenever a receive timeout, or checksum fault is detected on the Harmonic Filter communications, for twenty continuous seconds.

Harmonic Filter 110% Input Current Overload - The overload threshold and timer functions reside in software on the Harmonic Filter's Logic board. The unit's three phases of RMS output current are compared to the overload threshold magnitude. If this threshold is exceeded for 40 seconds the unit will trip and the Quantum™ HD panel will display this message.

High Auxiliary Analog 1-20 Shutdown - The Auxiliary Analog #1-20 value was greater than or equal to the high Auxiliary Analog #1-20 shutdown setpoint for its time delay.

High Auxiliary Analog 1-20 Warning - The Auxiliary Analog #1-20 value was greater than or equal to the high Auxiliary Analog #1-20 warning setpoint for its time delay.

High Auxiliary Analog Input 1-20 Sensor Warning - This warning message is issued if the sensor connected to the associated Auxiliary Analog Input channel was above the High End range for its sensor. The High End range is set by accessing Menu > Calibration > Auxiliaries > Page 1 or 2, and setting the High end. This is strictly a warning, as the compressor does not stop. This warning is logged into the Event Log.

High Bal Piston Pressure Sensor Warning - This warning message is issued if the Balance Piston Pressure reading (analog board 1, channel 10) was to the upper or maximum range (out of range) for its sensor.

High Comp. Oil Pressure Sensor Fault - This shutdown message is issued if the Oil Pressure reading (analog board 1, channel 6) was to the upper or maximum range (out of range) for its sensor.

High Comp. Oil Pressure Shutdown - The Oil Pressure was greater than or equal to the High Oil Pressure Shutdown setpoint for its time delay.

High Comp. Oil Temperature Shutdown - The Oil Temperature was greater than or equal to the High Oil Temperature Shutdown setpoint for its time delay.

High Comp. Oil Temperature Warning - The Oil Temperature was greater than or equal to the High Oil Temperature Warning setpoint for its time delay. To access this setpoint: Menu > Setpoints > Package.

High Compressor Vib Shutdown - Suction - If the Suction End Compressor Vibration sensor registers a reading that is higher than the value that has been set for the Suction End High Shutdown, for the period of time as set for the Suction End High Shutdown Delay, a Shutdown will be generated.

High Compressor Vib Warning - Suction - If the Suction End Compressor Vibration sensor registers a reading that is higher than the value that has been set for the Suction End High Warning, for the period of time as set for the Suction End High Warning Delay, a Warning will be generated.

High Compressor Vib Shutdown - Discharge - If the Discharge End Compressor Vibration sensor registers a reading that is higher than the value that has been set for the Discharge End High Shutdown, for the period of time as set for the Discharge End High Shutdown Delay, a Shutdown will be generated.

High Compressor Vib Warning - Discharge - If the Discharge End Compressor Vibration sensor registers a reading that is higher than the value that has been set for the Discharge End High Warning, for the period of time as set for the Discharge End High Warning Delay, a warning will be generated.

High Disch Pres Shutdown - The Discharge Pressure was greater than or equal to the active High Discharge Pressure Shutdown setpoint for its time delay.

High Disch Pres Warning - The Discharge Pressure was greater than or equal to the active High Discharge Pressure Warning setpoint for its time delay.

High Disch Pres Shutdown -- Mode 2 - The Discharge Pressure was greater than or equal to the active High Discharge Pressure Shutdown setpoint for its time delay.

NOTE: This message can only be active if Dual Discharge Pressure Mode is enabled. Also, if the Dual Mode is enabled, then the Mode 1 safeties are active for Modes 1 & 3, and the Mode 2 safeties are active for Modes 2 & 4.

High Disch Pres Warning -- Mode 2 - The Discharge Pressure was greater than or equal to the active High Discharge Pressure Warning setpoint for its time delay.

NOTE: This message can only be active if Dual Discharge Pressure Mode is enabled. Also, if the Dual Mode is enabled, then the Mode 1 safeties are active for Modes 1 & 3, and the Mode 2 safeties are active for Modes 2 & 4.

High Discharge Pressure Sensor Fault - This shutdown message is issued if the Discharge Pressure reading (analog board 1, channel 8) was to the upper or maximum range (out of range) for its sensor.

High Discharge Temperature Sensor Fault - This shutdown message is issued if the Discharge Temperature reading (analog board 1, channel 2) was to the upper or maximum range (out of range) for its sensor.

High Disch Temperature Sensor Warning - This warning message is issued if the Discharge Temperature reading (analog board 1, channel 2) was to the upper or maximum range (out of range) for its sensor.

High Discharge Temperature Shutdown - The Discharge Temperature was greater than or equal to the High Discharge Temperature Shutdown setpoint for its time delay.

High Discharge Temperature Warning - The Discharge Temperature was greater than or equal to the High Discharge Temperature Warning setpoint for its time delay.

High Economizer Gas Temp Sensor Warning - This warning message is issued if the Economizer Gas Temperature reading was to the upper or maximum range (out of range) for its sensor.

High Economizer Pressure Sensor Warning - This warning message is issued if the Economizer Pressure reading (analog board 2, channel 14) was to the upper or maximum range (out of range) for its sensor.

High Filter Pressure Sensor Warning - This warning message is issued if the Filter Pressure reading (analog board 1, channel 7) was to the upper or maximum range (out of range) for its sensor.

High kW Monitoring Sensor Warning - This warning message is issued if the Kilowatt Monitoring reading (analog board 2, channel 16) was to the upper or maximum range (out of range) for its sensor.

High Limit Disch Pres Shutdown - The Discharge Pressure was greater than the active High Discharge Pressure Shutdown setpoint + 5 psi for 1 second.

High Limit Disch Temp Shutdown - The Discharge Temperature was greater than or equal to the active High Discharge Temperature Shutdown setpoint for its time delay.

High Liquid Level Sensor Warning - This warning message is issued if the Liquid Level reading was to the upper or maximum range (out of range) for its sensor.

High Liquid Level Shutdown - If the Liquid Level rises above the Liquid Level sensor, a delay timer is started. If the Level does not recover before the delay timer counts down, a Shutdown is issued.

High Main Oil Inj Pressure Sensor Warning - This warning message is issued if the Main Oil Injector Pressure reading (analog board 2, channel 15) was to the upper or maximum range (out of range) for its sensor.

High Manifold Pressure Sensor Warning – This warning message is issued if the Manifold Pressure reading was to the upper or maximum range (out of range) for its sensor.

High Manifold Pressure Shutdown – This shutdown applies if Engine Drive was enabled. When the Manifold Pressure exceeds this setpoint, an alarm will occur.

High Manifold Pressure Warning – This warning applies if Engine Drive was enabled. When the Manifold Pressure exceeds this setpoint, a warning will occur.

High Motor Current Sensor Warning – This warning message is issued if the Motor Current reading (analog board 1, channel 16) was to the upper or maximum range (out of range) for its sensor.

High Motor Current Shutdown – The motor amps was greater than or equal to the High Motor Amps Shutdown setpoint for its time delay.

High Motor Current Warning – The Motor Amps was greater than or equal to the High Motor Amps Warning setpoint for its time delay.

High Motor Stator #1 Temp Warning – If Motor Stator #1 temperature sensor registers a reading that is higher than the value that has been set for the Motor Stator #1 Temp. Warning, for the period of time as set for the Motor Stator #1 Temp. Warning Delay, a warning will be generated. The default values for these setpoints Default setpoints for this Warning are 302° F and 5 seconds.

High Motor Stator #1 Temp Shutdown – If Motor Stator #1 temperature sensor registers a reading that is higher than the value that has been set for the Motor Stator #1 Temp. Shutdown, for the period of time as set for the Motor Stator #1 Temp. Shutdown Delay, a Shutdown will be generated. The default values for these setpoints are 311° F, and 5 seconds.

High Motor Stator #2 Temp Warning – If Motor Stator #2 temperature sensor registers a reading that is higher than the value that has been set for the Motor Stator #2 Temp. Warning, for the period of time as set for the Motor Stator #2 Temp. Warning Delay, a warning will be generated. The default values for these setpoints 302° F, and 5 seconds.

High Motor Stator #2 Temp Shutdown – If Motor Stator #2 temperature sensor registers a reading that is higher than the value that has been set for the Motor Stator #2 Temp. Shutdown, for the period of time as set for the Motor Stator #2 Temp. Shutdown Delay, a Shutdown will be generated. The default values for these setpoints are 311° F, 5 seconds.

High Motor Stator #3 Temp Warning – If Motor Stator #3 temperature sensor registers a reading that is higher than the value that has been set for the Motor Stator #3 Temp. Warning, for the period of time as set for the Motor Stator #3 Temp. Warning Delay, a warning will be generated. The default values for these setpoints are 302° F, and 5 seconds.

High Motor Stator #3 Temp Shutdown – If Motor Stator #3 temperature sensor registers a reading that is higher than the value that has been set for the Motor Stator #3 Temp. Shutdown, for the period of time as set for the Motor Stator #3 Temp. Shutdown Delay, a Shutdown will be generated. The default values for these setpoints are 311° F, and 5 seconds.

High Motor Temp Shutdown - Opp Shaft Side – The motor has temperature sensors that monitor the Opposite Shaft Side bearing. If the temperature of this bearing exceeds the Opposite Shaft Side High Shutdown setpoint, for a period of time exceeding the Opposite Shaft Side High Shutdown Delay setpoint,

this Shutdown will occur. The default values for these setpoints are 221° F and a delay of 5 seconds.

High Motor Temp Shutdown - Shaft Side – The motor has temperature sensors that monitor the Shaft Side bearing. If the temperature of this bearing exceeds the Shaft Side High Shutdown setpoint, for a period of time exceeding the Shaft Side High Shutdown Delay setpoint, this Shutdown will occur. The default values for these setpoints are 221° F and a delay of 5 seconds.

High Motor Temp Warning - Opp Shaft Side – The motor has temperature sensors that monitor the Opposite Shaft Side bearing. If the temperature of this bearing exceeds the Opposite Shaft Side High Warning setpoint, for a period of time exceeding the Opposite Shaft Side High Warning Delay setpoint, this Warning will occur. The default values for these setpoints are 203° F and a delay of 5 seconds.

High Motor Temp Warning - Shaft Side – The motor has temperature sensors that monitor the Shaft Side bearing. If the temperature of this bearing exceeds the Shaft Side High Warning setpoint, for a period of time exceeding the Shaft Side High Warning Delay setpoint, this Warning will occur. The default values for these setpoints are 203° F and a delay of 5 seconds.

High Motor Vib Shutdown - Opposite Shaft Side – If the Opposite Shaft Side Drive Vibration sensor registers a reading that is higher than the value that has been set for the Opposite Shaft High Shutdown, for the period of time as set for the Opposite Shaft High Shutdown Delay, a Shutdown will be generated. The default values for these setpoints are 10 Fg and a delay of 1 second.

High Motor Vib Shutdown - Shaft Side – If the Shaft Side Drive Vibration sensor registers a reading that is higher than the value that has been set for the Shaft Side High Shutdown, for the period of time as set for the Shaft Side High Shutdown Delay, a Shutdown will be generated. The default values for these setpoints are 10 Fg and a delay of 1 second.

High Motor Vib Warning - Opposite Shaft Side – If the Opposite Shaft Side Drive Vibration sensor registers a reading that is higher than the value that has been set for the Opposite Shaft High Warning, for the period of time as set for the Opposite Shaft High Warning Delay, a warning will be generated. The default values for these setpoints are 3.5 Fg and a delay of 99 seconds.

High Motor Vib Warning - Shaft Side – If the Shaft Side Drive Vibration sensor registers a reading that is higher than the value that has been set for the Shaft Side High Warning, for the period of time as set for the Shaft Side High Warning Delay, a warning will be generated. The default values for these setpoints are 3.5 Fg and a delay of 99 seconds.

High Oil Filter Pressure Shutdown – The Oil Filter Pressure was greater than or equal to the High Filter Pressure Shutdown setpoint for its time delay. The default values for these setpoints are 30 PSI and a delay of 10 minutes. If the Filter setting is "Filter minus Oil", use the absolute value of the filter differential when checking the High Oil Filter Pressure safeties.

High Oil Filter Pressure Warning – The Oil Filter Pressure was greater than or equal to the High Filter Pressure Warning setpoint for its time delay. The default values for these setpoints are 25 PSI and a delay of 15 minutes. If the Filter setting is "Filter minus Oil", use the absolute value of the filter differential when checking the High Oil Filter Pressure safeties.

High Oil Pressure (Kobe) – If the compressor type is set to Other Manufacturer (Kobe), the oil pump type is set to Demand

and if Oil Pressure rises above 325 PSIA for more than 5 seconds this shutdown will occur. This shutdown is only active when the compressor is running and is also not checked for the first 90 seconds after the compressor starts.

High Oil Separator Temp Sensor Warning – This warning message is issued if the Oil Separator Temperature reading (analog board 1, channel 4) was to the upper or maximum range (out of range) for its sensor.

High Oil Temperature Sensor Fault – This shutdown message is issued if the Oil Temperature reading (analog board 1, channel 3) was to the upper or maximum range (out of range) for its sensor.

High Oil Temp Compressor Sensor Warning – This warning message is issued if the Oil Temperature reading (analog board 1, channel 3) was to the upper or maximum range (out of range) for its sensor.

High Process Entering Temp Sensor Warning – This warning message is issued if the Process Entering Temperature reading (analog board 2, channel 4) was to the upper or maximum range (out of range) for its sensor.

High Process Entering Temp Shutdown – The Entering Process Temperature was greater than or equal to the High Entering Process Temperature Shutdown setpoint for its time delay.

High Process Entering Temp Warning – The Entering Process Temperature was greater than or equal to the High Entering Process Temperature Warning setpoint for its time delay.

High Process Leaving Temp Sensor Warning – This warning message is issued if the Process Leaving Temperature reading (analog board 1, channel 5) was to the upper or maximum range (out of range) for its sensor.

High Process Leaving Temp Shutdown – The Leaving Process Temperature was greater than or equal to the High Leaving Process Temperature Shutdown setpoint for its time delay.

High Process Leaving Temp Warning – The Leaving Process Temperature was greater than or equal to the High Leaving Process Temperature Warning setpoint for its time delay.

High Rem Capacity Position Sensor Warning – This warning message is issued if the Remote Capacity Position reading was to the upper or maximum range (out of range) for its sensor.

High Remote Control Setpoint Sensor Warning – This warning message is issued if the Remote Control Setpoint sensor reading was to the lower or minimum range (out of range) for its sensor.

High RPM Sensor Warning – This warning message is issued if the RPM reading was to the higher or maximum range (out of range) for its sensor.

High RPM Shutdown – This shutdown applies if Engine or Turbine Drive was enabled. If the RPM's of the motor exceeds this setpoint, a shutdown will occur.

High RPM Warning – This warning applies if Engine or Turbine Drive was enabled. If the RPM's of the motor exceeds this setpoint, a warning will occur.

High Separator Temperature Sensor Fault – This shutdown message is issued if the Separator Temperature reading was to the upper or maximum range (out of range) for its sensor.

High Suction Pressure Shutdown – The Suction Pressure was greater than or equal to the active High Suction Pressure Shutdown setpoint for its time delay.

High Suction Pressure Warning – The Suction Pressure was greater than or equal to the active High Suction Pressure Warning setpoint for its time delay.

High Suction Temp Sensor Warning – This warning message is issued if the Suction Temperature reading (analog board 1, channel 1) was to the upper or maximum range (out of range) for its sensor.

High System Disch Pressure Sensor Warning – This warning message is issued if the System Discharge reading (analog board 1, channel 11) was to the upper or maximum range (out of range) for its sensor.

High Vyper Coolant Temperature Sensor Warning – This warning message is issued if the Vyper Coolant Temperature reading was to the higher or maximum range (out of range) for its sensor.

High Vyper Coolant Temperature Shutdown – This shutdown is issued if the Vyper Coolant Temperature reading was greater than or equal to the Vyper Coolant Temperature Shutdown setpoint for its time delay.

High Vyper Coolant Temperature Warning – This warning is issued if the Vyper Coolant Temperature reading was greater than or equal to the Vyper Coolant Temperature Warning setpoint for its time delay.

Insufficient Main Oil Pressure Shutdown – The Slide Valve is greater than 50% and the Oil Pressure (PSIA) is less than or equal to the Suction Pressure (PSIA) multiplied by 1.5 and then added to 15.0.

Liquid Injection Closed Warning – This warning will be triggered if all of the following are true:

- EZ Cool control is enabled.
- The compressor is a High Stage machine.
- The compressor is running or starting.
- The Disch Press has been above ((Suct Press x EZ Cool Port Mult.) + 35 psi) since the compressor started and the Disch Press falls below ((Suct Press x EZ Cool Port Mult.) + 30 psi).

Liquid Slugging Shutdown – This shutdown is triggered off of a sudden decrease in Discharge Temperature that is greater than the Liquid Slugging Shutdown setpoint for a five (5) second period. That is, if the Discharge Temperature is 130 degrees F, and the Liquid Slug Shutdown setpoint is 20 degrees F, then a sudden drop in Discharge Temperature from 130 to 110 degrees F within a five second period will generate a shutdown condition.

Liquid Slugging Warning – This warning is triggered off of a sudden decrease in Discharge Temperature that is greater than the Liquid Slug Warning setpoint for a five (5) second period. That is, if the Discharge Temperature is 130 degrees F, and the Liquid Slugging Warning setpoint is 10 degrees F, then a sudden drop in Discharge Temperature from 130 to 120 degrees F within a five second period will generate a warning condition.

Low Auxiliary Analog 1-20 Shutdown – The Auxiliary Analog #1-20 value was less than or equal to the low Auxiliary Analog #1-20 shutdown setpoint for its time delay.

Low Auxiliary Analog 1-20 Warning – The Auxiliary Analog #1-20 value was less than or equal to the low Auxiliary Analog #1-20 warning setpoint for its time delay.

Low Auxiliary Analog Input 1-20 Sensor Warning – This warning message is issued if the sensor connected to the associated Auxiliary Analog Input channel was below the Low End range for its sensor. This is strictly a warning, as the compressor does not stop. This warning is logged into the Event Log.

Low Bal Piston Pressure Sensor Warning – This warning message is issued if the Balance Piston Pressure reading (analog board 1, channel 10) was to the lower or minimum range (out of range) for its sensor.

Low Comp. Oil Pressure Sensor Fault - This shutdown message is issued if the Oil Pressure reading was to the lower or minimum range (out of range) for its sensor.

Low Comp. Oil Pressure Shutdown - If the type of compressor is a Reciprocating type, then a shutdown will occur if the Oil Pressure minus the Suction Pressure is less than the Low Comp. Oil Pressure Shutdown setpoint for the period of the delay. If the compressor type is set for anything other than Reciprocating, then the shutdown is based upon the following oil pump configurations:

- No Pump - A shutdown will occur if the Discharge Pressure minus the Oil Pressure is greater than the Low Compressor Oil Pressure Shutdown Setpoint for the period of the delay.
- Full Time - A shutdown will occur if the Oil Pressure minus the Discharge Pressure is less than the Low Compressor Oil Pressure Shutdown Setpoint for the period of the delay.
- Demand - A shutdown will occur if the Discharge Pressure minus the Oil Pressure is greater than the Low Compressor Oil Pressure Shutdown Setpoint for the period of the delay.
- Shaft pump or Shaft Aux. Pump - A shutdown will occur if the Oil Pressure minus the Discharge Pressure is less than the Low Compressor Oil Pressure Shutdown Setpoint for the period of the delay.

Low Comp. Oil Pressure Warning - If the type of compressor is a Reciprocating type, then a warning will occur if the Oil Pressure minus the Suction Pressure is less than the Low Comp. Oil Pressure Warning setpoint for the period of the delay. If the compressor type is set for anything other than Reciprocating, then the warning is based upon the following oil pump configurations:

- No Pump - A warning will occur if the Discharge Pressure minus the Oil Pressure is greater than the Low Compressor Oil Pressure Warning Setpoint for the period of the delay.
- Full Time - A warning will occur if the Oil Pressure minus the Discharge Pressure is less than the Low Compressor Oil Pressure Warning Setpoint for the period of the delay.
- Demand - A warning will occur if the Discharge Pressure minus the Oil Pressure is greater than the Low Compressor Oil Pressure Warning Setpoint for the period of the delay.
- Shaft pump or Shaft Aux. Pump - A warning will occur if the Oil Pressure minus the Discharge Pressure is less than the Low Compressor Oil Pressure Warning Setpoint for the period of the delay.

Low Comp. Oil Temperature Sensor Fault - This shutdown message is issued if the Oil Temperature reading was to the lower or minimum range (out of range) for its sensor.

Low Comp. Oil Temperature Shutdown - The Oil Temperature was less than or equal to the Low Oil Temperature Shutdown setpoint for its time delay.

Low Comp. Oil Temperature Warning - The Oil Temperature was less than or equal to the Low Oil Temperature Warning setpoint for its time delay.

Low Demand Pump Pressure Warning - This warning will be generated if the selected pump type is Demand, the compressor is running, the pump is running, and the oil pressure is less than 5 PSI above the discharge pressure for 30 seconds.

Low Demand Pump Pressure Shutdown - This shutdown is generated if the selected pump type is Demand, the compressor is running, the pump is running, and the oil pressure is less than 2 PSI above the discharge pressure for 120 seconds.

Low Discharge Pressure Shutdown - The Discharge Pressure was less than or equal to the Low Discharge Pressure Shutdown setpoint for its time delay. This setpoint is checked when enabled, when the compressor is running, and when a programmable compressor start delay has timed out

Low Discharge Pressure Sensor Fault - This shutdown message is issued if the Discharge Pressure reading was to the lower or minimum range (out of range) for its sensor.

Low Discharge Temperature Sensor Fault - This shutdown message is issued if the Discharge Temperature reading was to the lower or minimum range (out of range) out of range for its sensor.

Low Disch Temp Sensor Warning - This warning message is issued if the Discharge Temperature reading (analog board 1, channel 2) was to the lower or minimum range (out of range) for its sensor.

Low Economizer Pressure Sensor Warning - This warning message is issued if the Economizer Pressure reading (analog board 2, channel 14) was to the lower or minimum range (out of range) for its sensor.

Low EZ cool LIOC Feedback Sensor Warning - This warning message is issued if the EZ Cool LIOC sensor reading was to the lower or minimum range (out of range) for its sensor.

Low Filter Pressure Sensor Warning - This warning message is issued if the Filter Pressure reading (analog board 1, channel 7) was to the lower or minimum range (out of range) for its sensor.

Low Kw Monitoring Sensor Warning - This warning message is issued if the Kilowatt Monitoring reading (analog board 2, channel 16) was to the lower or minimum range (out of range) for its sensor.

Low Liquid Level Sensor Warning - This warning message is issued if the Liquid Level reading was to the lower or minimum range (out of range) for its sensor.

Low Main Oil Inj Pressure Sensor Warning - This warning message is issued if the Main Oil Injection Pressure reading was to the lower or minimum range (out of range) for its sensor.

Low Main Oil Injection Pressure Shutdown - This shutdown can occur if Oil Injection was enabled. The Oil Injection Pressure (channel 15, Analog Board 2) must be greater than or equal to the Suction Pressure times 1.5, plus the setpoint to be in the safe condition, otherwise this shutdown will occur. Used only on vertical oil separator with liquid injection oil cooled packages.

Low Manifold Pressure Sensor Warning - This warning message is issued if the Manifold Pressure reading was to the lower or minimum range (out of range) for its sensor.

Low Motor Current Sensor Warning - This warning message is issued if the Motor Current reading (analog board 1, channel 16) was to the lower or minimum range (out of range) for its sensor.

Low Motor Current Shutdown - This shutdown message is issued if, while the compressor was running, the Motor Amps reading was less than or equal to the Low Motor Amps Shutdown setpoint.

Low Oil Differential 1 (Kobe) - If the compressor type is set to Other Manufacturer (Kobe), the oil pump type is set to Demand and if the differential between Oil Pressure and Suction Pressure is less than 50 PSI for 5 seconds this shutdown will occur. This shutdown is only active when the compressor is running and is also not checked for the first 90 seconds after the compressor starts.

Low Oil Differential 2 (Kobe) – If the compressor type is set to Other Manufacturer (Kobe), the oil pump type is set to Demand and the differential between Oil Pressure and Suction Pressure is less than Suction Pressure times 0.8 for 5 seconds this shutdown will occur. This shutdown is only active when the compressor is running and is also not checked for the first 90 seconds after the compressor starts.

Low Oil Separator Temp Sensor Warning - This warning message is issued if the Oil Separator Temperature reading (analog board 1, channel 4) was to the lower or minimum range (out of range) for its sensor.

Low Oil Temp Compressor Sensor Warning - This warning message is issued if the Oil Temperature reading (analog board 1, channel 3) was to the lower or minimum range (out of range) for its sensor.

Low Process Entering Temp Sensor Warning - This warning message is issued if the Process Entering Temperature reading (analog board 2, channel 4) was to the lower or minimum range (out of range) for its sensor.

Low Process Entering Temp Shutdown - The Entering Process Temperature was less than or equal to the Low Entering Process Temperature Shutdown setpoint for its time delay.

Low Process Entering Temp Warning - The Entering Process Temperature was less than or equal to the Low Entering Process Temperature Warning setpoint for its time delay.

Low Process Leaving Temp Sensor Warning - This warning message is issued if the Process Leaving Temperature reading (analog board 1, channel 5) was to the lower or minimum range (out of range) for its sensor.

Low Process Leaving Temp Shutdown - The Leaving Process Temperature was less than or equal to the Low Leaving Process Temperature Shutdown setpoint for its time delay.

Low Process Leaving Temp Warning - The Leaving Process Temperature was less than or equal to the Low Leaving Process Temperature Warning setpoint for its time delay.

Low Rem Capacity Position Sensor Warning - This warning message is issued if the Remote Capacity Position reading was to the lower or minimum range (out of range) for its sensor.

Low Remote Control Setpoint Sensor Warning - This warning message is issued if the Remote Control Setpoint sensor reading was to the lower or minimum range (out of range) for its sensor.

Low RPM Sensor Warning - This warning message is issued if the RPM reading was to the lower or minimum range (out of range) for its sensor.

Low RPM Shutdown - This shutdown applies if Engine or Turbine Drive was enabled. If the RPM's of the motor drops below this setpoint, a shutdown will occur.

Low RPM Warning - This warning applies if Engine or Turbine Drive was enabled. If the RPM's of the motor drops below this setpoint, a warning will occur.

Low Separator Temperature Sensor Fault - This shutdown message is issued if the Separator Temperature reading was to the lower or minimum range (out of range) for its sensor.

Low Separator Temperature Shutdown - The Oil Separator Temperature was less than or equal to the Low Oil Separator Temperature Shutdown setpoint for its time delay.

Low Separator Temperature Warning - The Oil Separator Temperature was less than or equal to the Low Oil Separator Temperature Warning setpoint for its time delay.

Low Slide Stop Sensor Warning - This warning message is issued if the Slide Stop sensor reading was to the lower or minimum range (out of range) for its sensor.

Low Slide Valve Sensor Warning - This warning message is issued if the Slide Valve sensor reading was to the lower or minimum range (out of range) for its sensor.

Low Suction Pressure Sensor Fault - This shutdown message is issued if the Suction Pressure reading was to the lower or minimum range (out of range) for its sensor.

Low Suction Shutdown -- Mode 1 - When running in Mode 1, if the Suction Pressure was less than or equal to the active Mode 1 Low Suction Shutdown setpoint for its time delay.

Low Suction Shutdown -- Mode 2 - When running in Mode 2, if the Suction Pressure was less than or equal to the active Mode 2 Low Suction Shutdown setpoint for its time delay.

Low Suction Shutdown -- Mode 3 - When running in Mode 3, if the Suction Pressure was less than or equal to the active Mode 3 Low Suction Shutdown setpoint for its time delay.

Low Suction Shutdown -- Mode 4 - When running in Mode 4, if the Suction Pressure was less than or equal to the active Mode 4 Low Suction Shutdown setpoint for its time delay.

Low Suction Pressure Sensor Warning - This warning message is issued if the Suction Pressure reading (analog board 1, channel 1) was to the lower or minimum range (out of range) for its sensor.

Low Suction Warning -- Mode 1 - When running in Mode 1, if the Suction Pressure was less than or equal to the active Mode 1 Low Suction Warning setpoint for its time delay.

Low Suction Warning -- Mode 2 - When running in Mode 2, if the Suction Pressure was less than or equal to the active Mode 2 Low Suction Warning setpoint for its time delay.

Low Suction Warning -- Mode 3 - When running in Mode 3, if the Suction Pressure was less than or equal to the active Mode 3 Low Suction Warning setpoint for its time delay.

Low Suction Warning -- Mode 4 - When running in Mode 4, if the Suction Pressure was less than or equal to the active Mode 4 Low Suction Warning setpoint for its time delay.

Low System Disch Pressure Sensor Warning - This warning message is issued if the System Discharge Pressure reading (analog board 1, channel 11) was to the lower or minimum range (out of range) for its sensor.

Low Vyper Coolant Temperature Sensor Warning - This message is issued if the Vyper Coolant Temperature reading was to the lower or minimum range (out of range) for its sensor.

Low Vyper Coolant Temperature Shutdown - This shutdown is issued if the Vyper Coolant Temperature reading was less than or equal to the Vyper Coolant Temperature Shutdown setpoint for its time delay.

Low Vyper Coolant Temperature Warning - This warning is issued if the Vyper Coolant Temperature reading was less than or equal to the Vyper Coolant Temperature Warning setpoint for its time delay.

Manual Stop Shutdown (RCSI only) - Issued when a manual stop of the compressor is issued.

Missing Comp. Oil Pressure Shutdown A - This shutdown will occur if the Oil Pressure (PSIA) is less than the Suction Pressure (PSIA) multiplied by 1.1 and then added to 15.0, then delayed by 2 min.

Missing Comp. Oil Pressure Shutdown B - This shutdown will occur if the Oil Pressure (PSIA) is less than the Suction Pressure (PSIA) added to 15.0, then delayed by 25 sec.

Missing Comp. Oil Pressure Shutdown C - This shutdown will occur if the compressor is running, AND the compressor type is NOT a Recip., AND the pump type is No Pump or Demand Pump, AND the Oil Pressure (PSIA) is less than the Discharge Pressure (PSIA) minus 75 (PSIA) for a delay of 25 sec.

Missing Comp. Oil Pressure Warning - The Oil Pressure (PSIA) is less than the Suction Pressure (PSIA) multiplied by 1.1 and then added to 15.0, then delayed by 25 sec.

Mode 1 Shutdown - When the selected regulation control input for Mode 1 has exceeded its shutdown setpoint for the delay period, a Shutdown occurs.

Mode 1 Warning - When the selected regulation control input for Mode 1 has exceeded its warning setpoint for the delay period, a Warning occurs.

Mode 2 Shutdown - When the selected regulation control input for Mode 2 has exceeded its shutdown setpoint for the delay period, a Shutdown occurs.

Mode 2 Warning - When the selected regulation control input for Mode 2 has exceeded its warning setpoint for the delay period, a Warning occurs.

Mode 3 Shutdown - When the selected regulation control input for Mode 3 has exceeded its shutdown setpoint for the delay period, a Shutdown occurs.

Mode 3 Warning - When the selected regulation control input for Mode 3 has exceeded its warning setpoint for the delay period, a Warning occurs.

Mode 4 Shutdown - When the selected regulation control input for Mode 4 has exceeded its shutdown setpoint for the delay period, a Shutdown occurs.

Mode 4 Warning - When the selected regulation control input for Mode 4 has exceeded its warning setpoint for the delay period, a Warning occurs.

Oil Level Shutdown - The corresponding input module for Low Oil Level (analog board 1, module 13) was de-energized for its delay period.

Oil Log Shutdown - Oil log was enabled and the Compressor has not started and the Oil Pump has already run for the fail delay time.

Oil Pump Auxiliary Failure - While starting the Oil Pump, the Oil Pump Auxiliary input module did not energize within five (5) seconds, or, while the Oil Pump was running, the Oil Pump Auxiliary input module de-energized.

Oil Pump 1 Auxiliary Warning - While starting Oil Pump #1, the Oil Pump #1 Auxiliary input module did not energize within five (5) seconds, or, while this Oil Pump was running, the Oil Pump #1 Auxiliary input module de-energized. This indicates Dual Pump Control and Pump #1 is the lead pump.

Oil Pump 1 Auxiliary Shutdown - While starting Oil Pump #1, the Oil Pump #1 Auxiliary input module did not energize within five (5) seconds, or, while this Oil Pump was running, the Oil Pump #1 Auxiliary input module de-energized. This indicates Dual Pump Control and Pump #1 is the last pump to start.

Oil Pump 2 Auxiliary Warning - While starting Oil Pump #2, the Oil Pump #2 Auxiliary input module did not energize within five (5) seconds, or, while this Oil Pump was running the Oil Pump #2 Auxiliary input module de-energized. This indicates Dual Pump Control and Pump #2 is the lead pump.

Oil Pump 2 Auxiliary Shutdown - While starting Oil Pump #2, the Oil Pump auxiliary input module did not energize within five (5) seconds, or, while the Oil Pump was running, the Oil Pump

auxiliary input module de-energized. This indicates Dual Pump Control and Pump #2 is the last pump to start.

Process Stopped - See Event Log - One of the control program subroutine processes has stopped functioning and a message has been entered into the event log. This is a Warning message.

Remote Stop Shutdown (RCSI only) - Issued when a remote stop of the compressor is performed.

Restart Lockout Shutdown - If the Restart Lockout has been enabled AND power has been off for longer than the Restart Delay time, then issue this at power up of the panel.

Separator Condensing Safety - This warning will be triggered if the Discharge Temperature is less than the Saturated Discharge Temperature plus an adjustable offset for an adjustable delay period.

Separator Condensing Shutdown - If the compressor is running, AND the Discharge Temperature is less than the sum of the Saturated Discharge Temperature plus the value of the Shutdown Offset setpoint for the Delay period, a shutdown will be issued.

Separator Condensing Warning - If the compressor is running, AND the Discharge Temperature is less than the sum of the Saturated Discharge Temperature plus the value of the Warning Offset setpoint for the Delay period, a warning will be issued.

Shunt Trip Activated Warning - This warning will be generated if either the False Running Failure shutdowns (Motor Amps or Confirmed Running) occurs, and the Shunt Trip digital output is configured (board and channel).

SSW Communication Failure Shutdown - Communications with the starter fails and the motors amps are selected to be read through communications.

SSW Communication Failure Warning - Communications with the starter fails and the motor amps are selected to be read from the CT in the starter that is hard wired to the Quantum HD.

SSW - Undercurrent or Phase Loss - The read motor current is less than 20% of the starter's ratings for the delay.

SSW - Undervoltage or Phase Loss - The voltage between phases is less than the nominal motor voltage (P400) less the % of (p600).

SSW - Overvoltage - The voltage between phases is higher than the overvoltage value (% of the nominal voltage parameter) for the delay.

SSW - Undercurrent - The motor current read is less than the nominal motor current (P401) times the undercurrent multiplier (P610)

SSW - Overcurrent - The motor current read is greater than 2x the nominal motor current (p401)

SSW - Current Unbalance - The current of one of the phases is higher or lower than one of the other phases by the allowed % (P614) for the delay (P615).

SSW - Undercurrent Before Bypass - The current at the end of the acceleration ramp is less than 0.1 x the nominal current of the soft starter (parameter P295 x 0.1)

SSW - Locked Rotor - The current at the end of acceleration is not detected be less than 2x the nominal motor current (P401).

SSW - Ground Fault - Ground fault is detected through instantaneous imbalance between supply phases current

SSW - Inverted Phase Sequence - Phases are out of sequence at start-up

SSW - Bypass Contact Closed – The bypass contact will not open

SSW - Motor Overload – The calculated thermal loading of the motor exceed that of the thermal overload rating (P640)

SSW - Undertorque – When the value of the active torque is less than the programmed value (P650) foOr the delay (P651

SSW - Overtorque – When the value of the active torque is greater than the programmed value (P652) for the delay (P653)

SSW - Underpower – When the value of Active power is less than the Programmed value (P660) for the delay (P661).

SSW - Overpower – When the value of Active power is greater than the Programmed value (P662) for the delay (P663).

SSW - Overtemperature In Power Section – The temperature of the starter heatsinks exceeds the limit

SSW - Current Limit Start Timeout – The time to come up to speed exceeds the ramping setpoint (Current Limit start mode only)

SSW - Stall – If the motor current is more than 2x the nominal current just before transition to bypass

SSW - Undervoltage At The Power Supply – The voltage to the controls is less than 93.5vac

SSW - Bypass Contact Open – The bypass contact is detected as open after transition to bypass mode

SSW - Supply Line Frequency Out Of Range – The line frequency is less than 42.5hz or greater than 69Hz for .5 sec

SSW - SCRs In Short Circuit – At start-up a check of the SCRs is made. If detected to be in short circuit, this fault is issued. The “Shunt Trip” output from the starter is activated, shunt-tripping the main circuit breaker in the starter.

SSW - Wrong Motor Connection – Motor is sensed by the starter to be connected in the wrong configuration. EG: Starter is configured as In-Line and motor is connected as Inside Delta.

SSW - Failure In SCR R-U – The SCR was not switched ON or less than 50ohms

SSW - Failure In SCR S-V – The SCR was not switched ON or less than 50ohms

SSW - Failure In SCR T-W – The SCR was not switched ON or less than 50ohms

Start Failure Shutdown For Eng And Turb – The unit has been configured for either an Engine or a Turbine. Once the RUN signal has been initiated, if a RUN condition does not occur (RPM sensor does not sense the Confirmed Running RPM value) before the Maximum Starting Delay (5 min. default) expires, this message will be issued.

Start Failure Shutdown For Eng And Turb – This message may be issued if Engine or Turbine was enabled, and the start delay period to get to a running condition has expired.

Starting Failure - Low Motor Amps – This shutdown message is displayed if after 45 seconds from sending the compressor start signal, the Motor Amps reading is not greater than the Low Motor Amps Shutdown setpoint.

Starting Failure - No Compressor Auxiliary – This shutdown message is displayed if after 45 seconds from sending the compressor start command, the compressor auxiliary input module is still not energized.

VSD - Ambient Temperature Force Unload – Occurs when the Vyper cabinet temperature reaches 135 F and this will unload the Slide Valve.

VSD - Ambient Temperature Inhibit – Occurs when the Vyper cabinet temperature reaches 130 F and this will inhibit the Slide Valve from loading.

VSD Communication Failure Warning – If Vyper™ option is enabled and communications has been lost between the Quantum™ HD and the VSD driver for over five seconds, this warning is shown.

VSD Board NovRAM Failure – The integrity of the NovRAM is verified on every power-up. A known value is written to a specified location in NovRAM, read back from that location, and compared to the value originally written. If the two values do not match, the NovRAM Failure fault is displayed.

VSD Board Motor Current > 15% – This fault occurs whenever the Vyper™ is running and a motor current of less than 10 % FLA is detected for at least twenty-five continuous seconds. This fault is only checked when the Run Acknowledge output is engaged. Therefore, it is NOT checked during STANDBY, which prevents this fault from occurring during STANDBY.

VSD Board Power Supply Fault – The various DC power supplies which power the Board are monitored via hardware located on the Board. If any of these power supplies fall outside their allowable limits, the unit will trip and the Quantum™ HD Panel will display the fault message.

VSD Board Run Signal Fault – This fault occurs if the Run Signal from the Quantum Control Panel is high, but the speed command being sent over the RS-485 communications link is zero. It may also occur if the Run Signal is low, but the speed command is not zero. Both conditions must be present for five seconds before the fault is set, and are only applicable in automatic mode.

VSD Board to Panel Comms Loss – This fault occurs when the Frick Interface Board loses communications from the Quantum™ HD Control Panel, meaning it has not received any data for a period of fifteen seconds. It is only applicable in automatic mode.

VSD Current Imbalance Fault – When the average of the three output phase currents exceeds 80% of the 100% Job FLA, the % Output Current Imbalance is calculated using the following equation:
$$\left[\frac{(I_a - I_{ave}) + (I_b - I_{ave}) + (I_c - I_{ave})}{2 \cdot I_{ave}} \right] \cdot 100$$

$$I_{ave} = \frac{I_a + I_b + I_c}{3}$$
 If the % Imbalance exceeds 30% continuously for 45 seconds the unit shall trip and the Quantum™ HD panel shall display this message. The imbalance fault is disabled when the average of the three output phase currents drops below 80% FLA.

VSD DC Bus Voltage Imbalance Fault – The 1/2 DC link voltage magnitude must remain within ± 88 VDC of the total DC link voltage divided by two for both 60 and 50 Hz VSD's. If the 1/2 DC link magnitude exceeds the ± 88 volt window, the unit will trip and the Quantum™ HD will display this message.

VSD High Converter Heatsink Temp Fault – A thermistor sensor is located behind the last SCR/Diode block on the copper chill plate of the Vyper™ Power Unit. If this thermistor detects a temperature of 170°F (76°C) or higher, a shutdown will occur. The cooling fans and coolant pump on the Vyper™ will continue to run after the shutdown, until the thermistor temperature has dropped to below 160°F (71°C). This shutdown requires a manual reset via the Reset push button on the Vyper™ Logic board.

VSD High DC Bus Voltage Fault – The DC link overvoltage trip level is determined by hardware on the logic board and it is designed to trip the unit at 745 +/- 17 VDC for both 60 and 50 Hz VSD's. If the DC bus current exceeds this level, the unit will trip and the Quantum™ HD Panel will display this message.

VSD High Internal Ambient Temp Fault – The logic board contains a temperature sensor which monitors the unit's internal ambient temperature. The magnitude of the unit's internal temperature is compared to a limit of 145°F. If this limit is exceeded the unit will trip and the Quantum™ HD panel will display this message. The fan(s) and water pump remain energized until the internal temperature drops below 137°F. The fan(s) and water pump will be de-energized when the internal temperature drops below 137°F.

VSD High Inverter Baseplate Temp Fault – A thermistor sensor is located inside the IGBT Module on the Vyper™ power unit. If this thermistor detects a temperature of 175°F (79°C) or higher, a shutdown will occur. The cooling fans and coolant pump on the Vyper™ will continue to run after the shutdown, until the thermistor temperature has dropped to below 165°F (74°C). This shutdown requires a manual reset via the Reset push button on the Vyper™ logic board.

VSD High Phase A Instantaneous Current – Phase A of the output line to the motor is monitored via a current transformer within the drive. The unit's Phase A of instantaneous output current is compared to a prescribed limit which is contained in the hardware. If the peak current limit is exceeded, the unit will trip and the Quantum™ HD Panel will display this message.

VSD High Phase B Instantaneous Current – Phase B of the output line to the motor is monitored via a current transformer within the drive. The unit's Phase B of instantaneous output current is compared to a prescribed limit which is contained in the hardware. If the peak current limit is exceeded, the unit will trip and the Quantum™ HD Panel will display this message.

VSD High Phase C Instantaneous Current – Phase C of the output line to the motor is monitored via a current transformer within the drive. The unit's Phase C of instantaneous output current is compared to a prescribed limit which is contained in the hardware. If the peak current limit is exceeded, the unit will trip and the Quantum™ HD Panel will display this message.

VSD High Phase A Inverter Baseplate Temp – A thermistor sensor is located inside the IGBT Module on the Vyper™ power unit. If this thermistor detects a temperature of 175°F (79°C) or higher of the Phase A Inverter, a shutdown will occur. The cooling fans and coolant pump on the Vyper™ will continue to run after the shutdown, until the thermistor temperature has dropped to below 165°F (74°C). This shutdown requires a manual reset via the Reset push button on the Vyper™ logic board.

VSD High Phase B Inverter Baseplate Temp – A thermistor sensor is located inside the IGBT Module on the Vyper™ power unit. If this thermistor detects a temperature of 175°F (79°C) or higher of the Phase B Inverter, a shutdown will occur. The cooling fans and coolant pump on the Vyper™ will continue to run after the shutdown, until the thermistor temperature has dropped to below 165°F (74°C). This shutdown requires a manual reset via the Reset push button on the Vyper™ logic board.

VSD High Phase C Inverter Baseplate Temp – A thermistor sensor is located inside the IGBT Module on the Vyper™ power unit. If this thermistor detects a temperature of 175°F (79°C) or higher of the Phase C Inverter, a shutdown will occur. The cooling fans and coolant pump on the Vyper™ will continue to run after the shutdown, until the thermistor temperature has dropped to below 165°F (74°C). This shutdown requires a manual reset via the Reset push button on the Vyper™ logic board.

VSD Initialization Fault – At power-up, all the boards go through a process called initialization. At this time, memory lo-

cations are cleared, jumper positions are checked, and serial communications links are established.

VSD Invalid Current Scale Selection – The J1 connector on the Vyper™ Logic board contains jumpers along with wires from the output CTs. Since the part number of the Logic board is the same on all horsepower sizes, the jumpers tell the logic board the size of the Vyper™ being employed in order to properly scale the output current. If the jumper configuration is found by the Logic board to be invalid, the system will be shut down and the above message will be generated.

VSD Logic Board Power Supply Fault – The various DC power supplies which power the Logic Board are monitored via hardware located on the Logic Board. If any of these power supplies fall outside their allowable limits, the unit will trip and the Quantum™ HD Panel will display the fault message.

VSD Logic Board Processor Fault – This shutdown is generated if a communications problem occurs between the two microprocessors on the Vyper™ Logic Board. If this shutdown occurs, replace the Vyper™ Logic board.

VSD Low Converter Heatsink Temp Fault – The phase bank assembly heatsink temperature and the inverter module base plate temperature are compared to a lower limit of 37°F. If the inverter base plate temperature or the converter heat sink temperature falls below 37°F, this message will be displayed. In addition, if both temperatures fall below the 37°F limit, the unit will trip and the fan(s) and water pump will be energized.

VSD Low DC Bus Voltage Fault – The DC link under voltage trip level must be set at 500 VDC for 60 Hz and 414 VDC for 50 Hz VSD's. If the DC link drops below this level, the unit will trip, and the Vyper™ Logic Board will initiate a system shutdown.

VSD Low Inverter Baseplate Temp Fault – The phase bank assembly heatsink temperature and the inverter module base plate temperature are compared to a lower limit of 37°F. If the inverter module base plate temperature falls below this limit the unit will trip and the Quantum™ HD Panel will display this message.

VSD Low Phase A Inverter Baseplate Temp. – The phase A heatsink temperature and the inverter module base plate temperature are compared to a lower limit of 37°F. If the inverter module base plate temperature falls below this limit the unit will trip and the Quantum™ HD Panel will display this message. In addition, if both the inverter and converter temperatures fall below the 37°F limit, the unit will trip and the fan(s) and water pump will be energized.

VSD Low Phase B Inverter Baseplate Temp. – The phase B heatsink temperature and the inverter module base plate temperature are compared to a lower limit of 37°F. If the inverter module base plate temperature falls below this limit the unit will trip and the Quantum™ HD Panel will display this message. In addition, if both the inverter and converter temperatures fall below the 37°F limit, the unit will trip and the fan(s) and water pump will be energized.

VSD Low Phase C Inverter Baseplate Temp. – The phase C heatsink temperature and the inverter module base plate temperature are compared to a lower limit of 37°F. If the inverter module base plate temperature falls below this limit the unit will trip and the Quantum™ HD Panel will display this message. In addition, if both the inverter and converter temperatures fall below the 37°F limit, the unit will trip and the fan(s) and water pump will be energized.

VSD Phase A Gate Driver Fault – The unit’s phase bank assembly shall contain one IGBT gate driver control board. This board monitors the saturation voltage drop across the Phase A Gate Driver while gated on. If the IGBT’s Phase A Gate Driver saturation voltage exceeds the prescribed limit, the gate driver will make the determination that a short circuit is present. This in turn shall cause the unit to trip and the Quantum™ HD Panel shall display this message. If the driver board’s power supply voltage falls below the permissible limit, this same message shall be generated.

VSD Phase B Gate Driver Fault – The unit’s phase bank assembly shall contain one IGBT gate driver control board. This board monitors the saturation voltage drop across the Phase B Gate Driver while gated on. If the IGBT’s Phase B Gate Driver saturation voltage exceeds the prescribed limit, the gate driver will make the determination that a short circuit is present. This in turn shall cause the unit to trip and the Quantum™ HD Panel shall display this message. If the driver board’s power supply voltage falls below the permissible limit, this same message shall be generated.

VSD Phase C Gate Driver Fault – The unit’s phase bank assembly shall contain one IGBT gate driver control board. This board monitors the saturation voltage drop across the Phase C Gate Driver while gated on. If the IGBT’s Phase C Gate Driver saturation voltage exceeds the prescribed limit, the gate driver will make the determination that a short circuit is present. This in turn shall cause the unit to trip and the Quantum™ HD Panel shall display this message. If the driver board’s power supply voltage falls below the permissible limit, this same message shall be generated.

VSD Precharge Lockout Fault – If the Vyper™ fails to meet the precharge criteria, then the precharge circuit will wait for a period of 10 seconds. During this time, the unit’s cooling fans and coolant pump remain energized in order to cool the input SCR’s. Following this 10-second cool-down period, precharge will again be initiated. The unit will attempt to meet the precharge criteria three consecutive times. If the Vyper™ fails to meet the precharge criteria on three consecutive tries, the Vyper™ will shut down, lock out, and display this message. In order to initiate precharge again, the Quantum™ HD panel’s compressor switch must first be placed into the STOP/RESET position.

VSD Precharge - DC Bus Voltage Imbalance – The 1/2 DC link voltage magnitude will remain within ± 88 VDC of the total DC link voltage divided by two during the precharge interval for both the 60 and 50 Hz VSD’s. If not, the Quantum™ HD panel will display this message. The definition for this fault is identical to “VSD - DC Bus Voltage Imbalance”, except that the fault has occurred during the precharge period which begins during prelude.

VSD Precharge - Low DC Bus Voltage 1 – The DC link voltage will reach at least 50 VDC within 100 msec after the precharge relay has been pulled in on the 60 Hz 519 filter and at least 41 VDC within 100 msec on the 50 Hz 519 filter. If not, the Quantum™ HD panel will display this message.

VSD Precharge - Low DC Bus Voltage 2 – The DC link voltage will reach at least 50 VDC within 100 msec after the precharge relay has been pulled in on the 60 Hz 519 filter and at least 41 VDC within 100 msec on the 50 Hz 519 filter. If not, the Quantum™ HD panel will display this message.

VSD Run Signal Fault – Upon receipt of either of the two run commands, a 5-second timer will start. If the missing run signal is not asserted within the 5-second window, the unit will trip and the Quantum™ HD panel will display this message.

VSD Serial Communication Fault – When requesting Status data, the response data from the Vyper™ includes a bit that indicates whether communications were lost from the Frick Interface Board to the Vyper™. If this bit is high for 22 consecutive seconds, this fault occurs. This fault also occurs whenever a receive timeout, or checksum fault is detected on the Vyper™ communications, for twenty continuous seconds. While this fault is active, the Frick Interface Board will send Initialize data requests in order to reestablish the communications link. All serial input data is also cleared.

VSD Single Phase Input Power Fault – The Vyper’s™ SCR Trigger Control board contains circuitry that checks the three-phase mains for the presence of all three line voltages. If all line voltages are not present, the unit will trip and the Quantum™ HD Panel will display this message.

VSD Stop Contacts Fault – This fault occurs if the No Fault signal from the Vyper™ is low. It indicates a fault is present at the Vyper™ or the Harmonic Filter, but the communications data contains no Vyper™ fault data for twenty seconds. The Frick Interface Board will send Initialize data requests while this fault is active.

VSD 105% Motor Current Overload Fault – The Vyper™ Logic Board generates this shutdown by reading the current from the 3 output current transformers. The shutdown is generated when the Vyper™ Logic board has detected that the highest of the three output phase currents has exceeded 105% of the programmed 100% full load amps (FLA) value for more than 40 seconds. If this is detected, the unit will trip and the Quantum™ HD panel will display the fault message.

Vyper™ Coolant Low Temperature Warning – The temperature reading for the Vyper Coolant temperature was less than or equal to this setpoint for its time delay.

Vyper™ Coolant Low Temperature Shutdown – The temperature reading for the Vyper Coolant temperature was less than or equal to this setpoint for its time delay.

Vyper™ Coolant High Temperature Warning – The temperature reading for the Vyper Coolant temperature was greater than or equal to this setpoint for its time delay.

Vyper™ Coolant High Temperature Shutdown – The temperature reading for the Vyper Coolant temperature was greater than or equal to this setpoint for its time delay.

Vyper™ Fault Limit Reached Shutdown – The Vyper™ Logic Board generates faults as they occur. If these faults are not of a potentially destructive nature, they are automatically cleared by the Vyper™ logic if the symptom that created the fault corrects itself. The Quantum™ control tracks these self-clearing faults, and if a total of five faults occur within a one hour period of time, a compressor shutdown will occur.


SECTION 5 APPENDIX

OIL SAFETY LOGIC

Part 1: Missing Oil Pressure

No Pump or Demand Pump

(All pressure calculations are in PSIA)

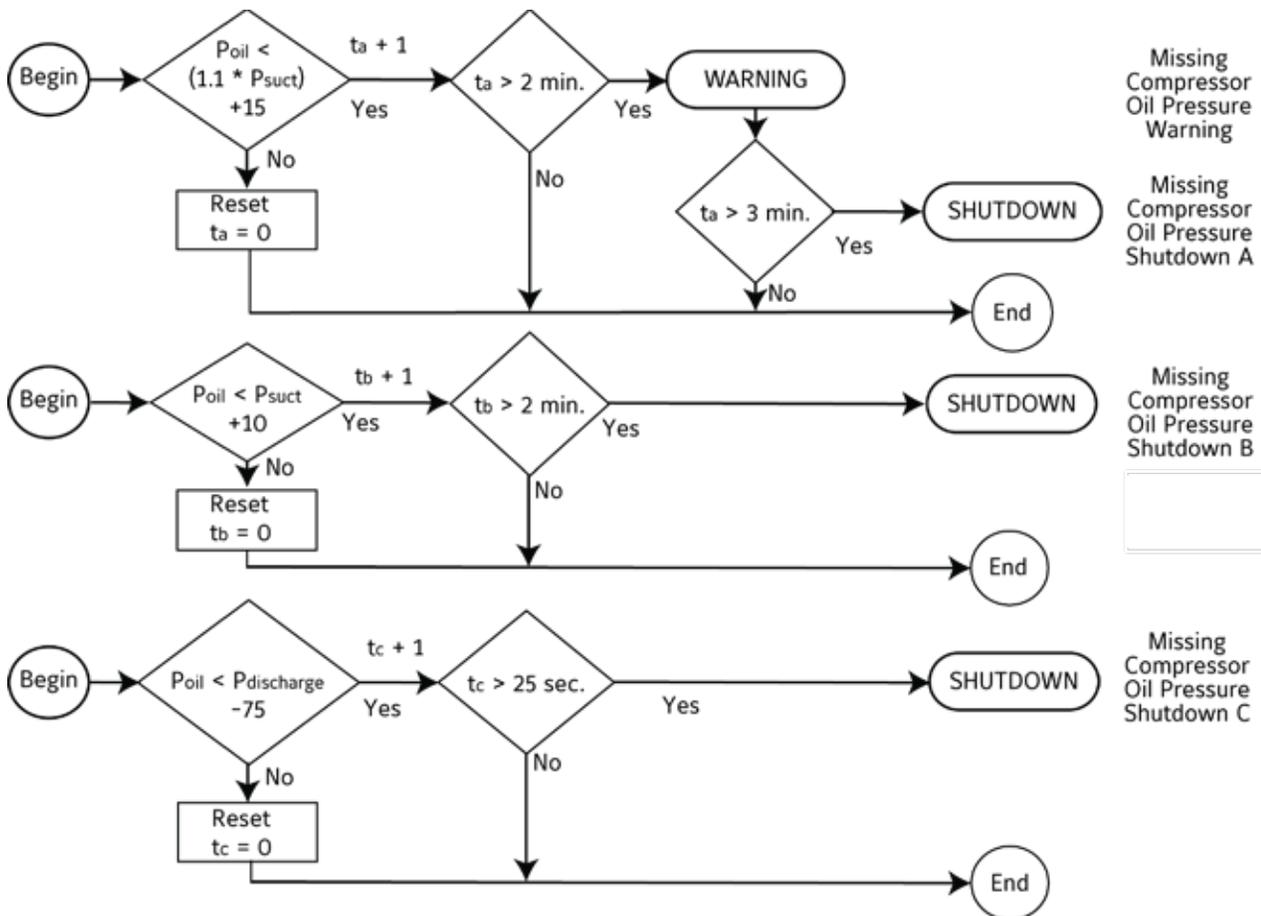


OIL SAFETY LOGIC



Part 2: Insufficient Main Oil Pressure During Low Differential

No Pump or Demand Pump



(All pressure calculations are in PSIA)

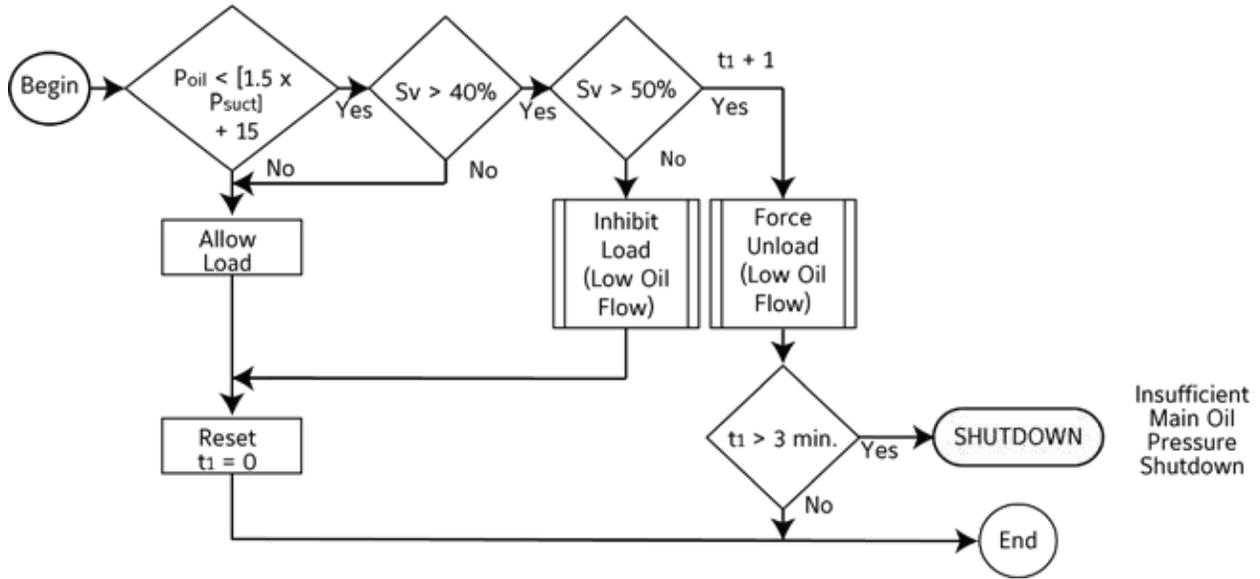



OIL SAFETY LOGIC
Part 3: Oil Circuit Pressure Drop
No Pump or Demand Pump
(All pressure calculations are in PSIA)

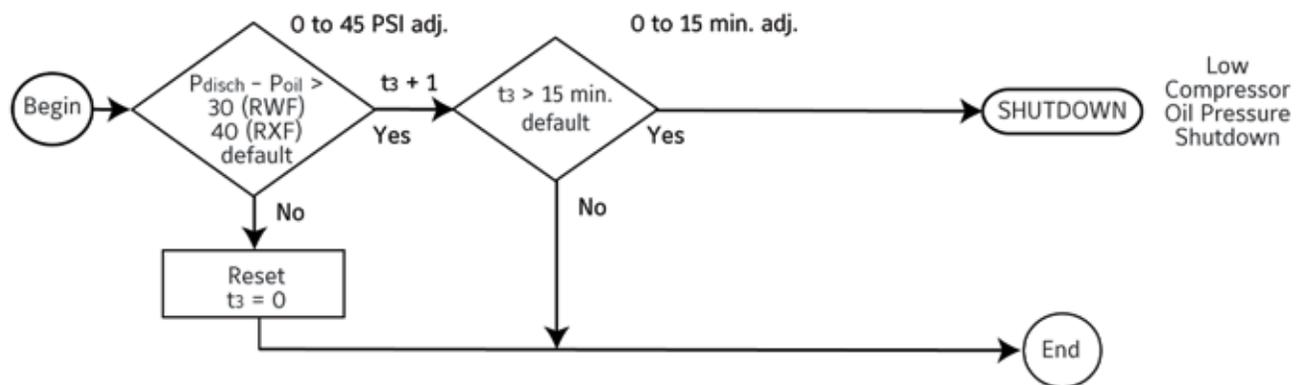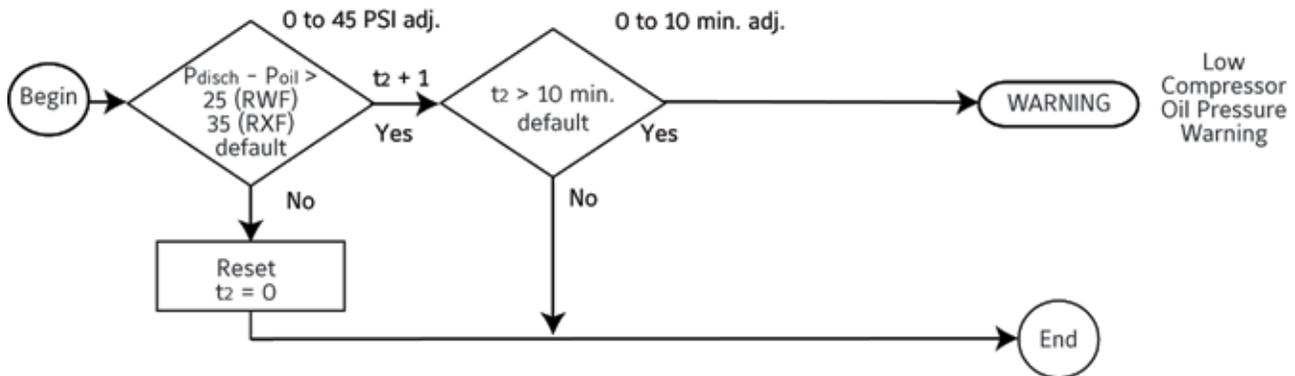

Demand Pump (With Pump On)
(All pressure calculations are in PSIA)

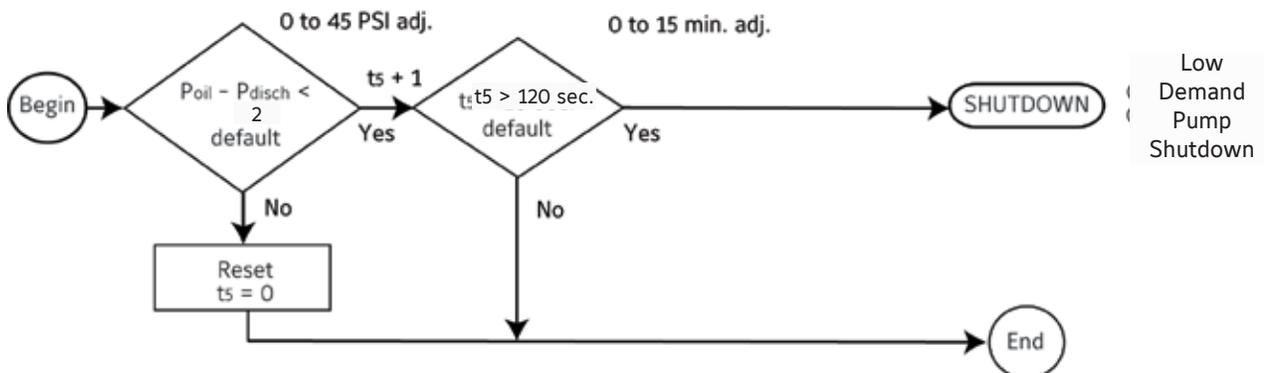
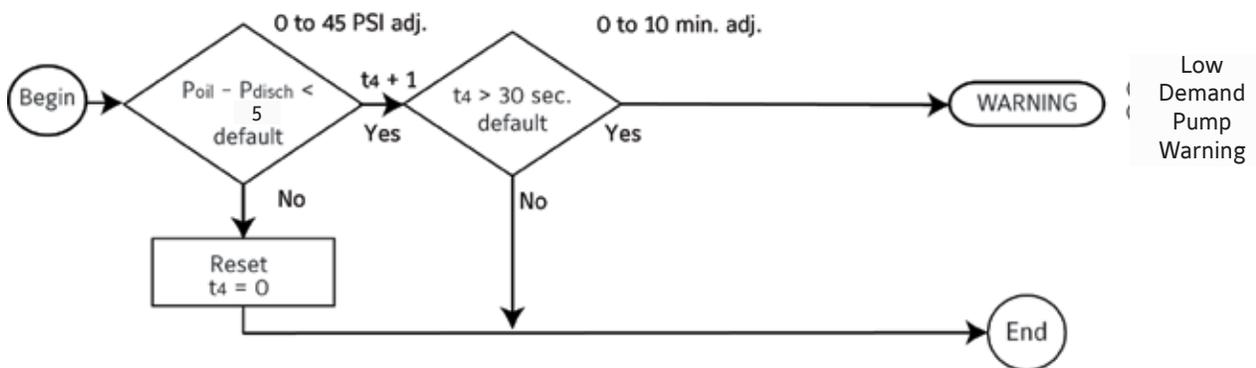


Full Time Pump (Frick Compressor Only)
(All pressure calculations are in PSIA)

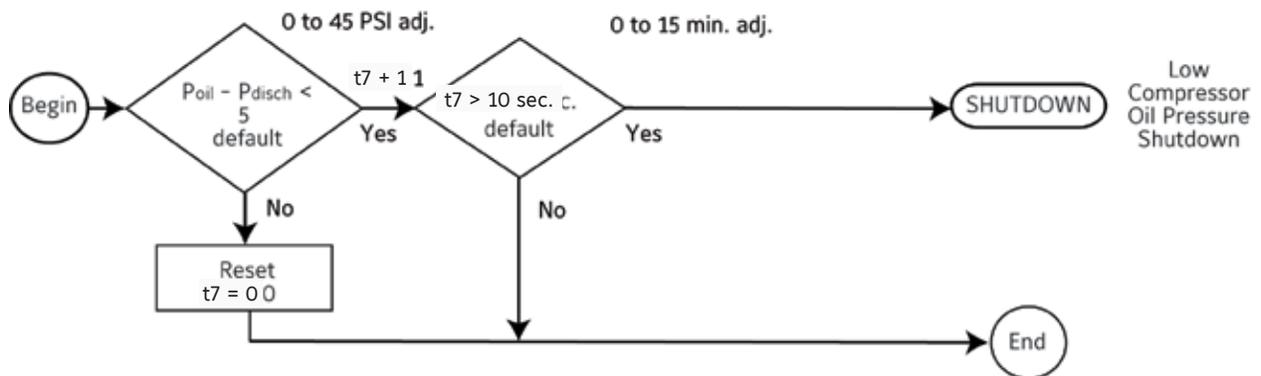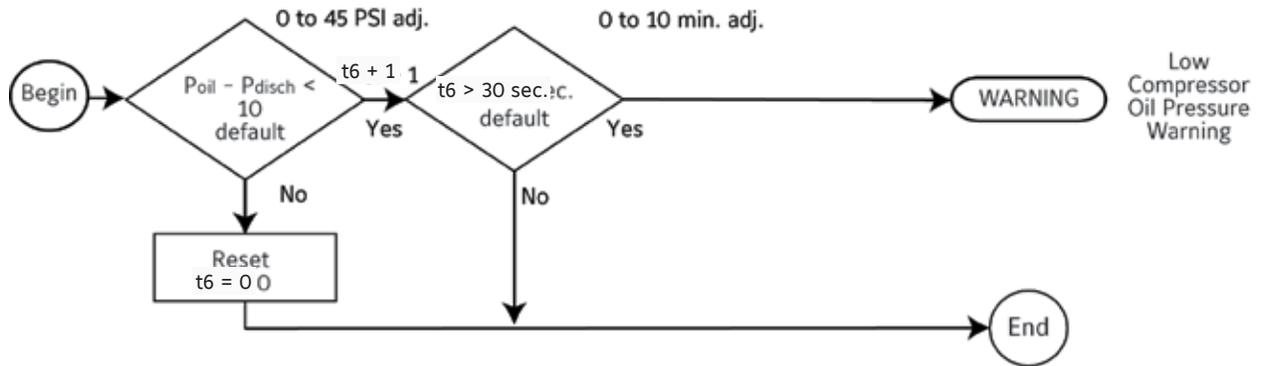

OIL SAFETY LOGIC

Part 4: Oil Pressure Filter Drop
Filter Selection: Filter - Oil
(All pressure calculations are in PSIA)

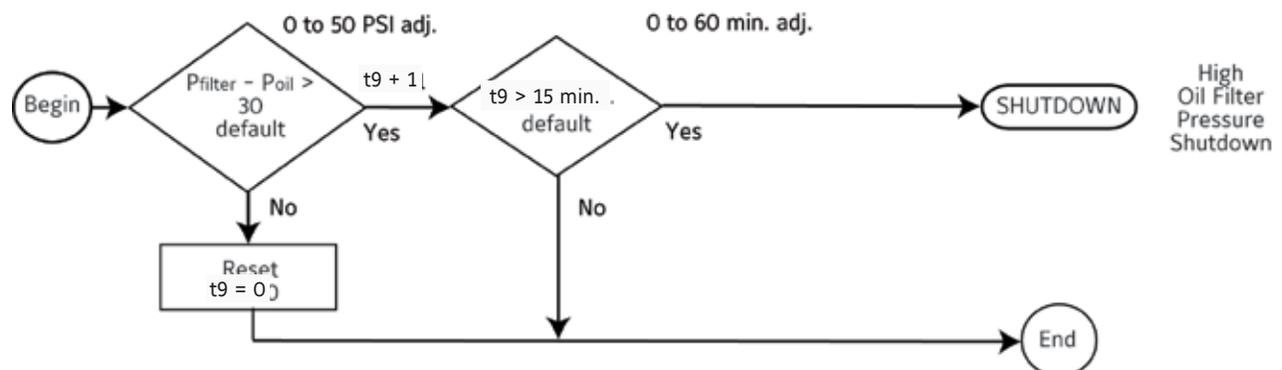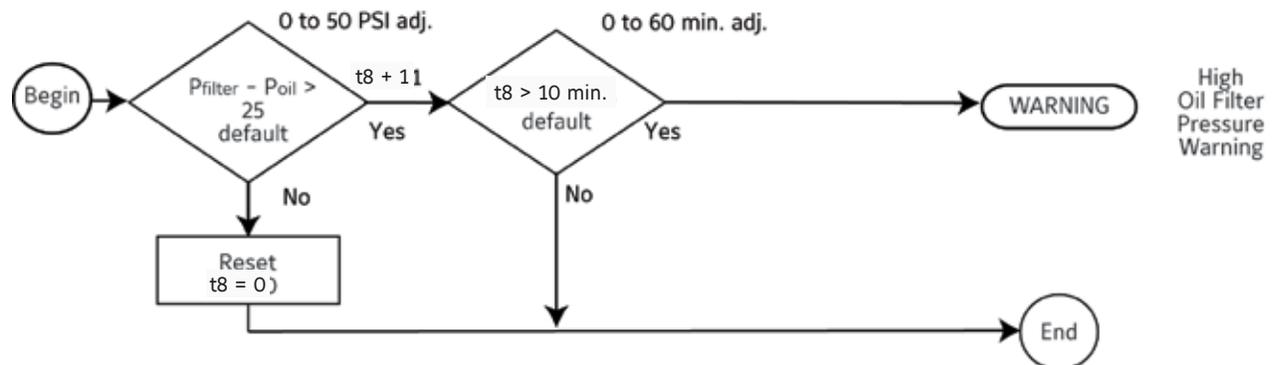


Note: Only when filter pressure transducer is available

OIL PUMP STARTING LOGIC

No Pump

Differential Pressure = Discharge - Oil
Slide Valve Setpoint = Highest Allowable Slide Valve position to start (10% default).
Pump Status Pump is Off
A is from the main program loop **B** is to the main program loop

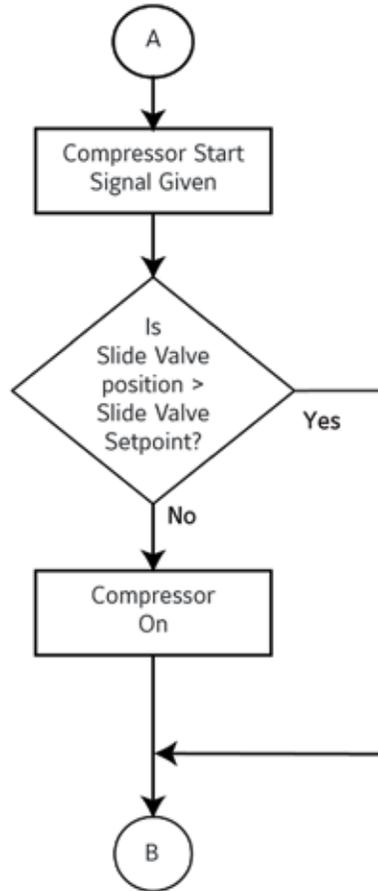

April 2018 Form Revisions

- p.9 - Updated menu heirarchy with SSW page
- p.67 - Added SSW configuration information
- p.114 - Added SSW faults information

- Updated Q5 comments to add Q6 verbiage throughout

OIL PUMP STARTING LOGIC

Full Time Pump

(Frick compressor only)

(All pressure calculations are in PSIA)

Key


Differential Pressure = Oil - Discharge

Slide Valve Setpoint = Highest Allowable Slide Valve position to start (10% default).

Pump Status = Pump is On

A is from the main program loop

B is to the main program loop

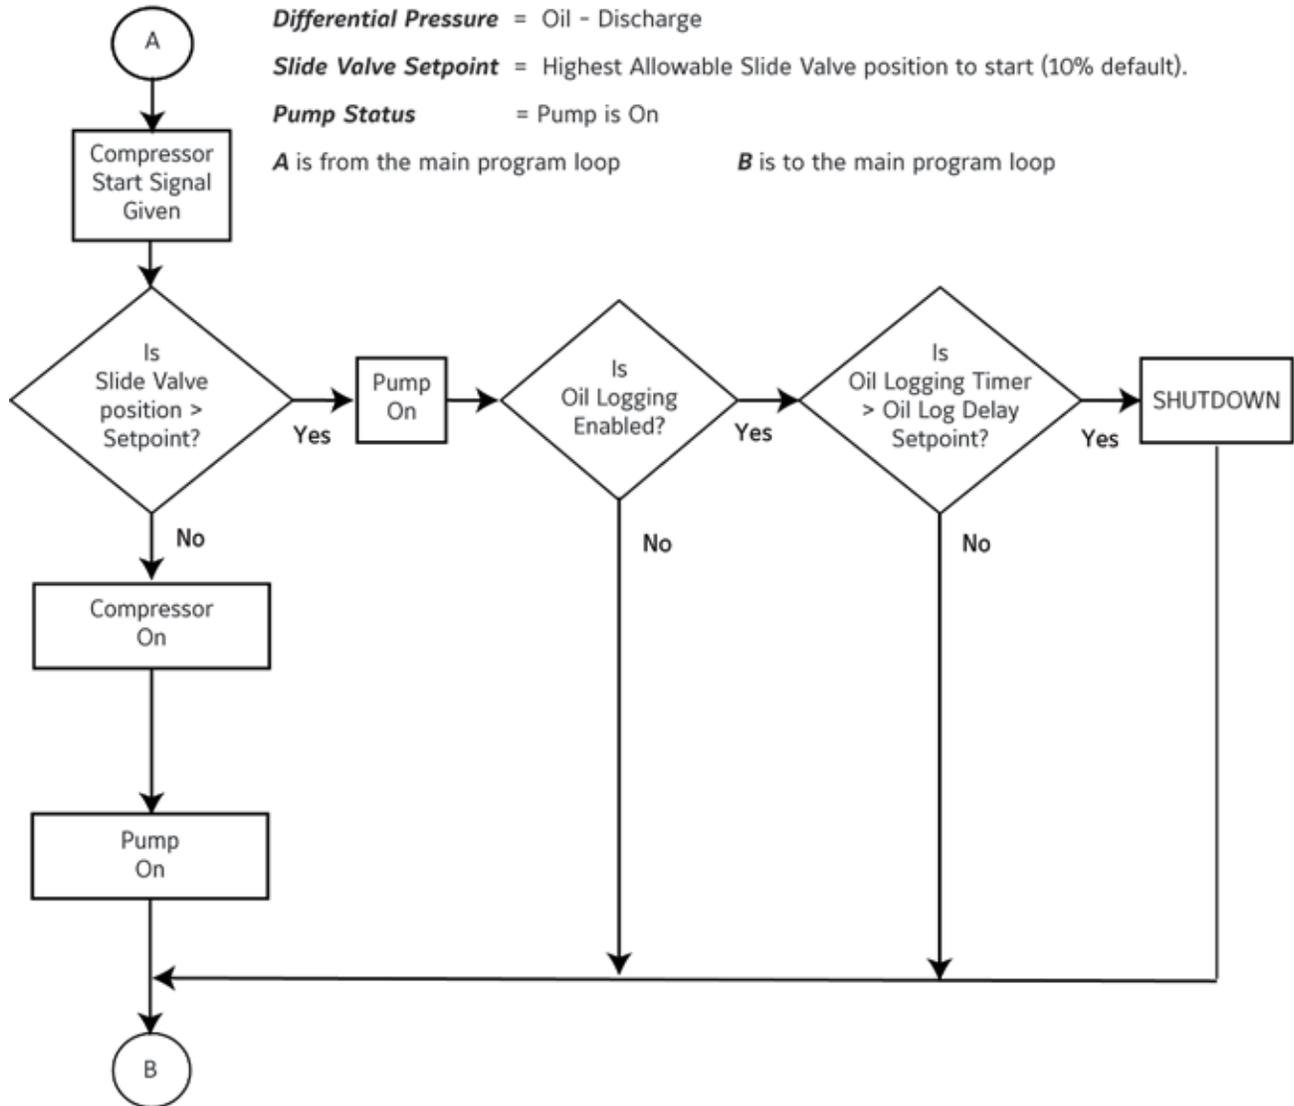


NOTE: If one of the Other Manufacturer Compressor types, then the Oil Pump must raise the Oil Pressure per the following calculation before the compressor can start:

$$Poil - Pdisch > (\text{Low Oil Pressure shutdown} + 10 \text{ PSI})$$

If the above calculation is true for 5 seconds, the compressor can start.


OIL PUMP STARTING LOGIC Demand Pump

(All pressure calculations are in PSIA)

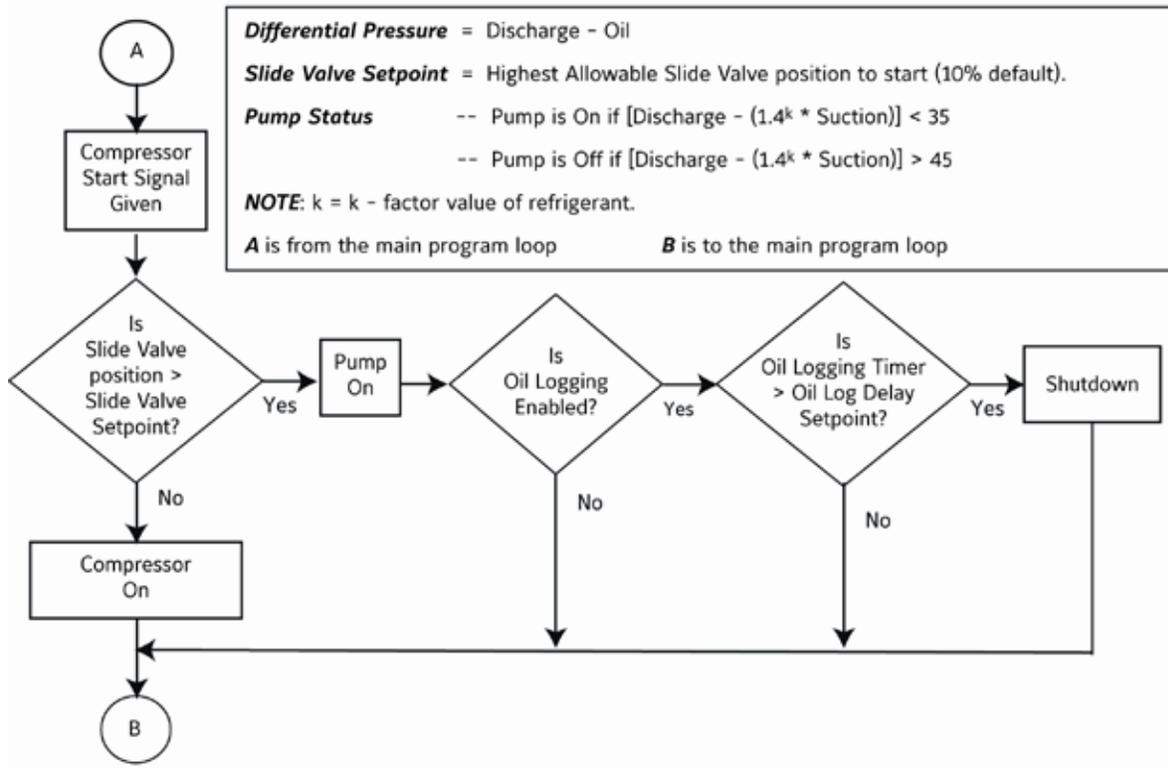

OIL PUMP RUNNING LOGIC Demand Pump

(All pressure calculations are in PSIA)

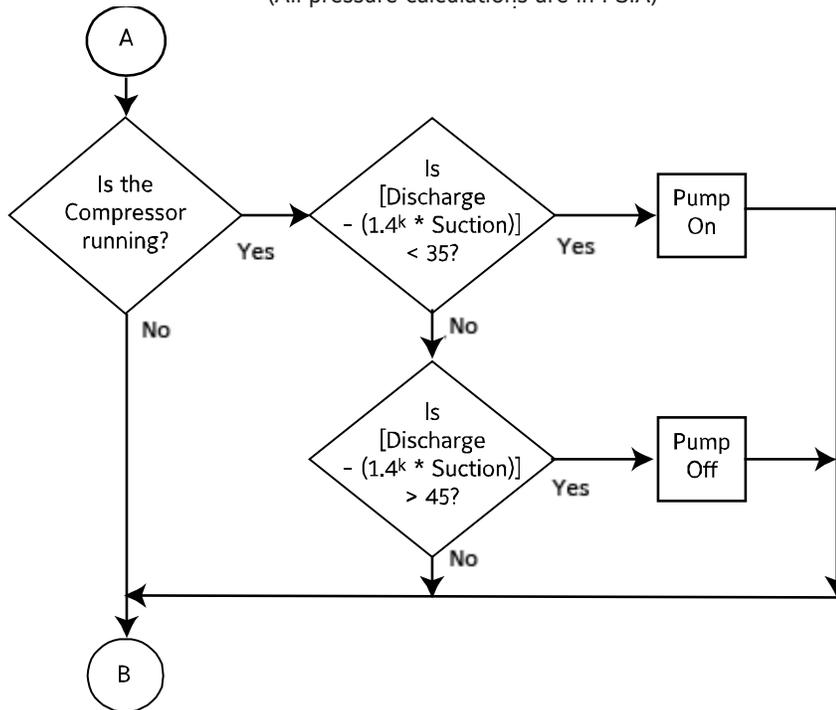

Apr. 2018
form revisions
found on
page 122.